



## INSTALLATION INSTRUCTIONS

300 W. Pontiac Way Clovis, CA 93612 toll free: 1-800-595-7016 web: [www.stsuspensions.com](http://www.stsuspensions.com)

### 51085 REAR ANTI SWAY BAR 79-83 DATSUN 280Z

**Thank you for being selective enough to choose our high quality SUSPENSION TECHNIQUES PRODUCT. We have spent many hours developing out line of products so that you will receive maximum performance with minimum difficulty during installation.**

- Note: Confirm that all of the hardware listed in the parts list is in the kit. **Do not** begin installation if any part is missing. Read the instructions thoroughly before beginning this installation.
- Warning:** **DO NOT** work under a vehicle supported by only a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.
- Warning:** **DO NOT** drive vehicle until all work has been completed and checked. Torque all hardware to values specified.
- Reminder: Proper use of safety equipment and eye/face/hand protection is absolutely necessary when using these tools to perform procedures!
- Note: It is very helpful to have an assistant available during installation.

#### **RECOMMENDED TOOLS:**

- Properly rated floor jack, support stands, and wheel chocks
- Combination wrench set
- Ratcheting socket wrench and socket set
- Safety Glasses

**Note: It is very helpful to have an assistant available during installation.**

**SAFETY REMINDER:** PROPER USE OF SAFETY EQUIPMENT AND EYE/FACE/HAND PROTECTION IS ABSOLUTELY NECESSARY WHEN USING THESE TOOLS TO PERFORM PROCEDURES!

#### **KIT INSTALLATION**

1. Open the hardware kit and remove all of the contents. Refer to the part list (Page 3) to verify that all parts are present.
2. Park the vehicle on a smooth, level concrete or seasoned asphalt surface and activate the parking brake. Block the FRONT wheels of the vehicle with appropriate wheel chocks; making sure the vehicle's transmission is in 1<sup>st</sup> gear (manual) or "Park" (automatic).
3. Using a properly rated floor jack, lift the rear wheels of the vehicle off the ground. Place support stands, rated for the vehicle's weight, and in the factory specified locations. Refer to the vehicle Owner's Manual. Prior to lowering the vehicle onto the stands, make sure the supports will securely contact the chassis.

4. It is very important that the vehicle is properly supported during this installation to prevent personal injury and chassis damage! Make sure that the supports stands are properly placed prior to performing the following procedures. We **DO NOT RECOMMEND** using wheel ramps while performing this installation.
5. Slowly lower the vehicle onto the stands and, before placing the vehicle's entire weight on them, again check that they properly and securely contact the chassis as described above. Check for possible interference with any lines, wires, cables, or other easily damaged components.
6. Remove the original rear Anti-Sway Bar from the vehicle. The new Suspension Techniques Anti-Sway Bar kit will replace the pivot bushings, pivot brackets only.
7. Thoroughly lubricate the **inside** of your new hyper thane bushings using a high grade lithium or silicone based grease with molybdenum disulfide (moly). Place the bushings onto the new Anti-Sway Bar. Refer to the original equipment Anti-Sway Bar as to the proper bushing location.
8. Position your new Suspension Techniques Anti-Sway Bar on the vehicle in the original equipment location and secure it with the original equipment bushing brackets and bolts. Tighten the bolt to approximately 18 ft/lbs of torque.
9. Assemble the end links as shown in the diagram, using the hardware supplied in the kit. Tighten the assembly until the grommets begin to bulge, but **do not** crush them.
10. All hardware being fastened to the vehicle's original fastening points should be torqued to the proper specifications. To prevent chassis damage, never over-torque the hardware.
11. Attach the stock end links to the new Anti-Sway Bar, tighten end link to 20ft. lbs.
12. Check that all components and fasteners have been properly installed, tightened and torqued.
13. Check brake hoses, and other components for any possible interference.
14. Lift vehicle and remove support stands. Carefully lower vehicle to ground.
15. Immediately test-drive the vehicle in a remote location so that you can become accustomed to the revised driving characteristics and handling. Be aware that the vehicle will handle substantially different now that it has been modified.
16. Installation is complete. Check all of the hardware and re-torque at intervals for the first 10, 100, 1000 miles.
17. We highly recommend installing the appropriate matching Suspension Techniques front Anti-Sway Bar to maintain proper handling characteristics and performance. See the current Suspension Techniques Application Guide or contact you nearest Suspension Techniques Dealer for the appropriate part number for your application.


## PART LIST FOR ANTI-SWAY BAR KIT

Part Number	Quantity	Description
51085-300	1	Rear ASB
51080-020	2	Pivot Bushings 7/8"
113000	8	End Link Grommets
110255	2	3/8"-16 Ny Lock Nut
112140	2	3/8"-16 x 7.0" HHCS
112502	8	Cupped Washer Large
112422	2	Spacer Tube
55000-10	1	Grease Pack

### ! SUSPENSION TECHNIQUES INSTALLATION TIPS

#### LUBRICATION

Pre-lubricating the inside of the bushing before it's installed is important because the lubrication will greatly reduce noise and it will increase bushing life. Suspension Techniques recommends you use Molybdenum disulfide. This will help protect the inside surface of the bushing and will last longer than most types of grease. Thoroughly lubricate the inside of the bushing with this grease.

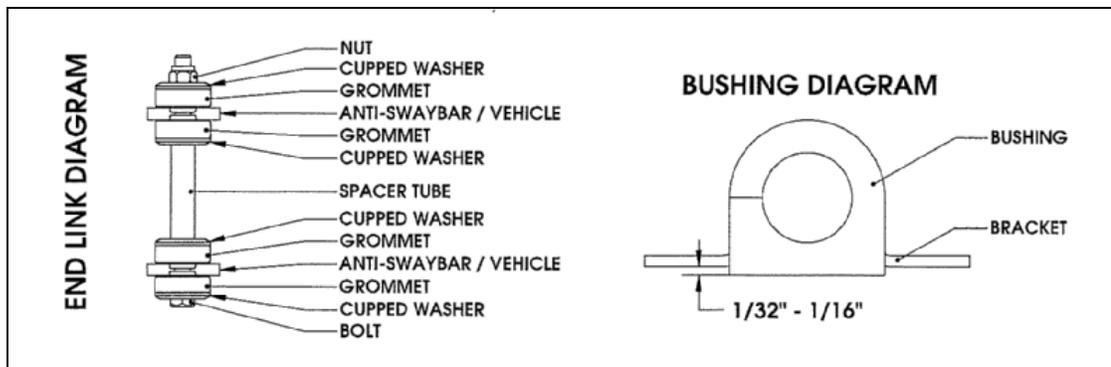

#### BUSHING INSTALLATION

Make sure an amount of 1/32" to 1/16" of the bushing is showing when you install it onto the bracket. See the diagram above. If the bushing is showing more than 1/16" than use a sander or a sheet of coarse grit sand paper to shave it down to the proper height. In most applications when installing the new bushings on your Suspension Techniques Anti-Sway Bar you may refer to your original equipment Anti-Sway Bar to locate the proper location.

#### END LINK INSTALLATION

It is not required that you use lubricant on the end links since there is no rotational movement. The Suspension Techniques end links are comprised of grommets, cupped washers, a spacer tube, bolt, and lock nut, these assembled components create the end link. See END LINK DIAGRAM above.