



EINBAUHINWEISE

INSTALLATION INSTRUCTIONS

FÜR JEDEN ANSPRUCH DAS RICHTIGE FAHRWERK.

KW automotive GmbH
Aspachweg 14
74427 Fichtenberg
Telefon: +49 7971 9630 - 0
Telefax: +49 7971 9630 - 191



Entsorgungshinweise/ Disposal information



Stoßdämpfer

Stoßdämpfer nicht öffnen, nicht erhitzen.

→ Begründung: Gehäuse kann platzen, Öl kann auslaufen, Dämpfer steht unter Druck

Stoßdämpfer nicht achtlos wegwerfen, nicht im Hausmüll entsorgen.

→ Begründung: Stoßdämpfer enthalten Mineralöl, dieses Mineralöl verursacht schwere Umweltschäden im Erdreich, Grundwasser oder in Gewässern. Entsorgung nur über Rohstoffhandel, Recyclinghof oder eine Fachwerkstatt.

Federn und Zubehör

Federn

→ Entsorgung im Stahl- oder Mischschrött

Höhenverstellungen, Federteller (nicht aus Kunststoff)

→ Entsorgung im Mischschrött

Federteller, Zwischenringe (aus Kunststoff)

→ Entsorgung im Plastikmüll

Schrauben, Muttern, Stabstangen, Domlager

→ Entsorgung im Mischschrött

Steuergeräte, Stilllegungen

→ Entsorgung im Elektroschrött

Verpackung

Karton

→ Entsorgung im Papiermüll

Verpackungsschaum, Inletts, Umreifungsband

→ Entsorgung im Plastikmüll



Shock absorbers

Do not open or heat up the shock absorbers.

→ Reason: Housing can burst, oil can leak, the shock absorber is under pressure

Do not throw away shock absorbers carelessly, do not dispose them in household waste.

→ Reason: Shock absorbers contain mineral oil. Mineral oil causes serious environmental damage to soil, groundwater, or waters. Disposal only via raw materials trading, recycling centers or specialist garage.

Springs and Additions

Springs

→ Disposal in steel or mixed scrap

Height adjusters, spring plates (not made of plastic)

→ Disposal in mixed scrap

Spring plates, spacer rings (made of plastic)

→ Disposal in plastic waste

Screws, nuts, tie rods, strut bearings

→ Disposal in mixed scrap

Control units, Cancellation Kits

→ Disposal in electronic waste

Packaging

Carton

→ Disposal in paper waste

Packaging foam, Inlets, Plastic strap

→ Disposal in plastic waste

KW automotive

685 11 079
EINBAUHINWEISE
Elektronik Satz

685 11 079
INSTALLATION INSTRUCTIONS
Cancellation kit

Vorderachse/ Front axle:



Stilllegung am Halter mit je 2x Kabelbinder befestigen. Danach den Halter inkl. der Stilllegung am Federbein ankleben und mit 2 Kabelbindern sichern. **WICHTIG: Klebefläche muss Staub- und Fettfrei sein.** Originale Dämpfersteuerungsleitung einstecken und die Leitungen mit einem Kabelbinder befestigen. Auf die korrekte Verriegelung des Steckers achten!

Fix the canceller device to the holder and secure it with two cable ties. Then fix the holder including the canceller device to the shock absorber and secure it with 2 cable ties. **Adherend must be cleaned and degreased.** Plug in the original damper control cable and secure the cables with one cable tie. Make sure the plug is locked correctly!



Klebeband auf den Halter ankleben. **WICHTIG: Klebefläche muss Staub- und Fettfrei sein.**

Fix the tape on the holder. **Adherend must be cleaned and degreased.**

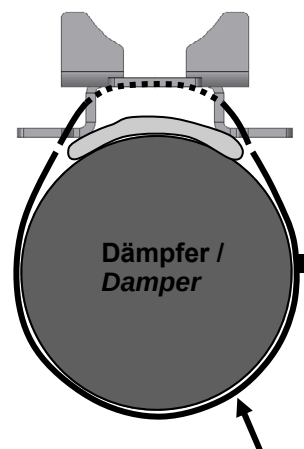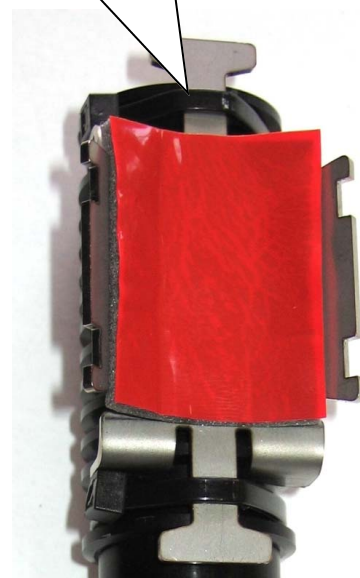

Kabelbinder / Cable ties

Stilllegung muss in Richtung Fahrzeugheckseite zeigen.

Mount the canceller facing to the rear of the vehicle as shown on the picture.

Hinterachse/ Rear axle:

Stilllegung am Halter mit je 2x Kabelbinder befestigen. Danach den Halter inkl. der Stilllegung am Dämpfer ankleben und mit 2 Kabelbindern sichern. **WICHTIG: Klebefläche muss Staub- und Fettfrei sein.** Originale Dämpfersteuerungsleitung einstecken und die Leitungen mit einem Kabelbinder befestigen. Auf die korrekte Verriegelung des Steckers achten!

Fix the canceller device to the holder and secure it with two cable ties. Then fix the holder including the canceller device to the shock absorber and secure it with 2 cable ties. **Adherend must be cleaned and degreased.** Plug in the original damper control cable and secure the cables with one cable tie. Make sure the plug is locked correctly!





Stilllegung muss in Richtung Fahrzeugaußenseite zeigen.

Mount the canceller facing to the outside of the vehicle as shown on the picture.

Klebeband auf den Halter ankleben. **WICHTIG: Klebefläche muss Staub- und Fettfrei sein.**

Fix the tape on the holder. **Adherend must be cleaned and degreased.**

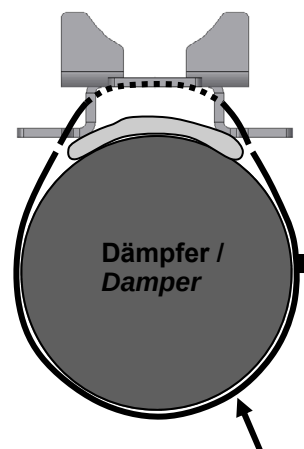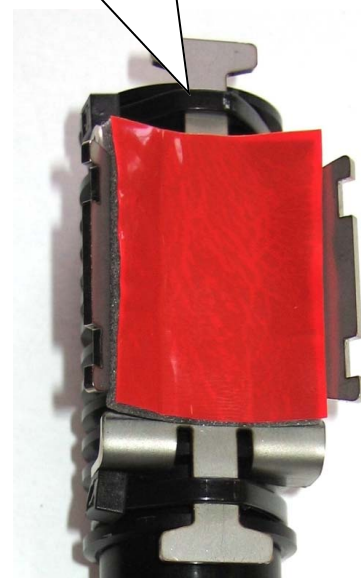

Kabelbinder / Cable ties