



Single Row LED Light Bar



Part No: 5SRSF, 9SRSCM, 20SRSCM, 30SRSCM



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



60 min



support@trailfx.com



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.




1 866 638 4870

PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Light Bar	1	Bottom Bracket
1	Wiring Harness & Switch	1	M8 Bolt and Nut
2	Side Brackets	1	M6 Bolt and Nut
4	M8 Bolts and Nuts	1	Shock Proof Pad
4	M8 Shims	1	Scratch Proof Liner



LIGHT BAR

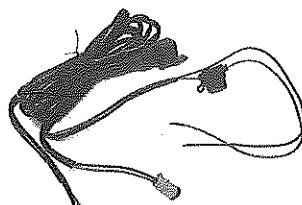

WIRING HARNESS



SWITCH



MOUNTING KIT

LIGHT INSTALLATION:

1. Install supplied brackets to light bar using M8 bolts and lock washers.
2. Identify the desired mounting location for the lights on the vehicle. Place light bar and mark bracket hole locations on vehicle (If mounting hole requires drilling).
3. If mounting holes requires drilling, drill 1/4" holes in locations marked.
4. Place rubber pad between bracket and vehicle; mount using 2 M8 bolts and M8 nuts. Once light bar is in desired location tighten all hardware.

1. Remove wiring harness and switch from kit.
2. Route wiring harness so that the red and black power cables are routed to the 12V battery, the three switch wires are routed to your desired switch location, and the Deutsch plug(s) is routed to the light. **(Keep wiring away from anything that will get hot).**
3. Mount relay with desired hardware in a position under hood or in cab that is limited to water exposure.
4. Plug male (on the wiring harness) and female (on light) Deutsch plug(s) connectors together.
5. Drill $\frac{3}{4}$ " hole in desired switch mounting location. Verify there will be enough clearance behind switch to plug in the wires. Notch a small slit in the side of the hole using a file. This will keep the switch from turning.
6. Press switch into hole; verify that the notch made in step 5 lines up with the notch on the switch.
7. Plug wires into switch. Prongs on switch will be marked 1 through 3. **White** wire goes to **prong 1**, **Blue** wire goes to **Prong 2**, and the **Black** wire goes to **prong 3** (gold prong).
*NOTE – If switch wire does not include a blue wire – proceed with connecting **White** and **Black** wires as described above.
8. Attach power cable to the battery. **Red** goes to **positive** and **black** goes to **negative**.

- Complete periodic inspections to the installation to make sure that all hardware is secure and tight.
- Never use a caustic or petroleum-based cleaner on any surface of the light.
- For best cleaning results, always use household glass cleaner or mild soap with a soft lint free rag.

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.