

TrailFX Drop Down Step Part No. DHS010B / DHS011B

Product image

Fits: F-150 SuperCrew 2015-2019; F-250 / 350 SuperCrew 2017-2019 F-150 SuperCab 2015-2019; F-250 / 350 SuperCab 2017-2019



TO AVOID BEING SCRATCHED, PLEASE PROTECT THE SURFACE OF THE TAILGATE VENT COVER CAREFULLY.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



ALIGN THE STEP BARS AS DESIRED AND TIGHTEN ALL M10 FASTENERS TO 30 ft. - lbs., AND THE M8 FASTENERS TO 15 ft.-lbs.







60 min

Cutting Not Required

Drilling Not Required



support@trailfx.com




1 866 638 4870



POLISHED STAINLESS STEEL – LIMITED LIFETIME POWDER COATED BLACK – 3 YEARS


PARTS LIST:		
Qty	Part Description	Tools Needed
1	Step Bar Driver Side	13 MM SOCKET & WRENCH
1	Step Bar Passenger Side	14 MM SOCKET & WRENCH
2	Front Mounting Bracket	15 MM SOCKET & WRENCH
4/2	Center and Rear Mounting Bracket	RATCHET
6/4	Support Bracket	TORQUE WRENCH
18/12	M8 Plastic Retainer	
24/16	M8 Nut	
24/16	M8 Lock Washer	
24/16	M8 Flat Washer	
6/4	M8 Square Neck Bolt	
12/8	M10 Flange Bolt	
12/8	M10 Flange Nut	
	1 2 4/2 6/4 18/12 24/16 24/16 24/16 6/4 12/8	QtyPart Description1Step Bar Driver Side1Step Bar Passenger Side2Front Mounting Bracket4/2Center and Rear Mounting Bracket6/4Support Bracket18/12M8 Plastic Retainer24/16M8 Nut24/16M8 Lock Washer24/16M8 Flat Washer6/4M8 Square Neck Bolt12/8M10 Flange Bolt


SMALLER QUANTITIES FOR SUPERCAB APPLICATIONS

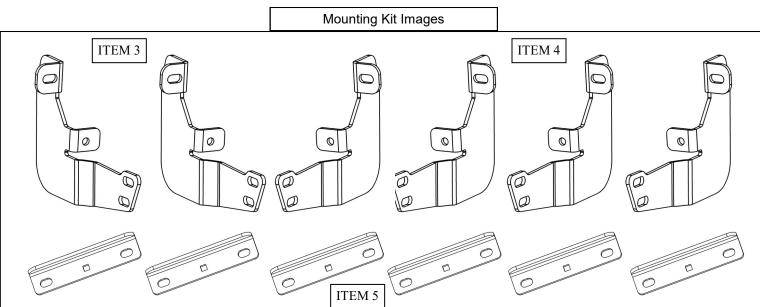


Page 1 of 5 Rev A 032320


INSTALLATION PROCEDURE

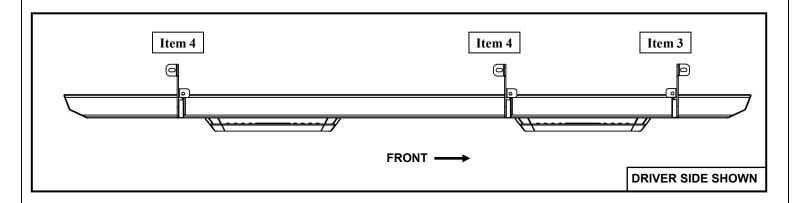

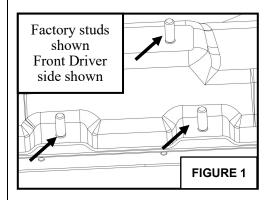

- 1. Start at the front driver side of vehicle and locate the factory studs. Grab (3) Plastic retainers and thread on to the factory studs. See **Figure 1 & 2**.
- 2. Repeat for center and rear locations.
- 3. Repeat for passenger side

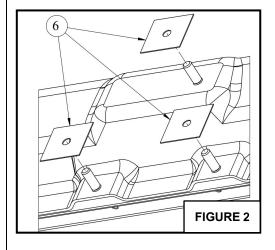


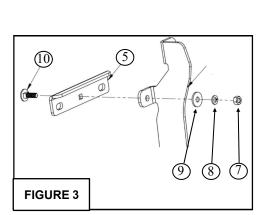


- 4. Grab a support bracket and loosely install to mount bracket with (1) M8 Square Neck Bolt, (1) M8 Flat Washer, (1) M8 Lock Washer, (1) M8 Hex Nut. See **Figure 3**.
- 5. Repeat for the other 5 brackets.

Page 2 of 5 Rev A 032320

INSTALLATION PROCEDURE

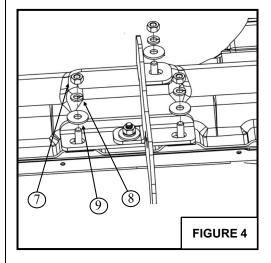

- 6. Start at the front driver side of vehicle and grab Front Mount Bracket. Use (3) M8 flat washer, and (3) M8 lock washer, and (3) M8 hex nuts to loosely mount bracket to the rocker panel. See **Figure 4**.
- 7. Repeat for center and rear locations.
- 8. Repeat for passenger side

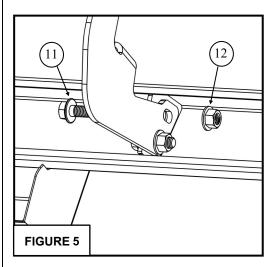

- 9. Grab Driver Side Bar and loosely install to mount brackets with (6) M10 Flange bolts and (6) Serrated Flange Nuts. See **Figure 5**.
- 10. Repeat for passenger side.

Page 3 of 5 Rev A 032320



Page 4 of 5 Rev A 032320

PRODUCT CARE

- 1. Periodically check the product to ensure all fasteners are tight and components are intact.
- 2. Mild soap may be used to clean the product.

FAQ's

1. Mounting bracket are not getting Installed properly.

In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.

2. Products are thumping / rattling after installation.

Please ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.

3. Missing / Excess Hardware.

Recheck hardware count as per the part list.

4. Product not installing properly.

Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.

Check out these other TrailFX Products!!













Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.

Page 5 of 5 Rev A 032320