



Assembly, Installation, Operation and  
Maintenance Instructions  
**Bedliner & Tailgate Cover Kit**

**Part Number:  
RLIK54**

**Install Time:  
60 minutes**

**WARNING:** PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

**APPLICATION:** *For use with various Chevrolet/GMC vehicles*

**Parts List:**

Description	Qty
Flat Washers	8

**Tools Required**

Philips Screwdriver	
Torx Driver T15	
T15 Torx Bit	
2" Hole Saw	

**Care and Maintenance:** To protect the finish of this product, clean with soap and water. Do not use abrasive substances.



**Part Number: RLIK54**



**Missing Parts – Contact TrailFX at**

1(866) 638-4870 or [support@trailfx.com](mailto:support@trailfx.com)



Any required parts will be shipped to you  
directly – DO NOT return whole kit to  
store!

**INSTALLATION PROCEDURE (OPTIONAL):**

**For trucks with removable upper tie-downs**  
**BEFORE** you install the bedliner into the truck bed.  
**Locate the dimples for the desired tie-down locations**

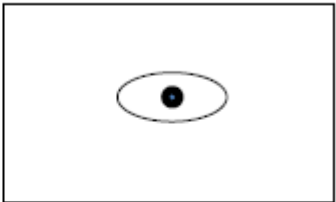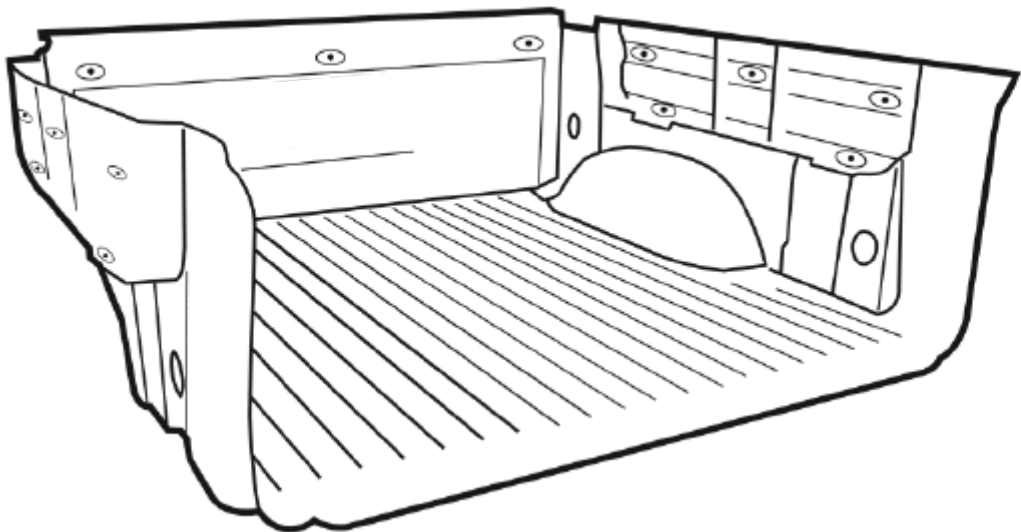

**Drill a 2” round hole**

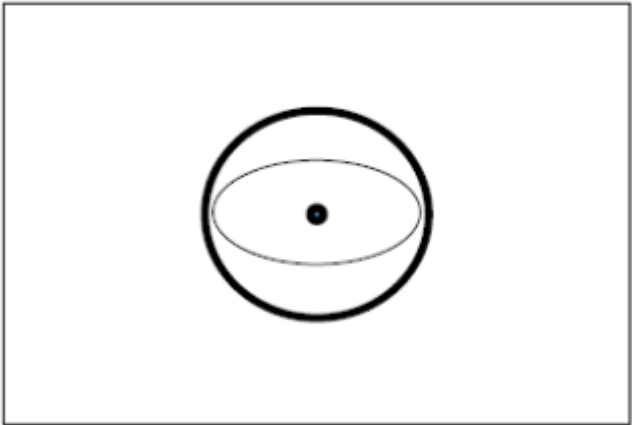
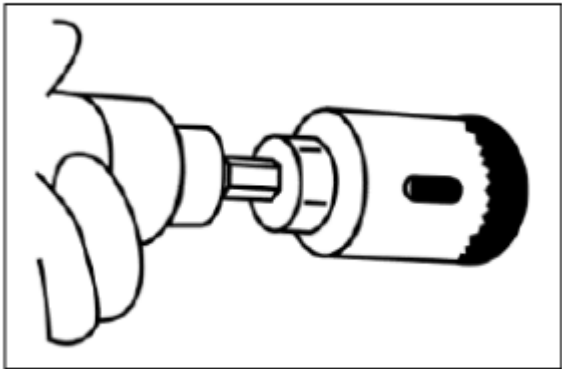


**Proceed to bedliner tub installation.**

**INSTALLATION PROCEDURE:**


**TAILGATE INSTRUCTIONS:**

1. Remove the OEM screws with Torx screwdriver (T15). **SAVE OEM SCREWS.**
2. Place tailgate cover and align the holes. Install (1) OEM screw and (1) flat washer in each location.

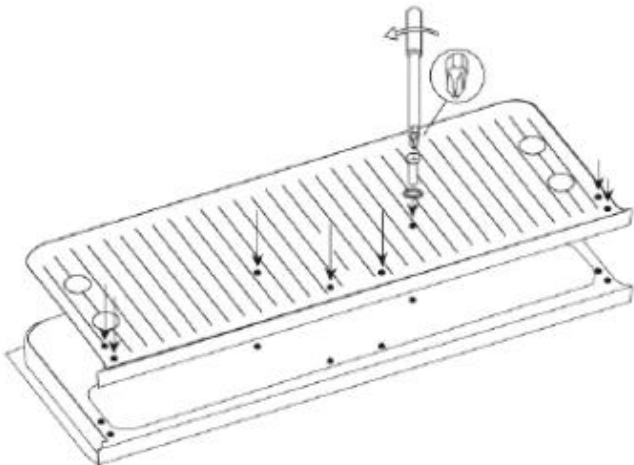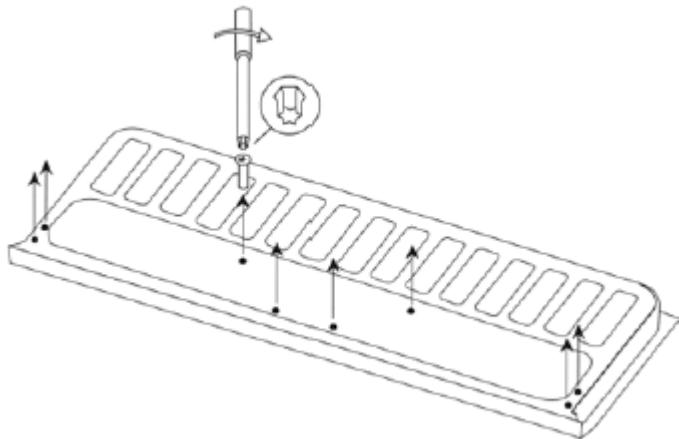

**BEDLINER INSTRUCTIONS:**

1. Insert the bedliner driver side wall under the truck bed rail.
2. Lift the center of the bedliner floor in order to insert the passenger side wall under the bed rail.

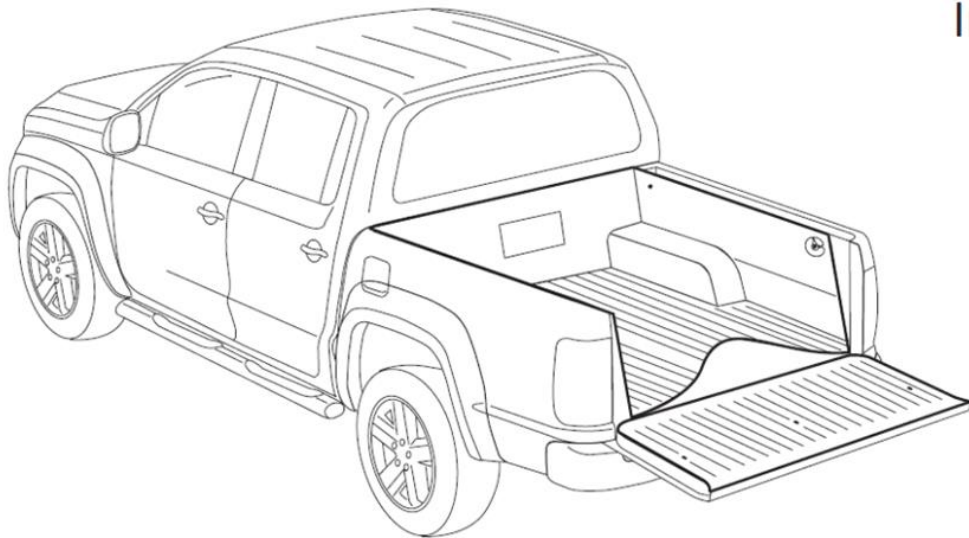

Insert rear top end  
under rail cap

