



Assembly, Installation, Operation and
Maintenance Instructions
Bedliner Tub

**Part Number:
RLIK67**

**Install Time:
30 minutes**

WARNING: PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.

APPLICATION: *For use with various applications*

Parts List:

Description	Qty
Scrivets #M60058001	2

Care and Maintenance: To protect the finish of this product, clean with soap and water, do not use abrasive substances.



Part Number: RLIK67

Missing Parts – Contact TrailFX at

1(866) 638-4870 or support@trailfx.com


Any required parts will be shipped to you
directly – DO NOT return whole kit to
store!

INSTALLATION PROCEDURE:

- 1. PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.** One person can perform the installation, but we recommend a two-person installation.
- 2. Vehicle Preparation:** Thoroughly wash and dry the tailgate and surrounding areas.



- 3. Place the bedliner into the truck box.**

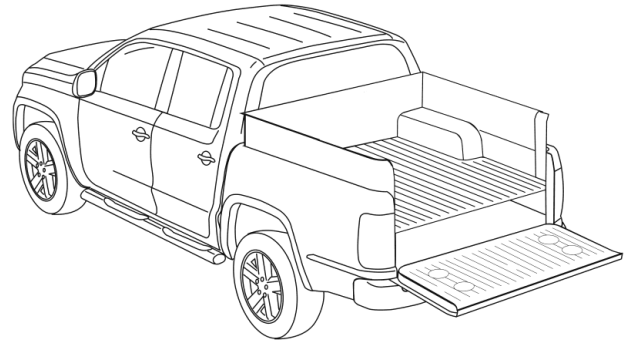

- 4. Locate and align the pre-drilled holes in the truck cargo bed and the bedliner, then insert the scrivenets.**

