


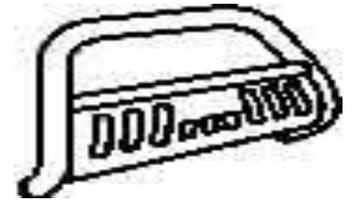

3" Bull Bar

Part No. B0040B/S



Fits: 2020-2020 CHEVY SILVERADO 2500-3500



RATCHET, SOCKET SET AND WRENCH SET



90 mins



Cutting Maybe Required




Drilling Not Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

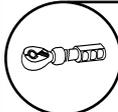

M10 BOLT

COATED HARDWARE
37 FOOT POUND

SS HARDWARE
24 FOOT POUND



support@trailfx.com




1- (866) 638 - 4870




POLISHED STAINLESS STEEL – LIMITED LIFETIME
POWDER COATED BLACK – 3 YEARS

PARTS LIST:

Qty	Part Description	Qty	Part Description
1	3in Bull Bar	4	10mm x 35mm Double Bolt Plates
1	Driver/left Frame Bracket	8	10-1.5mm x 30mm Hex Bolts
1	Passenger/Right Frame Bracket	24	10mm x 27mm OD x 3mm Flat Washers
1	Driver/left Bull Bar Mounting Bracket	16	10-1.5mm Nylon Locknuts
1	Passenger/right Bull Bar Mounting Bracket		

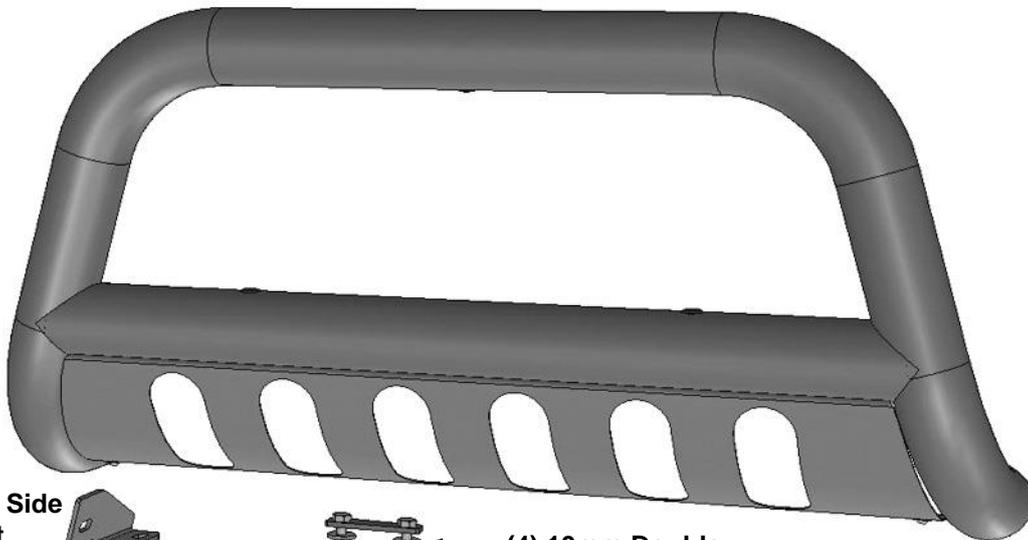


Passenger/right Side Bull Bar Bracket

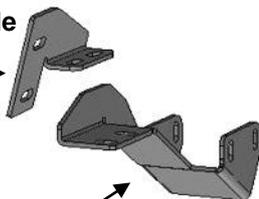

Passenger/right Side Frame Bracket

(4) 10mm Double Bolt Plates

Driver/left Side Frame Bracket

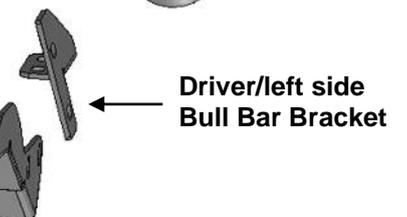

Driver/left side Bull Bar Bracket

PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. CUTTING MAY BE REQUIRED. INSTALLATION MAY INTERFERE WITH BUMPER MOUNTED PARKING SENSORS. ASSISTANCE IS RECOMMENDED. NOTE:

It may be necessary to remove/relocate front license plate and license plate bracket. It is not required, but strongly recommended. If local/state law requires a front license plate, license plate relocation kit is available.

1. Starting at the driver side, remove the factory tow hook if equipped, **(Figure 1)**. **NOTE:** The factory tow hooks cannot be reinstalled. **IMPORTANT:** On some model years, with and without tow hooks, the pocket


- in the plastic bumper may need to be trimmed or completely cut out, **(Figure 4)**. Use a sharp knife or hacksaw blade and carefully cut out the pocket to clear the Bull Bar Brackets. Only cut enough to clear the Brackets.
2. Select the driver/left Frame Bracket, **(Figure 2)**. Carefully slide the Bracket through the tow hook opening and over the end of the frame. Insert (1) 10mm Double Bolt Plate up and into the end of the frame channel and out through the holes in the for the tow hook and the Bracket, **(Figures 2—4)**. Secure the Bracket to the Double Bolt Plate with (2) 10mm Flat Washers and (2) 10mm Nylon Lock Nuts. Leave hardware loose. Repeat this Step to install a second Double Bolt Plate in the other side of the frame.
 3. Next, select the driver/left Bull Bar Mounting Bracket, **(Figure 5)**. Attach the Bull Bar Bracket to the top of the Frame Bracket with the included (2) 10mm x 30mm Hex Bolts, (4) 10mm Flat Washers and (2) 10mm Nylon Lock Nuts, **(Figure 6)**. Leave hardware loose at this time.
 4. Repeat **Steps 1—3** to install the passenger/right Frame and Bull Bar Bracket.
 5. With assistance, position the Bull Bar assembly up to the inside of the Mounting Brackets. Attach the Bull Bar to the Brackets with the included (4) 10mm x 30mm Hex Bolts, (8) 10mm Flat Washers and (4) 10mm Nylon Lock Nuts, **(Figures 7 & 8)**. Do not fully tighten hardware at this time.
 6. Level and adjust the Bull Bar and fully tighten all hardware.
 7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Bull Bar.

For gloss black finishes: Mild soap may be used to clean the Bull Bar.


Driver/left Side Installation Pictured

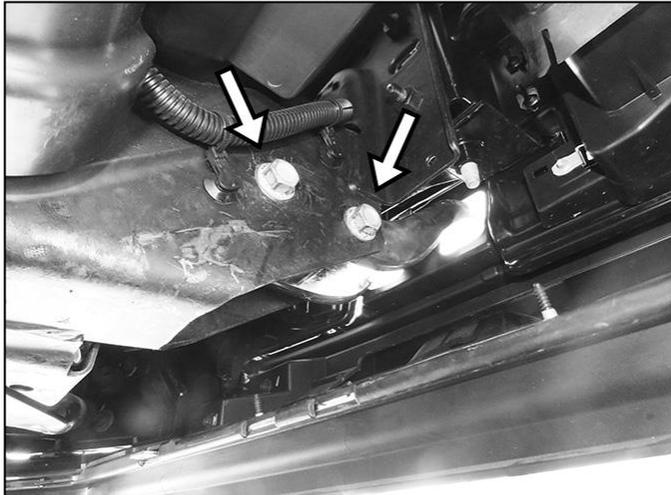

(Fig 1) Remove the tow hook and hardware, (arrows). Driver/left tow hook pictured from below bumper

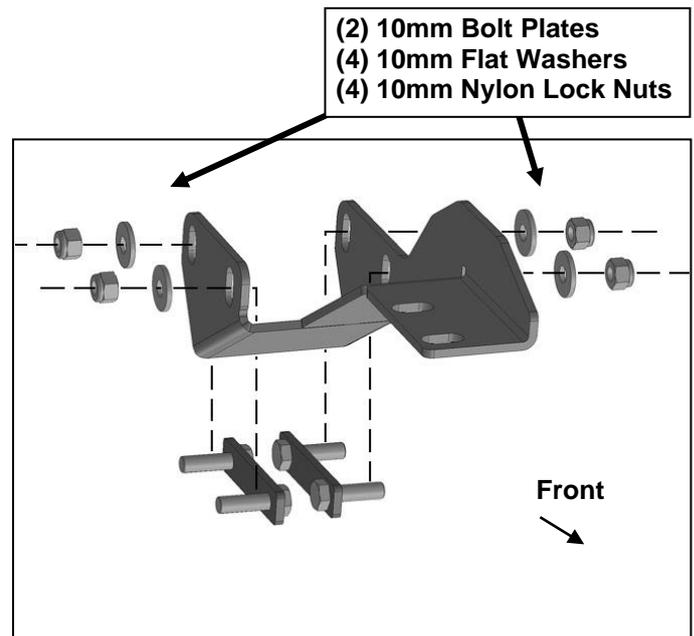

(Fig 2) Insert (2) 10mm Double Bolt Plates up into the open end of driver/left side frame channel and out through the Frame Bracket, (also see Fig 3)

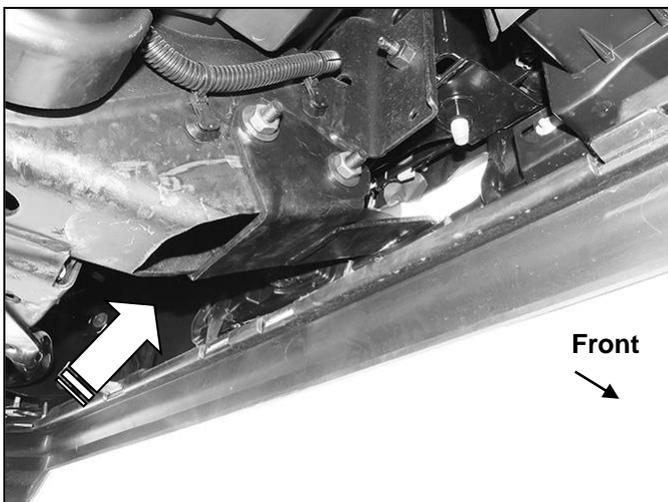


(Fig 3) Driver/left side Frame Bracket installed


Driver/left Side Installation Pictured



(Fig 4) Trim plastic opening if necessary

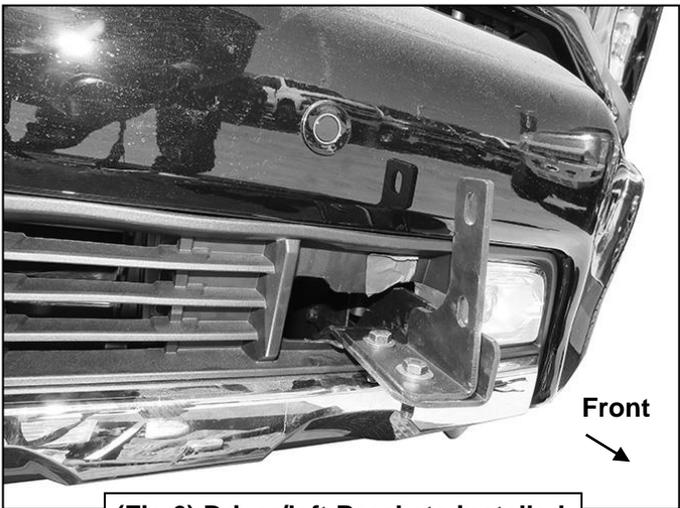


(Fig 6) Driver/left Brackets installed

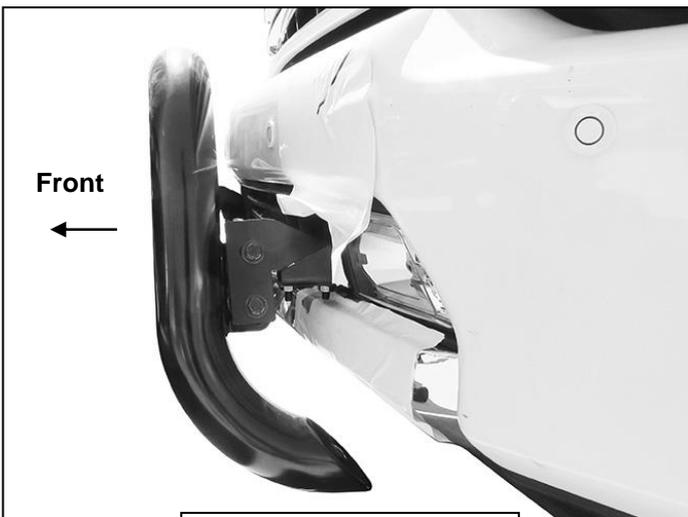


(Fig 8) Bull Bar installed

- (2) 10mm x 30mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

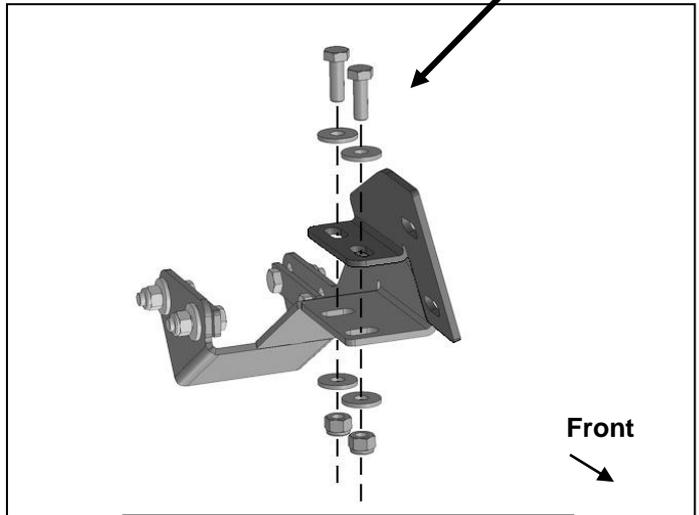

(Fig 5) Attach driver/left Bull Bracket to top of Frame Bracket

- (2) 10mm x 30mm Hex Bolts
- (4) 10mm Flat Washers
- (2) 10mm Nylon Lock Nuts

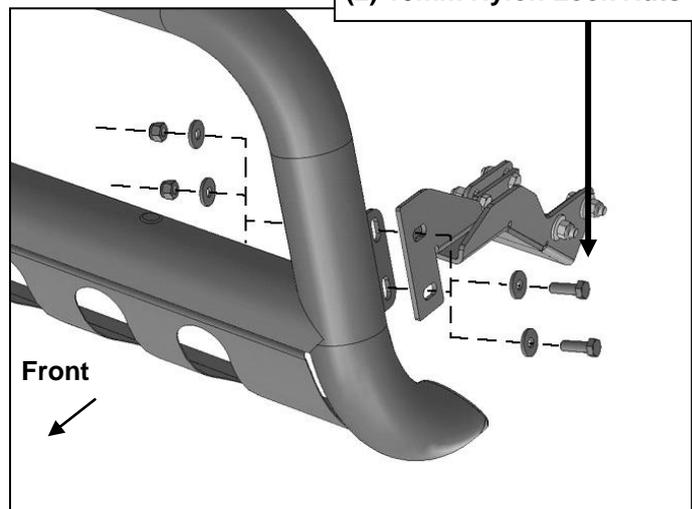

(Fig 7) Attach Bull Bar to inside of Mounting Brackets

PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
- Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

FAQ's**1. Hardware and mounting brackets are not aligning properly**

Ensure that hardware is being used on the correct side of the vehicle. In some cases, the hardware may appear same for driver or passenger side but may alter the alignment of mounting location. Check mounting brackets for both sides.

2. Bull Bar is not aligning with vehicle

Bull Bar Brackets may be interchanged or reversed (Driver / Passenger Side). Check Brackets for each side as well ensure the proper hardware has been used for each side.

3. Products are thumping / rattling after installation.

Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between metal to metal contact.

4. Missing / Excess Hardware.

Recheck hardware count as per the part list.

5. Product not installing properly.

Ensure the Year / Make / Model as well as cab and bed dimensions are correct for the application. Review all steps for installation to ensure they were followed correctly.

6. Who should be contacted for questions regarding product / installation assistance?

www.trailfx.com / support@trailfx.com 1-(866) 638-4870

Check out these other TrailFX Products!

www.trailfx.com




BULL BAR



GRILLE GUARDS



BED RAILS

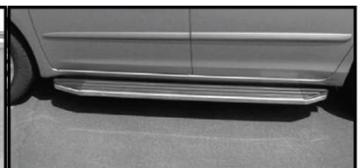

RUNNING BOARDS

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.