



# ALUMINIUM BASKET RACK HARDTOP Part No. JRB001T



**Fits: 2018+ JEEP WRANGLER JL WITH HARD TOP (Excludes Sky One-Touch)  
2020+ GLADIATOR 4 DOOR WITH HARD TOP**



RATCHET, SOCKET SET AND WRENCH SET



60 Mins



Cutting Not Required



Drilling Not Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT




support@trailfx.com



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION



1- (866) 638 - 4870

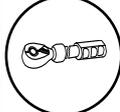

**TORQUE SPECIFICATION**


**M6 BOLT** 7 FOOT POUND  
**M8 BOLT** 18 FOOT POUND



LIMITED 3 YEARS

**PARTS LIST:**

Qty	Part Description	Qty	Part Description
2	Front/Rear Panels	30	8-1.25mm x 25mm Combo Button Head Bolts
2	Side Panels	2	8-1.25mm x 16mm Button Head Bolts
1	Face Plate	68	8mm x 24mm OD x 2mm Flat Washers
3	Cross Rails	2	8mm x 16mm OD x 1.5mm Flat Washers
1	Driver/Left L-Bracket	30	8mm Lock Washers
1	Passenger/Right L-Bracket	16	8mm Hex Nuts
4	Mounting Brackets	14	8mm Nylon Lock Nuts
4	Clamping Brackets	8	6-1.0mm x 20mm Combo Hutton Head Bolts
4	89mm x 35mm x 5mm Foam Strips (Mounting Brackets)	8	6mm x 18mm OD x 1.6mm Flat Washers
4	89mm x 35mm x 2mm Foam Strips (Mounting Brackets)	8	6mm Hex Nuts
8	8-1.25mm x 25mm Hex Bolts	2	5mm Hex Wrench
8	8-1.25mm x 25mm Combo Hex Bolts	1	4mm Hex Wrench

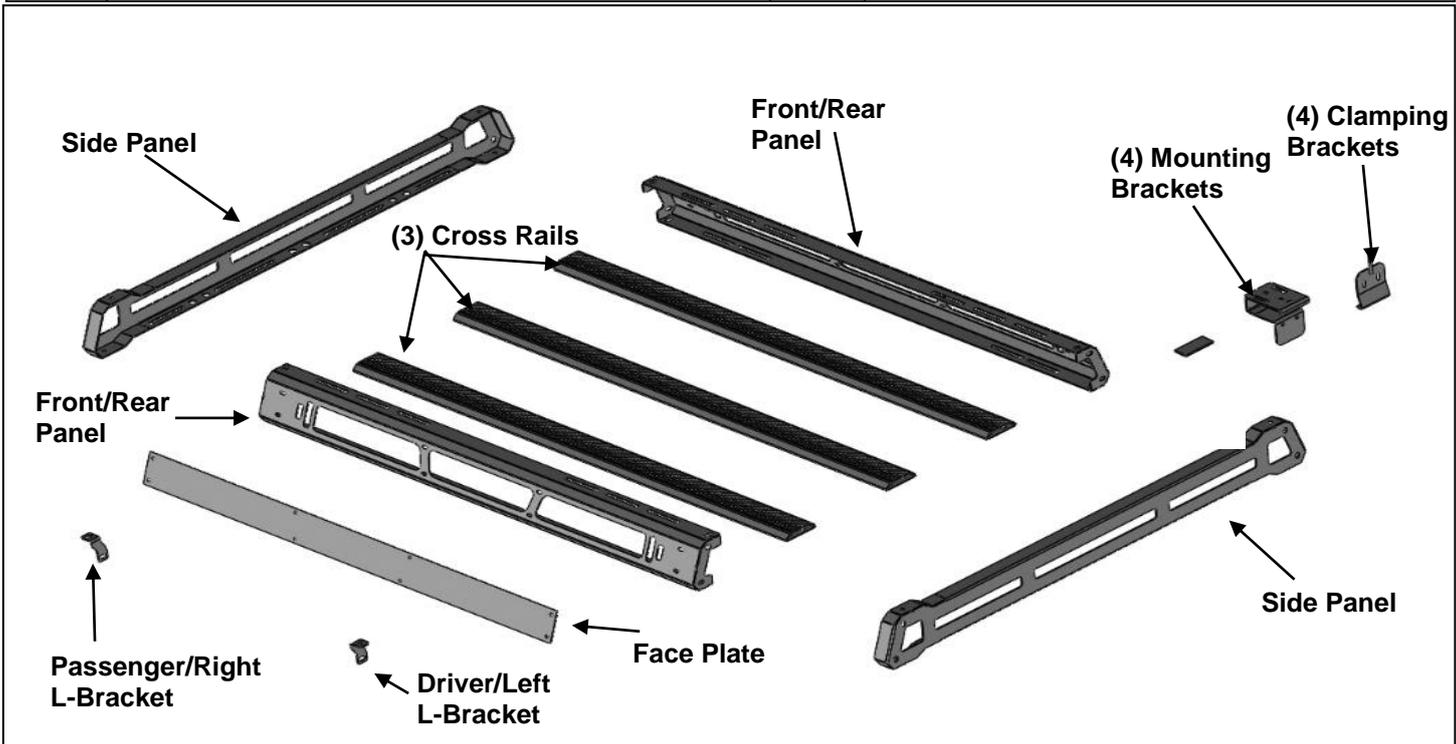

**CAUTION: Do not exceed 150 lb cargo weight. Exceeding 150 lb may result in damage to the roof and vehicle instability. The manufacturer makes no representation or warranty as to the amount of weight that the vehicle can safely carry. For guidance, we recommend that you consult the vehicle manufacturer. Secure all payloads properly for safe transportation.**

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE RECOMMENDED.**

1. Place (1) Side Panel and (1) Front/Rear Panel on a stable, clean flat surface. Insert the end of the Front/Rear Panel into the end of the Side Panel. Attach the Side Panel to the Front/Rear Panel using (4) 8mm x 25mm Button Head Bolts, (8) 8mm x 24mm Flat Washers, (4) 8mm Lock Washers and (4) 8mm Hex Nuts, **(Figure 1)**. Do not tighten hardware at this time.
2. Move to the other end of the Front/Rear Panel. Select the remaining Side Panel and repeat **Step 1** to attach the Panels, **(Figure 1)**.
3. Next, select the remaining Front/Rear Panel. Repeat **Step 1** to attach the Panel to each Side Panel, **(Figure 1)**.
4. Select (1) Cross Rail. Locate the (3) mounts on each Side Panel. Attach the Cross Rail to the mounts using (4) 8mm x 25mm Button Head Bolts, (4) 8mm Lock Washers and (4) 8mm x 24mm Flat washers, **(Figure 2)**. Leave hardware loose.
5. Repeat **Step 4** to attach the remaining (2) Cross Rails to the mounts on the Side Panels.
6. After assembling the Roof Basket, level and fully tighten the Side Panels to the Front/Rear Panel hardware only at this time. Make sure the Roof Basket is squared before tightening.
7. **Determine if Face Plate or Light Bar will be attached at this time, (Light not included)**


**For Face Plate attachment:**

  - a. Select the Face Plate.
  - b. Attach the Face Plate to the Front Panel using (8) 6mm Button Head Combo Bolts, (8) 6mm Flat Washers and (8) 6mm Hex Nuts, **(Figure 3)**. Fully tighten hardware.

**Light Bar attachment, (Light not included):**

  - a. Select the Passenger/Right L-Bracket.
  - b. Attach the Bracket to the Front Panel with (1) 8mm x 25mm Button Head Bolt, (2) 8mm x 24mm Flat Washers and (1) 8mm Nylon Lock Nut, **(Figure 4)**.
  - c. Repeat **Step 9a** to attach the Driver/Left L-Bracket.
  - d. Attach the Light Bar to the Brackets using (2) 8mm x 16mm Button Head Bolts, (2) 8mm Lock Washers and (2) 8mm x 16mm Flat Washers, **(Figure 4)**.
  - e. Follow the light manufacturer's instructions to properly attach and wire the Light Bar.
  - f. Level and adjust the Light Bar to the Brackets and fully tighten hardware.
8. Open the Passenger/Right front door. Locate the rain gutter along the top of the door. Apply (1) **5mm thick** Foam Strip to the bottom of (1) Mounting Bracket to protect the roof from damage, **(Figure 6)**.
9. Next, select (1) Clamping Bracket. Apply (1) **3mm thick** Foam Strip to the **inside** of the Clamping Bracket to protect the rain gutter from damage. Slide the Mounting Bracket over the welded bolt on the Clamping Bracket. Attach the Clamping Bracket to the Mounting Bracket with (1) 8mm x 24mm Flat Washer and (1) 8mm Nylon Lock Nut, **(Figure 6)**. Do not tighten hardware at this time.
10. Wrap the Bracket assembly around the rain gutter. Make sure the Mounting Bracket fits snug inside the rain gutter. **IMPORTANT:** Position the Bracket approx. 17 ½ inches from the front edge of the front roof panel. Use (2) 8mm x 25mm Combo Bolts to secure the Clamping Bracket to the Mounting Bracket, **(Figures 5—7)**. Do not tighten hardware at this time.
11. Repeat **Steps 8—10** to attach the remaining (3) Mounting Brackets and Clamping Brackets. **Note:** Place the rear Mounting Brackets approx. 31 inches from the front Mounting Brackets, **(Figures 8 & 9)**. Do not fully tighten hardware at this time.
12. With assistance, place the assembled Roof Basket on top of the Mounting Brackets. Attach the Mounting Brackets to the bottom of the Side Panel with (8) 8mm x 25mm Hex Bolts, (16) 8mm x 24mm Flat Washers and (8) 8mm Nylon Lock Nuts, **(Figures 10—12)**.
13. Level and center the Roof Basket to the vehicle and tighten all hardware at this time.
14. Do periodic inspections to the installation to make sure that all hardware is secure and tight.


**To protect your investment**, do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used to clean the Roof Basket

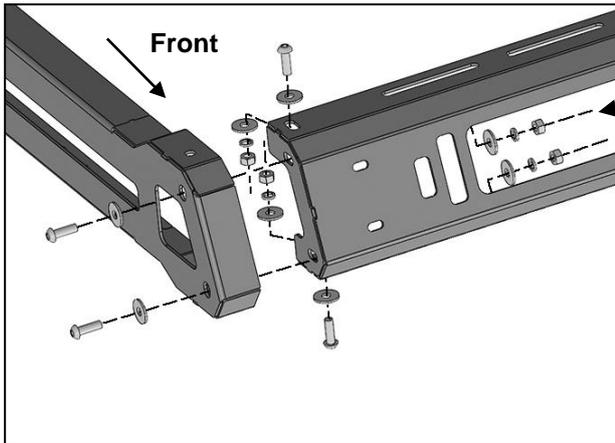


**(Fig 1) Slide Front/Rear Panel into Side Panel**

- (4) 8mm x 25mm Button Head Bolts
- (8) 8mm x 24mm Flat Washers
- (4) 8mm Lock Washers
- (4) 8mm Hex Nuts

- (2) 8mm x 25mm Button Head Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm Flat Washers

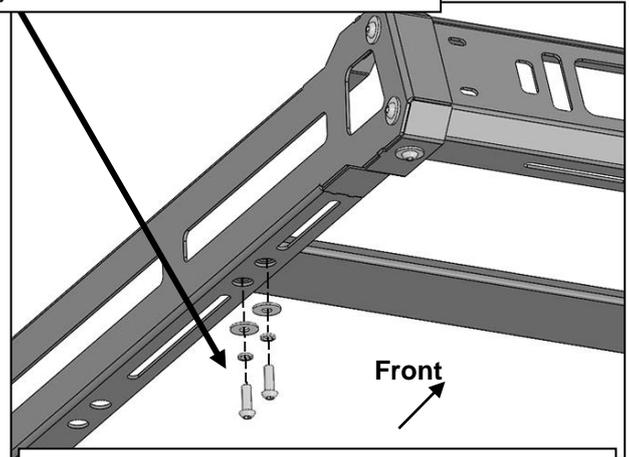

**(Fig 2) Attach (1) Cross Rail to the Side Panel**

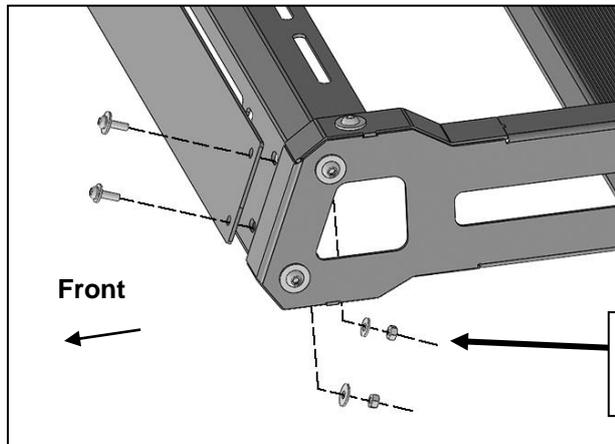


**(Fig 3) Attach the Face Plate to the Front Panel**


- (2) 6mm Button Head Combo Bolts
- (2) 6mm Flat Washers
- (2) 6mm Hex Nuts

- (1) 8mm x 25mm Button Head Bolt
- (2) 8mm x 24mm Flat Washers
- (1) 8mm Nylon Lock Nuts

- (1) 8mm x 16mm Button Head Bolt
- (1) 8mm Lock Washer
- (1) 8mm x 16mm Flat Washer

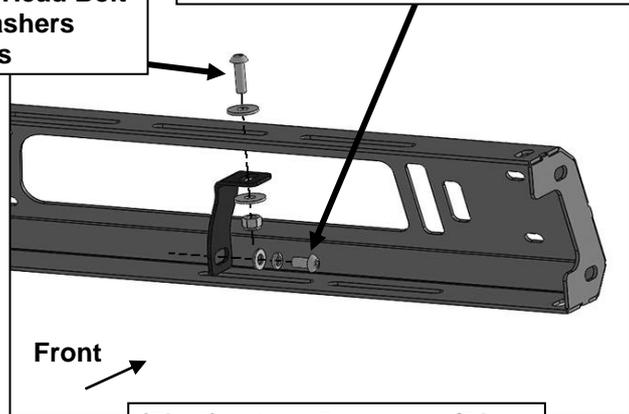

**(Fig 4) Attach Passenger/Right L-Bracket to the front panel**

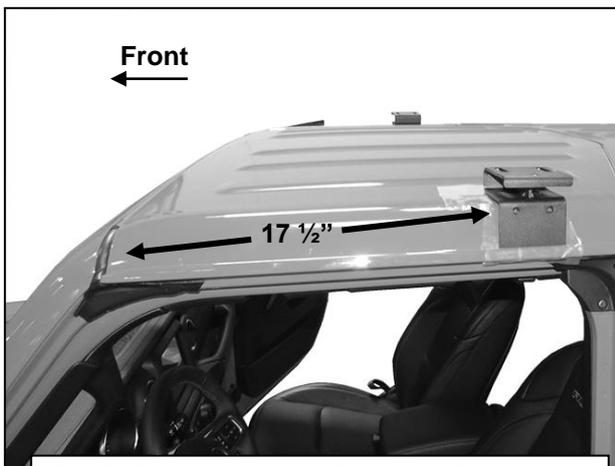


**(Fig 5) Place the front Mounting Bracket approx. 17 1/2 inches from the front edge of the forward roof panel (Driver/Left shown)**

**Attach Clamping Bracket to Mounting Bracket:**  
(1) 8mm x 24mm Flat Washer  
(1) 8mm Nylon Lock Nut  
(1) Clamping Bracket


Apply 5mm thick Foam Strip to the bottom of the Mounting Bracket

Apply 3mm thick Foam Strip inside Clamping Bracket

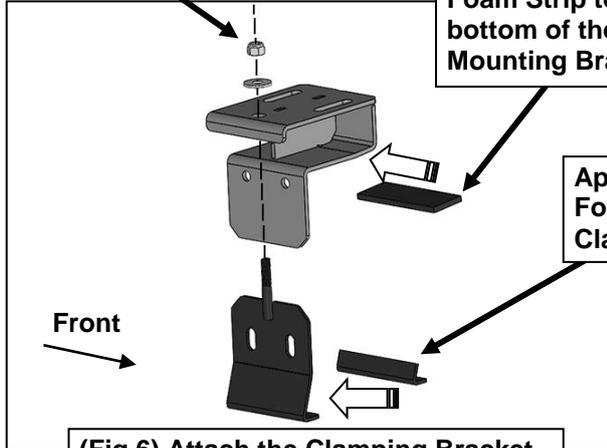


**(Fig 6) Attach the Clamping Bracket to the Mounting Bracket and the rain gutter on the side of the vehicle**


(2) 8mm x25mm Combo Bolts

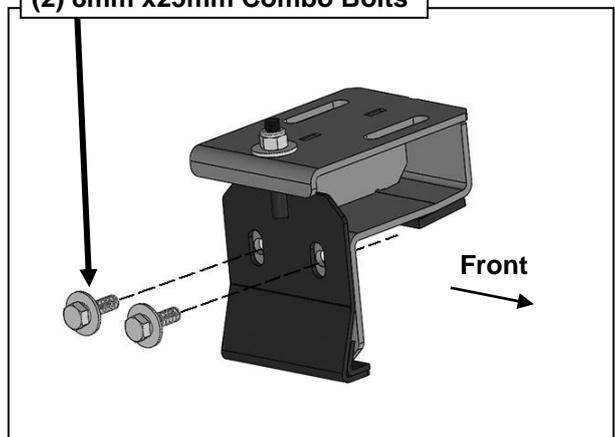


**(Fig 7) Secure the Brackets to the rain gutter**

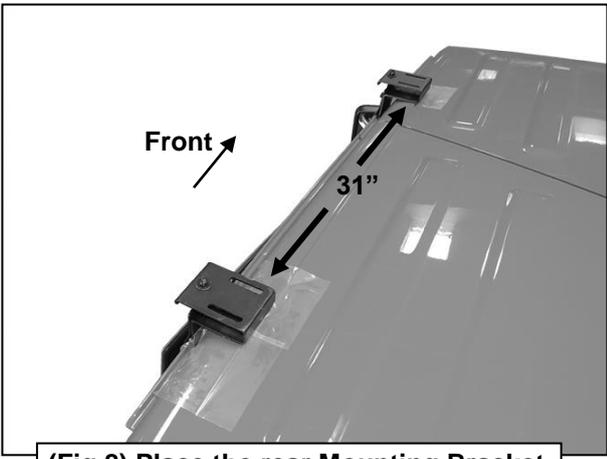

**(Fig 8) Place the rear Mounting Bracket approx. 31 inches from the front Mounting Bracket (Driver/Left shown)**

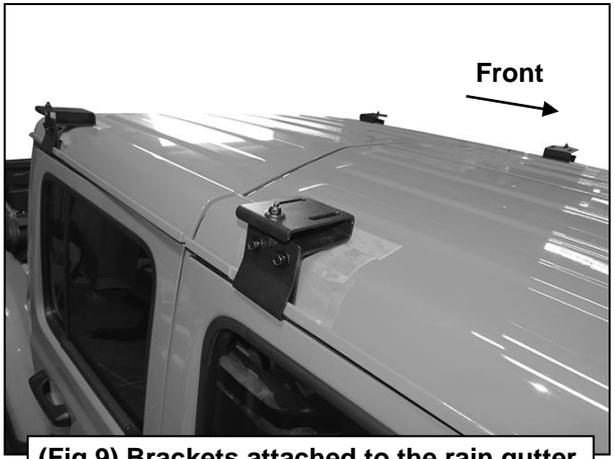


**(Fig 9) Brackets attached to the rain gutter**

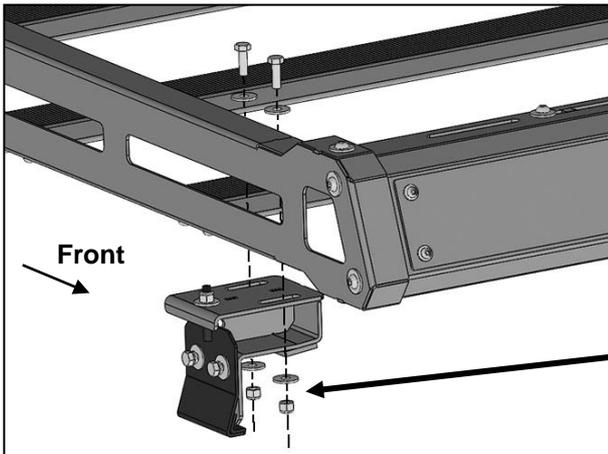


- (2) 8mm x 25mm Hex Bolts
- (4) 8mm x 24mm Flat Washers
- (2) 8mm Nylon Lock Nuts

(Fig 10) Attach the Roof Basket to the Mounting Bracket

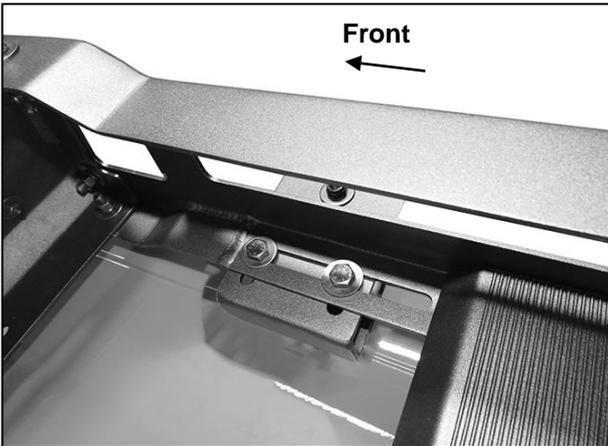

(Fig 12) Roof Basket attached to the Mounting Bracket (Pictured above Passenger/Right Front)

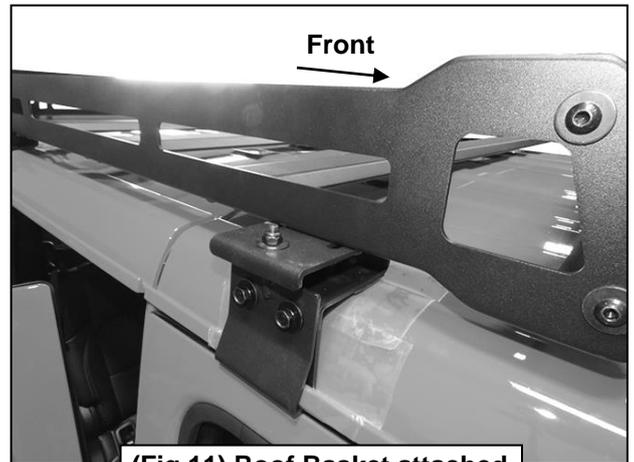

(Fig 11) Roof Basket attached to the Mounting Bracket





### PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- For cleaning, use mild soap and warm water with a soft cloth or brush to prevent scratching.

### FAQ's

**1. Hardware and mounting brackets are not aligning properly**

*Ensure that hardware is being used on the correct side of the vehicle. In some cases, the hardware may appear same for driver or passenger side but may alter the alignment of mounting location. Check mounting brackets for both sides.*

**2. Roof Rack is not aligning with vehicle / doors**

*Brackets may be interchanged or reversed (Driver / Passenger Side). Check brackets for each side as well ensure the proper hardware has been used for each side.*

**3. Products are thumping / rattling after installation.**

*Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between metal to metal contact.*

**4. Missing / Excess Hardware.**

*Recheck hardware count as per the part list.*

**5. Product not installing properly.**

*Ensure the Year / Make / Model as well as cab and bed dimensions are correct for the application. Review all steps for installation to ensure they were followed correctly.*

**6. Who should be contacted for questions regarding product / installation assistance?**

*[www.trailfx.com](http://www.trailfx.com) / [support@trailfx.com](mailto:support@trailfx.com) 1-(866) 638-4870*

Check out these other TrailFX Products!

[www.trailfx.com](http://www.trailfx.com)



STEP BARS



FENDER FLARES



FRONT BUMPERS



WINCHES

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.