




LED POD SIDE SHOOTER 75W

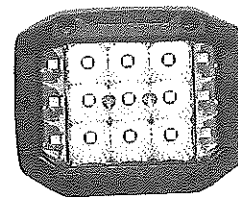

Part No: PODSIDEF, PODSIDEFPR



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



120 min



support@trailfx.com



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.




1 866 638 4870


PARTS LIST:

Qty	Part Description	Qty	Part Description
1	LED Pod Light*	2	M6 Shims*
1	Wiring Harness	1	M10 Shim*
1	Switch	1	M10 Bolt*
1	U Bracket*	1	M10 Hex Nut*
2	M6 Bolts*		

*Part quantity doubles for the paired kits

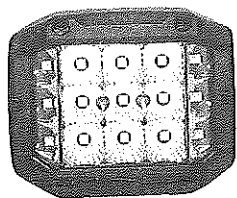


POD LIGHT

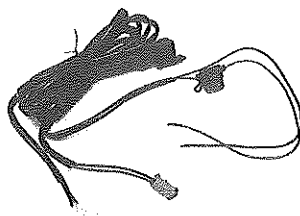

WIRING HARNESS




SWITCH

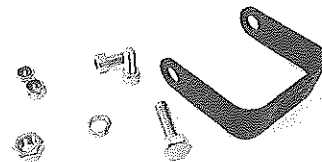

MOUNTING KIT

LED CUBE LIGHT INSTALLATION:

1. Install supplied bracket to LED cube light using M6 bolts and shims. Insert bracket into vents on back of the cube light and then screw in M6 bolts using shim if necessary, on both sides.
2. Identify the desired mounting location for the lights on the vehicle. Place pod light and mark bracket hole location on vehicle (if mounting hole requires drilling).
3. If mounting hole requires drilling, drill a hole $\frac{1}{4}$ " hole in locations marked.
4. Mount using M10 bolt, M10 Shim and M10 hex nut. Once pod light is in desired location tighten all hardware.

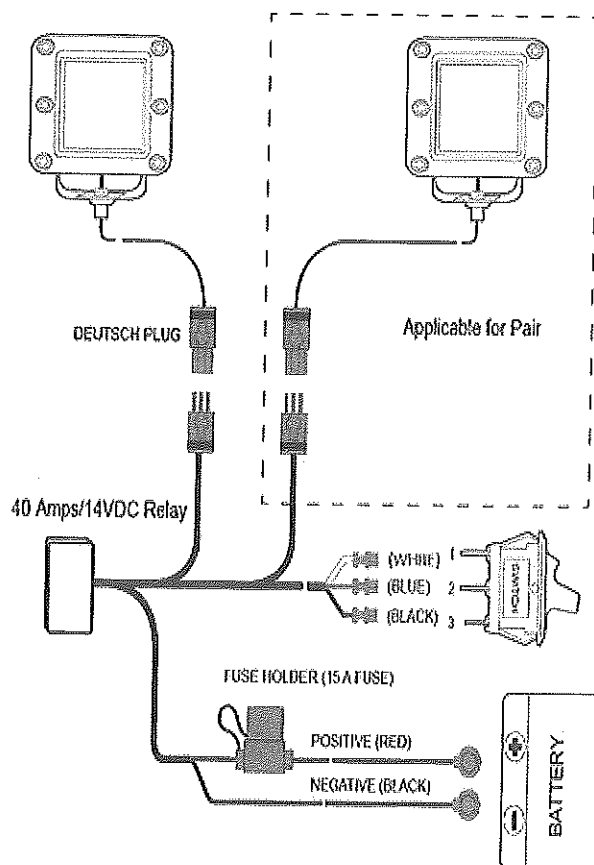

WIRING INSTALLATION

***NOTE LED Cube Light pairs will have 2 Deutsch connectors on harness**

1. Remove wiring harness and switch from kit.
2. Route wiring harness so that the red and black power cables are routed to the 12V battery, the three switch wires are routed to your desired switch location, and the Deutsch plug(s) is routed to the light. **(Keep wiring away from anything that will get hot).**
3. Mount relay with desired hardware in a position under hood or in cab that is limited to water exposure.
4. Plug male (on the wiring harness) and female (on light) Deutsch plug(s) connectors together.
5. Drill $\frac{3}{4}$ " hole in desired switch mounting location. Verify there will be enough clearance behind switch to plug in the wires. Notch a small slit in the side of the hole using a file. This will keep the switch from turning.
6. Press switch into hole; verify that the notch made in step 5 lines up with the notch on the switch.
7. Plug wires into switch. Prongs on switch will be marked 1 through 3. **White** wire goes to **prong 1**, **Blue** wire goes to **Prong 2**, and the **Black** wire goes to **prong 3** (gold prong).
*NOTE – If switch wire does not include a blue wire – proceed with connecting **White** and **Black** wires as described above.
8. Attach power cable to the battery. **Red** goes to **positive** and **black** goes to **negative**.

- Complete periodic inspections to the installation to make sure that all hardware is secure and tight.
- Never use a caustic or petroleum-based cleaner on any surface of the light.
- For best cleaning results, always use household glass cleaner or mild soap with a soft lint free rag.

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.