



A4 ALUMINIUM STEP BAR

Part No. AL4016B




Fits: 2005-2020 TOYOTA TACOMA ACCESS CAB



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

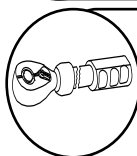

DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTENING BODY MOUNT NUTS & BOLTS VARIES FROM 18 TO 20 FOOT POUND FOR M8 HARDWARE.



120 mins



Cutting Not
Required



Drilling Not
Required



support@trailfx.com




1- (866) 638 - 4870



POWDER COATED BLACK - LIMITED LIFETIME

PARTS LIST:





Qty	Part Description	Qty	Part Description
1	Driver/Left A4 Step Bar	8	Plastic Clips
1	Passenger/Right A4 Step Bar	8	8mm x 30mm Hex Bolts
1	Driver/Left Front Mounting Bracket	8	8mm x 20mm T-Bolts
1	Passenger/Right Front Mounting Bracket	16	8mm Lock Washers
1	Driver/Left Rear Mounting Bracket	16	8mm x 24mm OD x 2mm Flat Washers
1	Passenger/Right Rear Mounting Bracket	8	8mm Hex Nuts
4	Plastic Covers		
REPLACEMENT PARTS LIST (NOT INCLUDED IN BOX)			
1	Step Pad Pack (Includes clips) - G9029	1	End Caps Pack - G9030
1	Bracket Cover Pack - G9031		

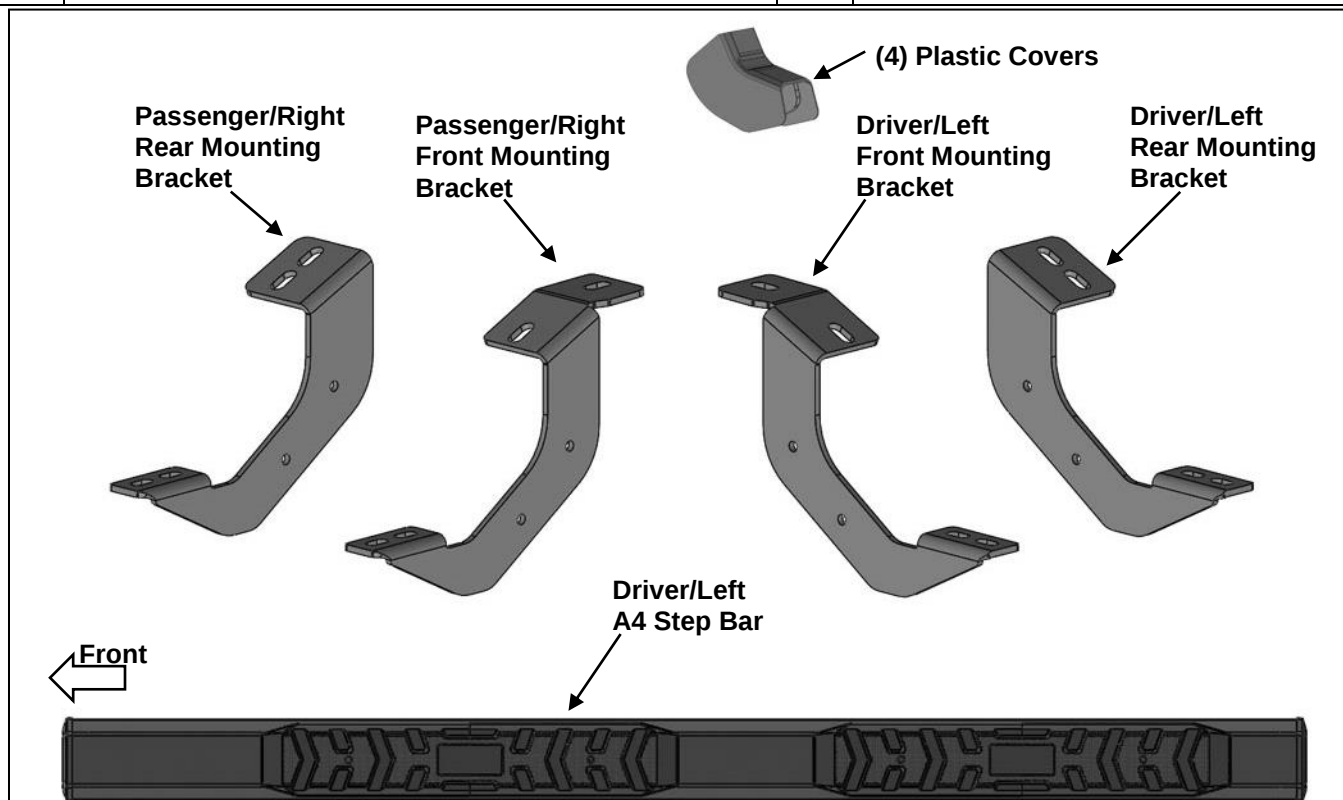




PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.**
2. Starting on the Driver/Left side of the vehicle, remove any plastic plugs or hex bolts from the factory mounting locations along the bottom of the floor, **(Figures 1 & 4)**. The Sidebar will mount to the front and rear locations.
3. Select the Driver/Left Front Mounting Bracket. Attach the bracket to the front location with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers, **(Figure 2)**. Do not tighten hardware at this time.
4. Select (1) Plastic Cover. Attach the Cover to the Mounting Bracket with (2) Plastic Clips, **(Figure 3)**.
5. Move to the rear location. Select the Driver/Left Rear Mounting Bracket. Repeat **Steps 3 & 4** to attach the Bracket to the rear location, **(Figure 5)**.
6. Select the Driver/Left A4 Step Bar. Insert (4) T-Bolts into the channels in the bottom of the Sidebar, (3) per channel, **(Figure 6)**. Attach Sidebar to the Mounting Brackets with (4) 8mm Flat Washers, (4) 8mm Lock Washers and (4) 8mm Hex Nuts, **(Figure 8)**. Do not tighten hardware.
7. Level and adjust the Sidebar and tighten all hardware.
8. Repeat **Steps 1—7** to attach the Passenger/Right A4 Step Bar.
9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Use only mild soap to clean the Sidebars.

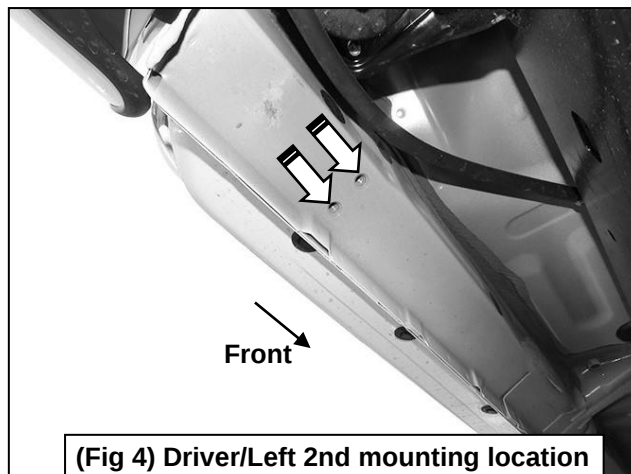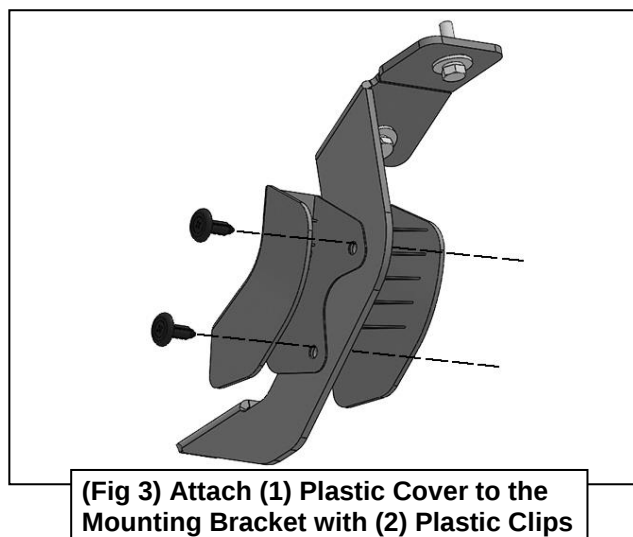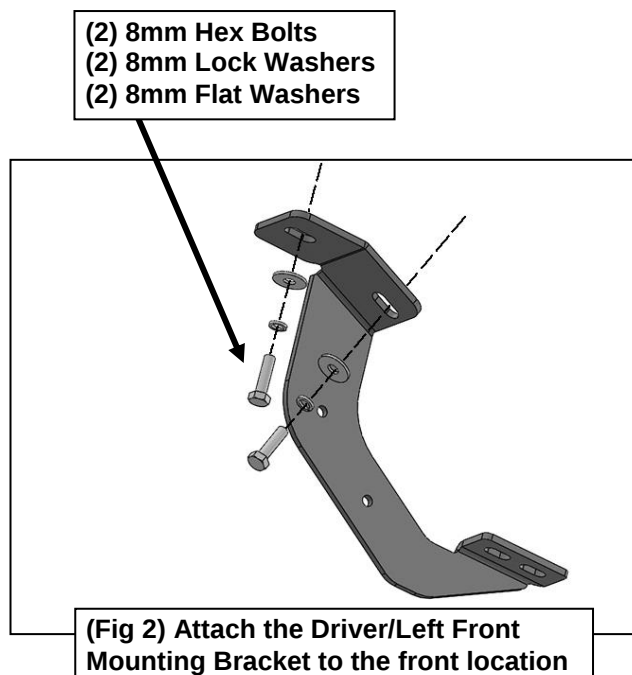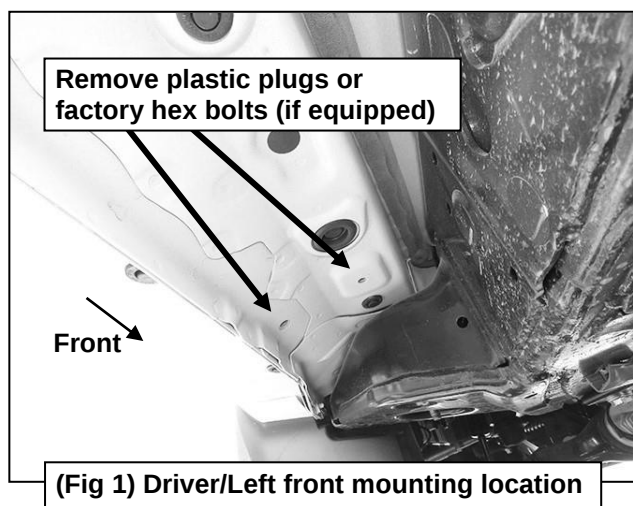Driver/Left Side Installation Pictured

Driver/Left Side Installation Pictured

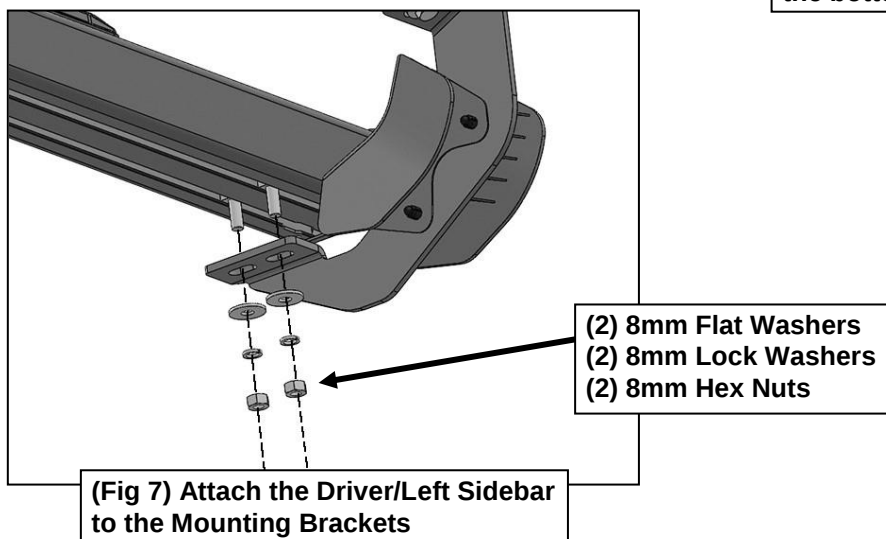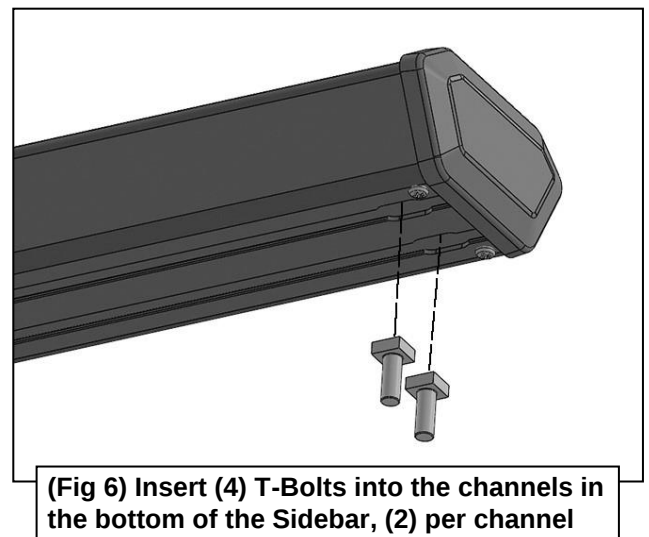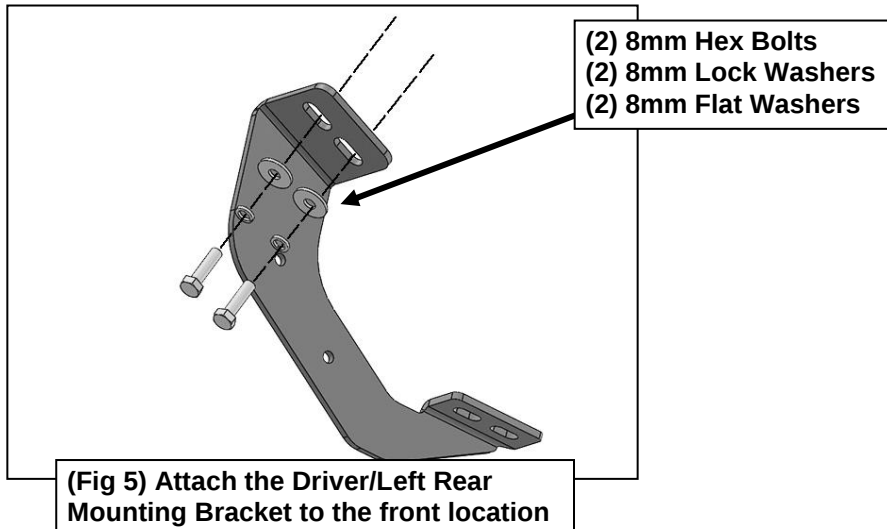

PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- For cleaning, use mild soap and warm water with a soft cloth or brush to prevent scratching.

FAQ's**1. Hardware and mounting brackets are not aligning properly**

Ensure that hardware is being used on the correct side of the vehicle. In some cases, the hardware may appear same for driver or passenger side but may alter the alignment of mounting location. Check mounting brackets for both sides.

2. Step Bar is not aligning with vehicle / doors

Step bars may be interchanged or reversed (Driver / Passenger Side). Check step bar for each side as well ensure the proper hardware has been used for each side.

3. Products are thumping / rattling after installation.

Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between metal to metal contact.

4. Missing / Excess Hardware.

Recheck hardware count as per the part list.

5. Product not installing properly.

Ensure the Year / Make / Model as well as cab and bed dimensions are correct for the application. Review all steps for installation to ensure they were followed correctly.

6. Who should be contacted for questions regarding product / installation assistance?


www.trailfx.com / support@trailfx.com 1-(866) 638-4870

Check out these other TrailFX Products!

www.trailfx.com



HOOD PROTECTOR

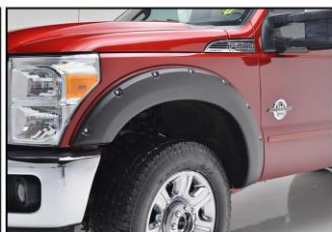

FENDER FLARES



TONNEAU COVER



BED LINERS

Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.