



CCI® MIRROR COVER REPLACEMENTS



FELT RAG, FLAT BLADE TOOL OR FLAT HEAD SCREW DRIVER.



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.



READ INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. PICTURES ARE FOR DEMONSTRATION ONLY.

INSTALLATION PROCEDURE

1. Open the box and thoroughly inspect all pieces of your CCI® Mirror Cover Replacements for any shipping damage or manufacturer defects before product installation or removal of 3M protective adhesive film strips. If damage or defects are found, place product back into its box with all its original packaging and contact your distributor for credit or replacement. Any product installed may void product's warranty for shipment damage or manufacturer's defects.

2. Hold your CCI® Mirror Cover Replacement up to the OEM mirror cap without installing. Verify your CCI® Mirror Cover Replacement matches the physical design of the OEM mirror cap. If the design does not match, contact your distributor before attempting installation.




3. Your CCI® Mirror Cover Replacement is similar to the OEM mirror cap design. Look at the back of your CCI® Mirror Cover Replacement to see all the tabs and where they are located. Start by beginning to release these tabs with a flat blade or screw driver working your way around until they are all released. Once your OEM mirror cap is loose, gently rotate back and remove.

4. Wipe clean all areas that your CCI® Mirror Cover Replacement will be installed. Remove any dust or dirt that may otherwise hinder installation.

5. Line up your CCI® Mirror Cover Replacement to all the tabs and push into place with a straight on forward motion, applying pressure from one side to the other until all tabs have snapped in.

6. Repeat steps 2-5 for all remaining pieces.

7. Wipe down installed CCI® Mirror Cover Replacements with a soft dry cloth to a showroom shine.

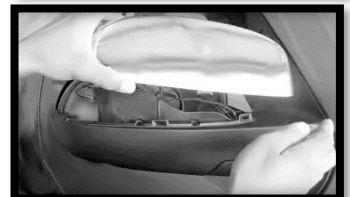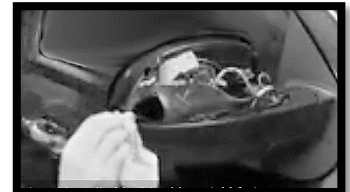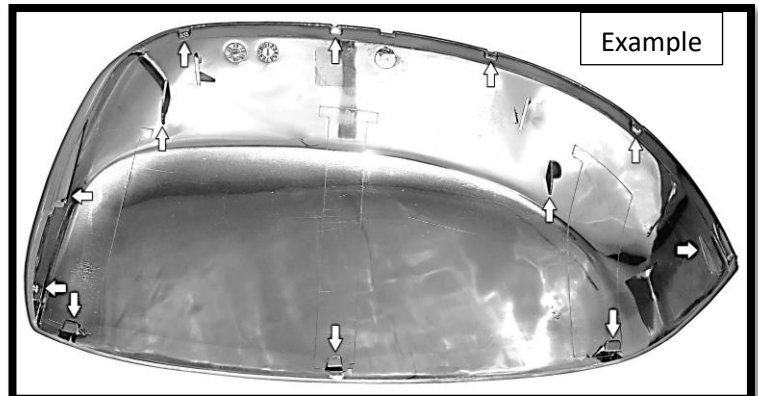

PRODUCT CARE

- Regular vehicle cleaning of dirt, grime or salt twice a month, year round.
- Applying a high-quality wax to help protect and maintain the finish of the product is recommended.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Failure to keep your product clean may result in pitting and or peeling.

DISCLAIMER:

CCI® guarantees our chrome products against material and workmanship defects for as long as you own your vehicle. Any defects resulting from faulty materials, finish or workmanship will be warranted by CCI® and repaired, replaced, or credited at our discretion. CCI® assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, normal wear and tear or neglect will not be warranted by CCI®.