




**DESTROYER SERIES**  
**JL JEEP**  
**SPARE TIRE LICENCE**  
**PLATE RELOCATION KIT**


**INSTALLATION**  
**INSTRUCTIONS**




**INSTALLATION ON JEEP JL OEM TIRE CARRIER**

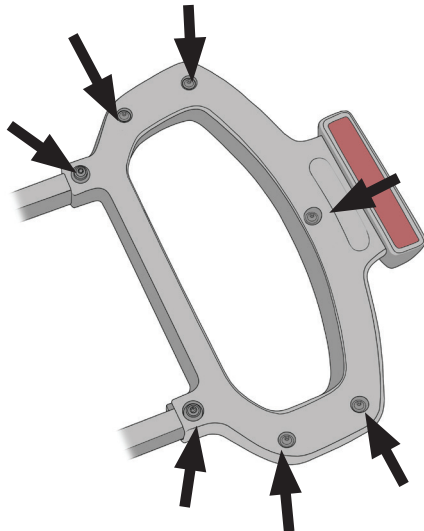


Use a T-25 Torx bit to remove the screws that secure the plastic cover on the tail light hoop.

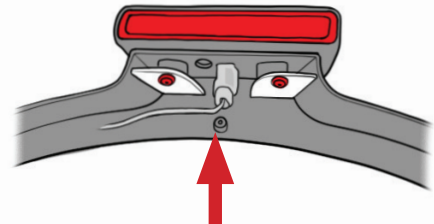


Unplug the light, then remove the cable and light from hoop.

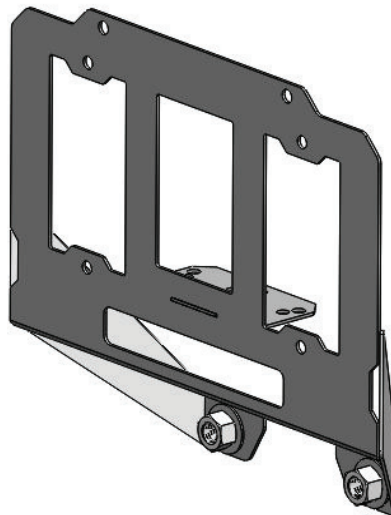

Relocate the 3rd Brake Light to the Spare Tire License Plate Frame using the original screws.

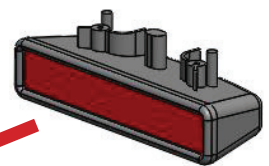

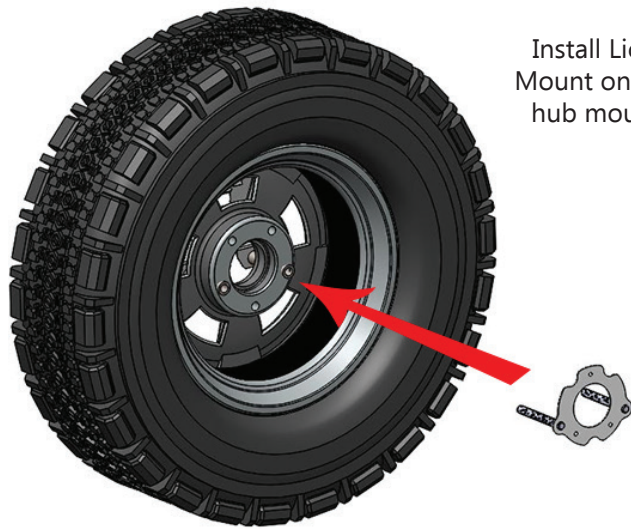

Install License Plate Mount onto the wheel hub mounting face.



Mount your wheel on the carrier and tighten the 3 mounting lug nuts.



Install the Spacer Tubes and the Spare Tire License Plate Frame using 1/2" Hex Nuts and Washers.

Depending on the style of your wheel, you may need to trim the plastic tube spacers to a shorter length.


**\*\*Dont Forget to re-route the 3rd Brake Light cable thru the wheel and plug it in!\*\***





**Recommended Installation for wiring license plate bolt lights \*sold separately\*.**




Location of rear bumper wire harness plug. Locate license plate light wires and tap into them to extend wiring across the inside of the bumper as shown. You may use the provided wire and butt connectors to make this extension.

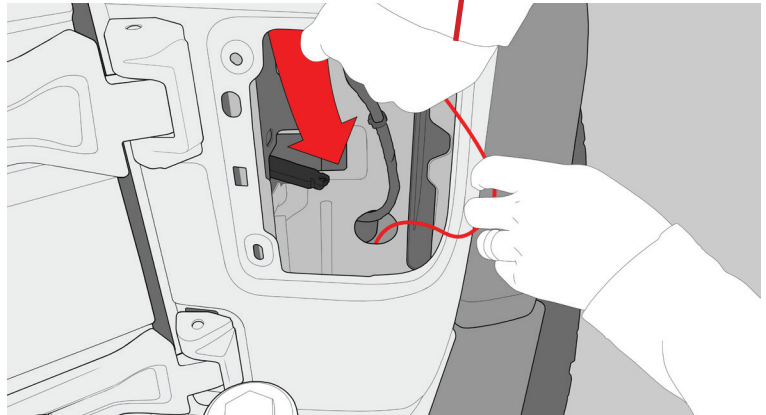

Feed the extension wire from the bumper up through the hole indicated behind the rear tail light on the passenger side.

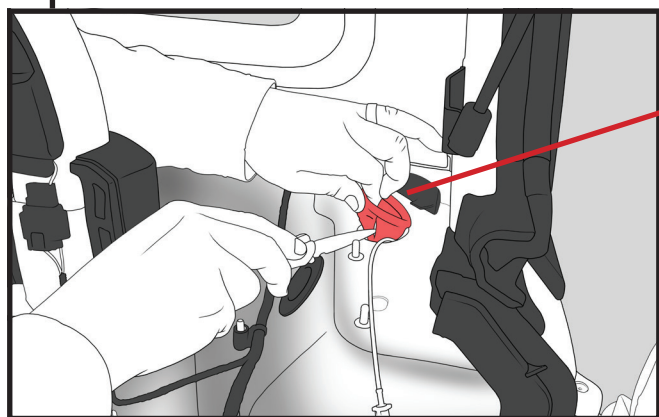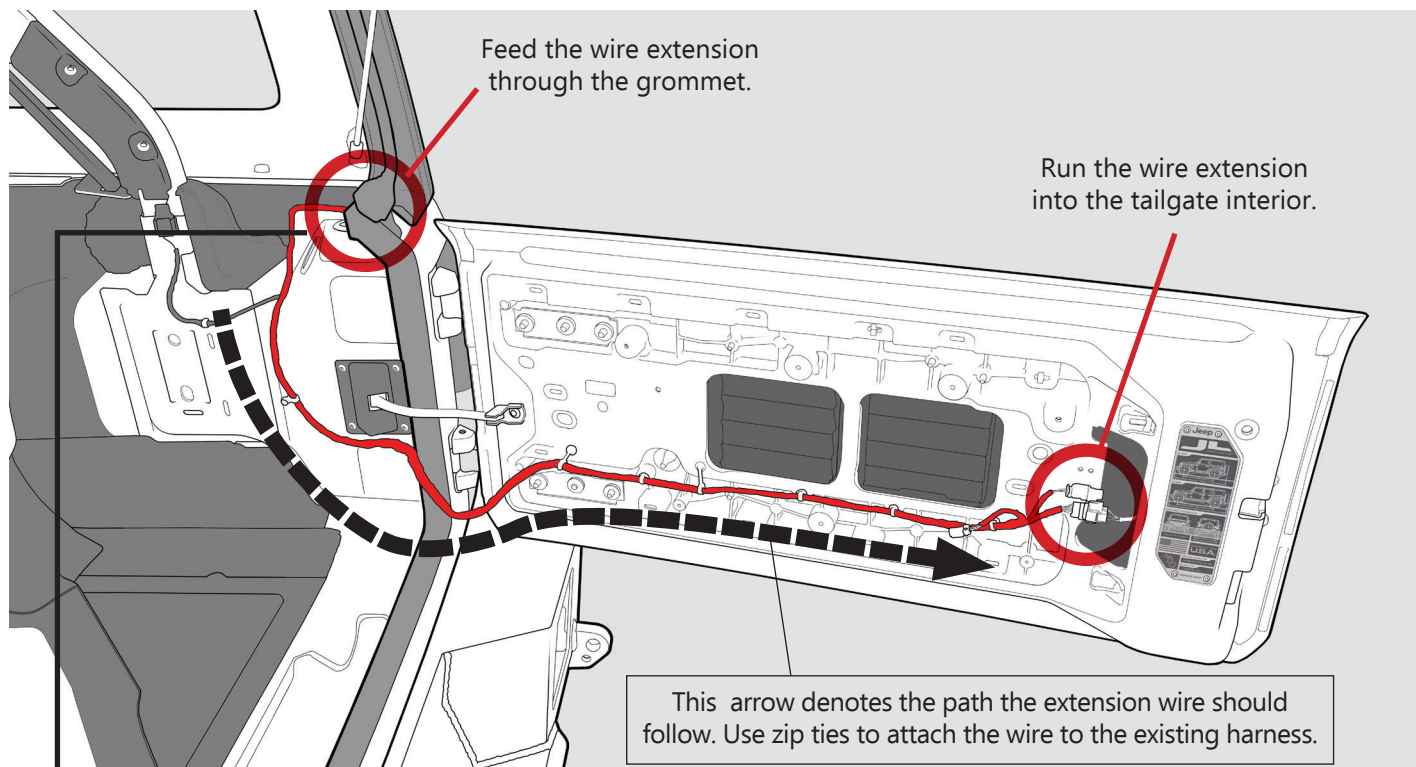

You can now feed to bolt light wire extension out through the grommet on the tailgate. You will need to make a small hole or cut in the grommet to get the wire out of the tailgate.

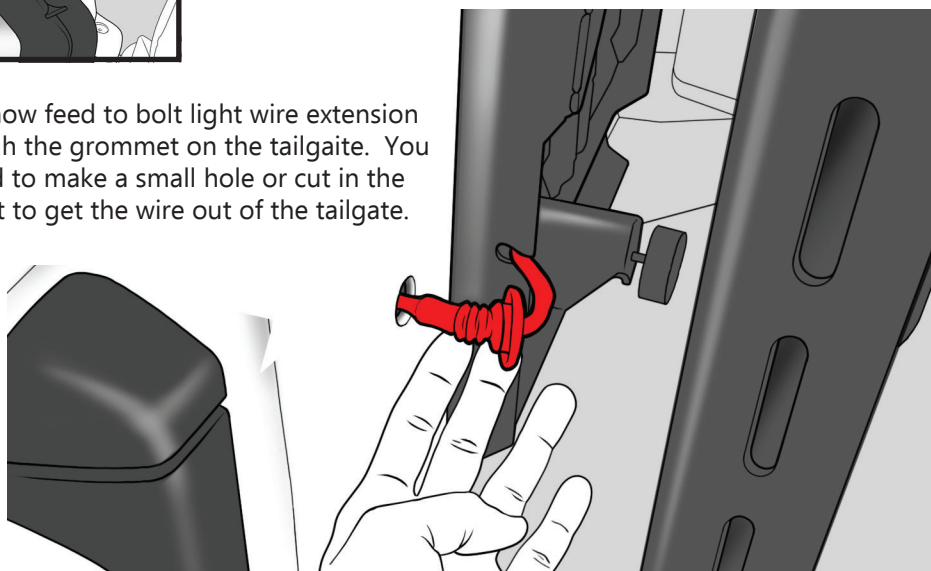

Feed the wire extension through the wheel. Be sure to leave some slack in the wire so you can remove the license plate assembly easily if you need too. You may use the barrel connectors provided with the bolt light kit to complete the installation.







**Completed Installation!**

## INSTALLATION ON JEEP JL DESTROYER TIRE CARRIER


Follow the instructions above for assembling the 3rd Brake Light and the Spare Tire License Plate Frame and install onto your spare tire. Install your spare tire as you normally would onto the Destroyer Tire Carrier and complete the assembly.

### TO EXTEND 3RD BRAKE LIGHT WIRING:

Cut the rubber grommet that is attached to the 3rd Brake light wire where it exits the tailgate. Pull the entire wire harness into the tailgate interior and replace the rubber grommet. Cut off the 3rd Brake Light plug. Leave enough wire to allow splice connection later. You can use included butt splice connectors and wire to extend the wiring.

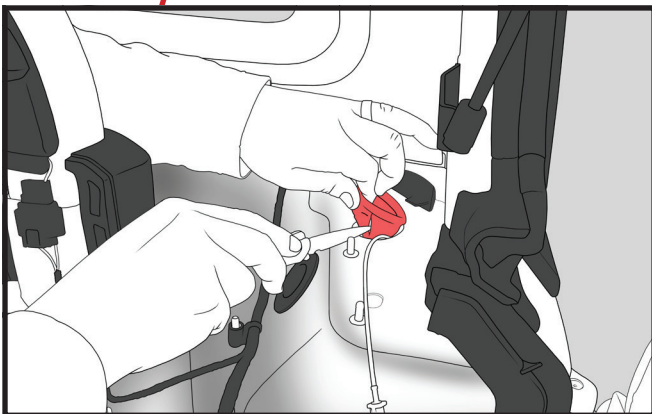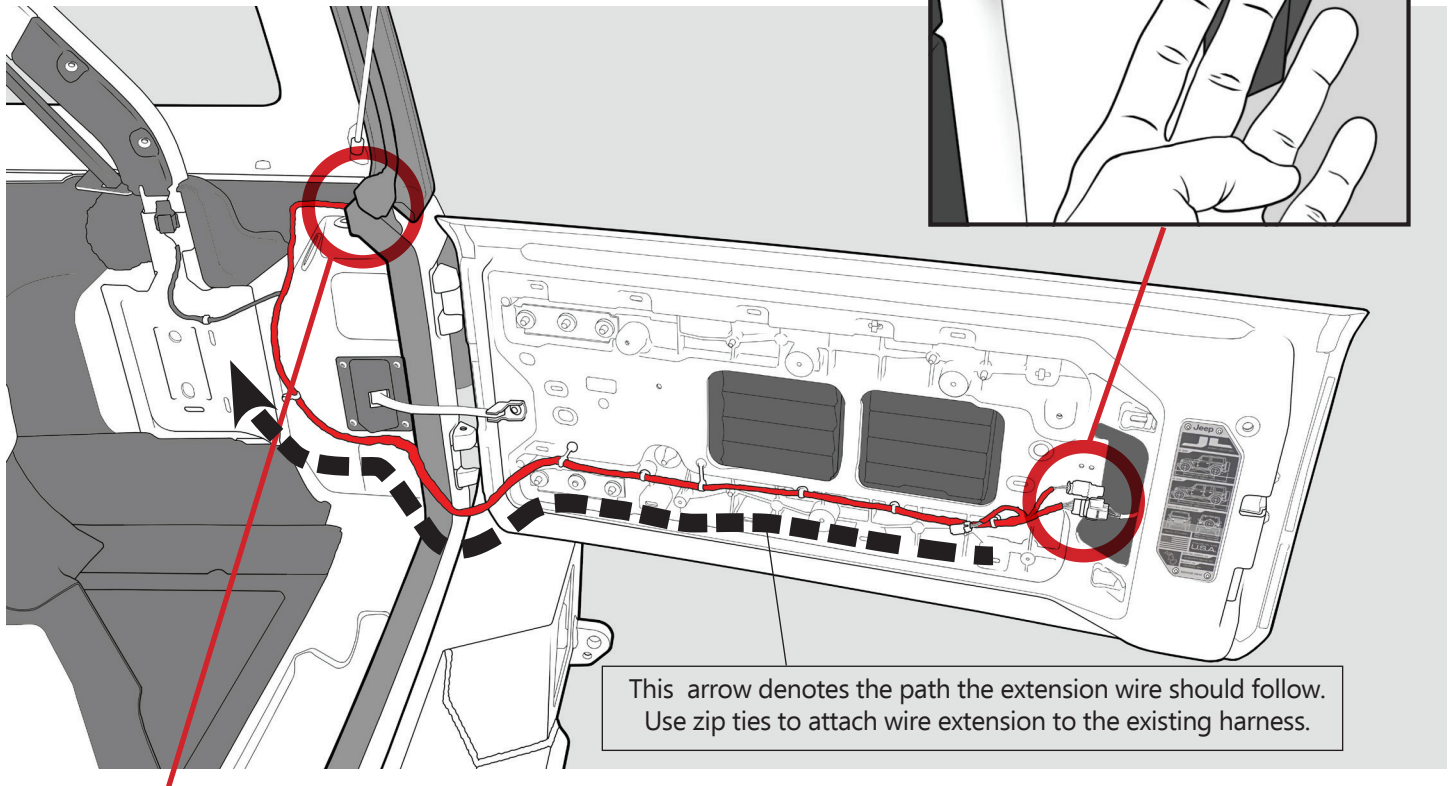

You will need to make an incision/small hole in the grommet shown (on top) in order to feed the wire extension through the tail light area.

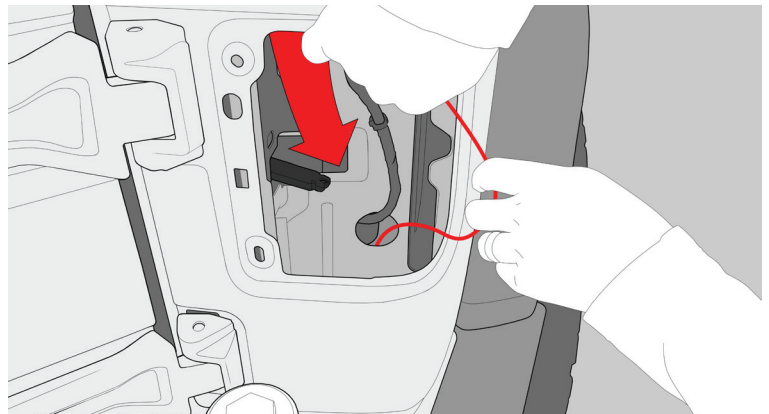


Feed the extension wire down through the hole indicated, you should see the wire come out under the Jeep. You can use a flashlight to help find it.

**Recommended Installation for wiring license plate  
bolt lights \*sold separately\*.**




Location of rear bumper wire harness plug. Locate license plate light wires and tap into them to extend wiring across the inside of the bumper as shown. You can use the provided wire and butt connectors to make this extension.

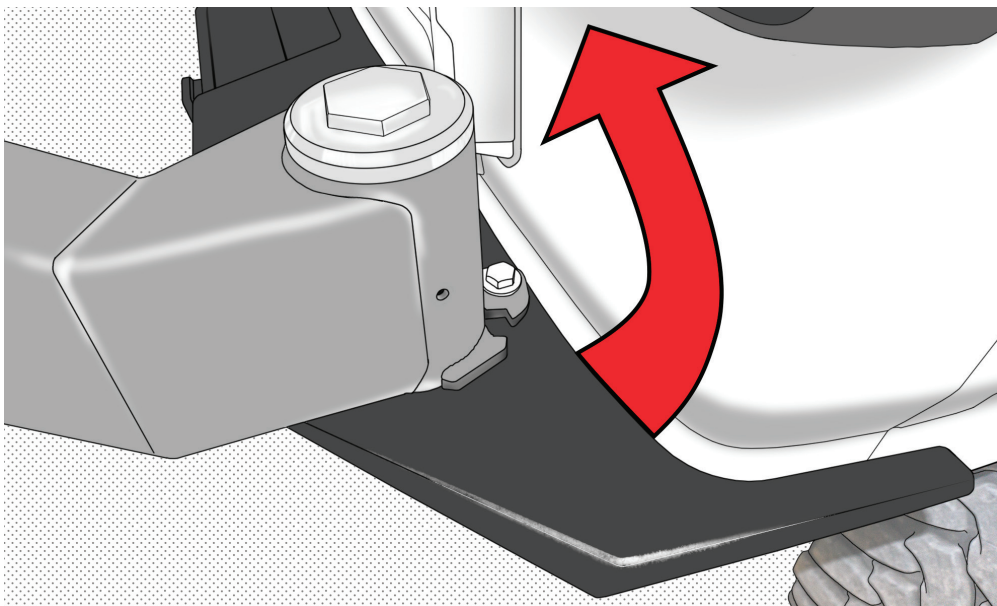

Both 3rd Brake Light and License Plate Light wire extensions should come up between the Jeep and the bumper, close to the base of the swing arm. You can use zip ties to secure the wire extensions under the Jeep and inside the bumper.

**\*\*You can run both wire extensions through the provided cable sheathing to help protect against abrasion.\*\***



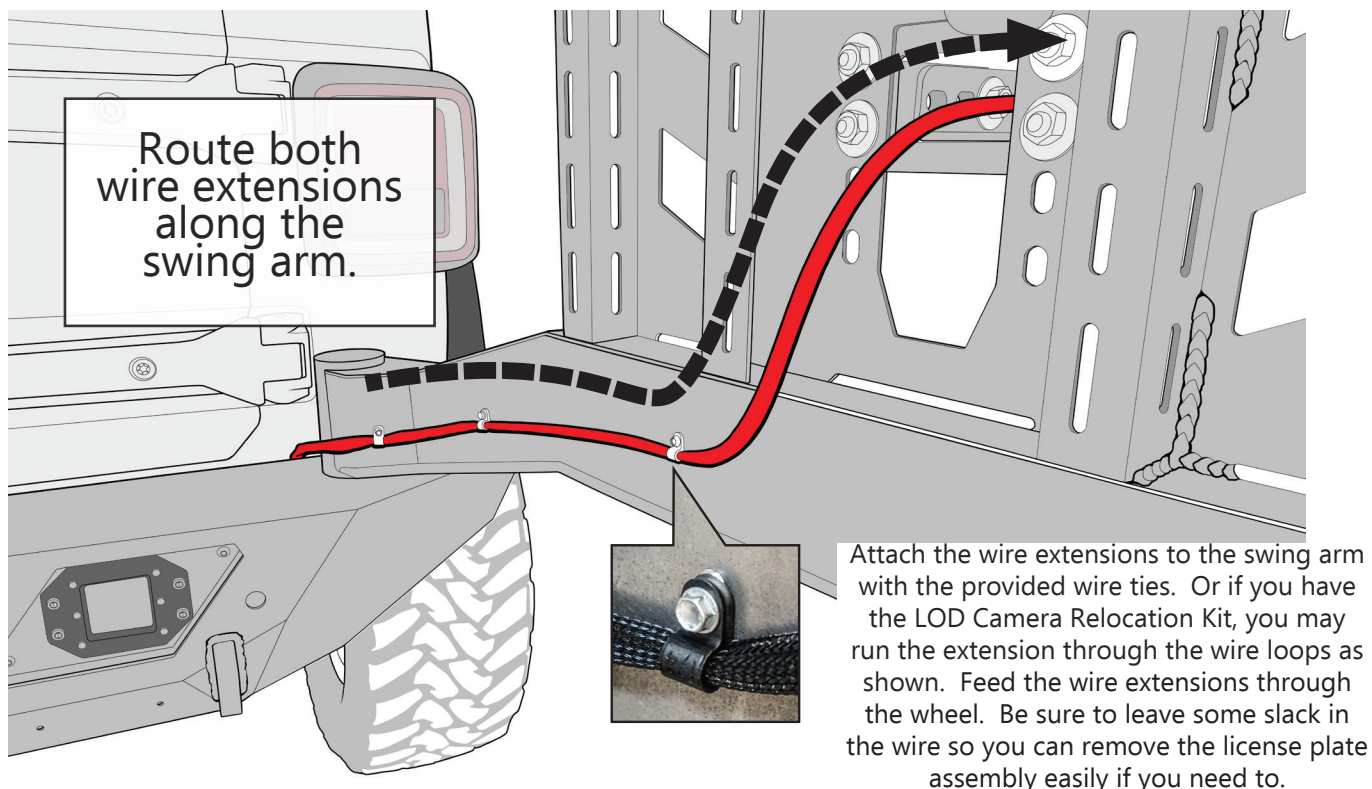

Reconnect the 3rd Brake Light connector to your wire extension using the supplied butt splice connectors and connect your Bolt Lights.



**Completed Installation!**

**ITEMS NOT SHOWN**

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
8	CON1004	COOL SEAL BUTT CONNECTOR 16ga	6
9	WT1000	WIRE TIE - BLACK - 5 1/2" LG	10
10	SL1000	EXPANDABLE POLYESTER SLEEVE Ø3/8"	10FT
11	WR1000	18/2 STRANDED WIRE - RED/BLACK	25FT

**NOTES:**

- JLP1810 = BARE STEEL OPTION
- JLP1811 = BLACK POWDER COAT OPTION

**UNLESS OTHERWISE SPECIFIED:**

DIMENSIONS ARE IN INCHES

TOLERANCES: ±0.010

FINISH: BLACK POWDER COAT

THREE PLACE DECIMAL ±0.005

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF LOD LLC. BY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF LOD LLC IS PROHIBITED.

**LOD LLC.**

DESCRIPTION:  
JEEP JL SPARE TIRE LICENSE PLATE  
RELOCATION KIT

DWG. NO. JLP1810  
JLP1811

SCALE: 1:3

SHEET SIZE: B

SHEET 1 OF 1




**JL JEEP**  
**SPARE TIRE LICENCE**  
**PLATE RELOCATION KIT**


SHIPPING SHEET

Packaged by:


On:

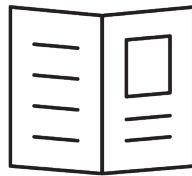


Instruction  
Booklet

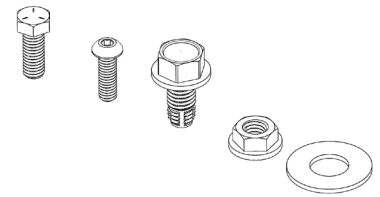


Bolt Kit  
(contents may vary)

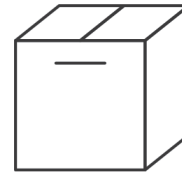


Hardware Kit  
(contents  
may vary)

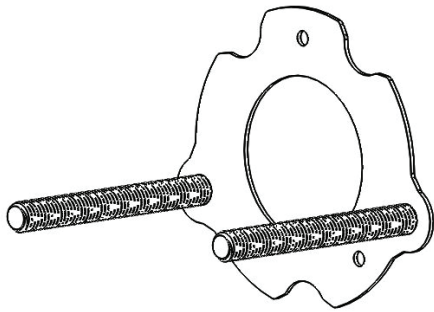

Spare Tire  
License Plate  
Mount

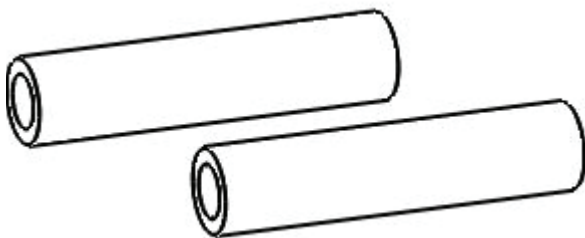

(x2)  
Ø1/2" Spacer Tubes  
3.75" Long

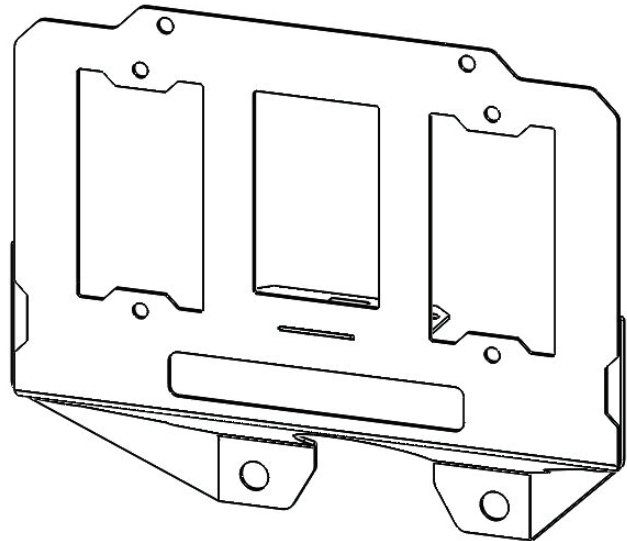

Jeep Spare Tire Relocation  
Weldment







**JL JEEP**  
**SPARE TIRE LICENCE**  
**PLATE RELOCATION KIT**

HARDWARE KIT

Packaged by:

\_\_\_\_\_

On:

\_\_\_\_\_



(x10)  
5.5" Zip Ties ☐



10ft Cable  
Sheath ☐



(x6)  
16ga Red Butt  
Connector ☐



25ft  
18/2 Stranded  
Red/Black Wire ☐




**JL JEEP**  
**SPARE TIRE LICENCE**  
**PLATE RELOCATION KIT**

Bolt Kit

Packaged by:



On:

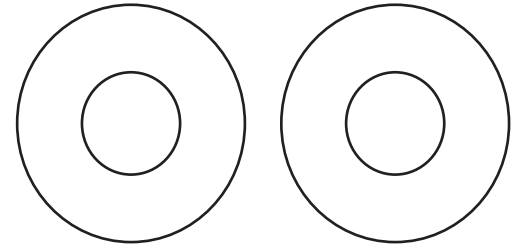


(x2)  
Flat Washer  
7/16" x 1.25"



(x4)  
Clip Nut

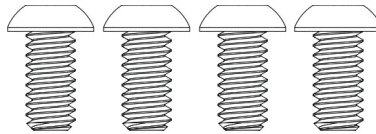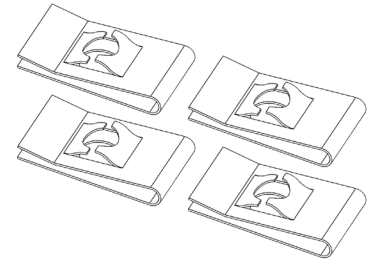

(x4)  
Button  
Head Screw  
1/4-20 x 1/2"

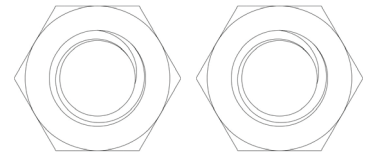

(x2)  
Hex Nut  
1/2-13

