

MBRP

3331008 / 2331008

MBRP Muffler Installation Instructions

2014-UP


Yamaha Viper (All Models)

2014-2019

Arctic Cat 7000 Series

Note: Local regulations may limit or prohibit modification to your snowmobile's emissions system and/or the sound levels that it generates. It is your responsibility to be aware of restrictions that may apply to your intended use of this product.

1. Remove the O₂ Sensor from the existing exhaust pipe.
2. Remove the bolts attaching the muffler to the exhaust front pipe. (Set these bolts safely aside so that they can be reused.)
3. Remove the spring on the backside of the muffler.
4. Remove the stock muffler from the belly pan. Be careful not to damage the gasket at the muffler inlet.
5. Remove the rubber bushings from the stock muffler and transfer them onto MBRP muffler.
6. Install the MBRP muffler in the same location as the original muffler and attach the spring to the spring tab. Reuse the stock gasket between the exhaust front pipe and the muffler inlet. If the gasket has been damaged, contact your local dealer for a replacement. Reuse the stock hardware to secure the muffler to the turbo downpipe.
7. Install the stock O₂ sensor into the provided bung on the MBRP muffler.

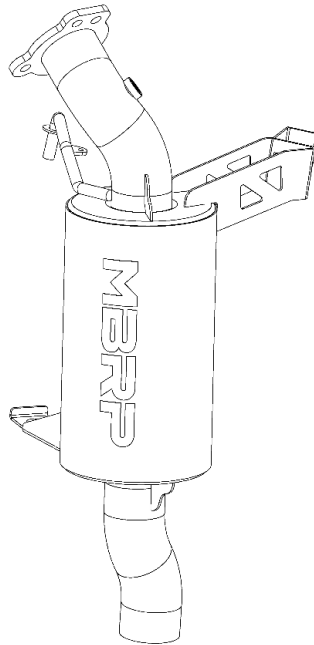

CAUTION: DO NOT touch the muffler while the snowmobile is running or shortly after it has run, as it may result in personal injury.

MBRP Ltd. warranty applies for a two (2) year period from the date of purchase to defects in product material and workmanship and is to the original purchaser on record and for the original vehicle for which it was designed and installed. This warranty is limited, at MBRP Ltd.'s sole determination, to the repair or replacement of defective product only and does not include the cost of removal or re-installation, damage by accident, abuse, misuse or misapplication or any consequential damages however they may arise. Determination of warranty coverage shall be at the discretion of an authorized MBRP Ltd. quality engineer.