

AC-9219-05

SHOCK GUARDS

2024-UP CAN-AM MAVERICK R


2020-2023 CAN-AM MAVERICK TURBO RR

MAVERICK MAX TURBO RR

2019-2023 CAN-AM MAVERICK MAX TURBO

MAVERICK TURBO, AND MAVERICK MAX TURBO R

MBRP®

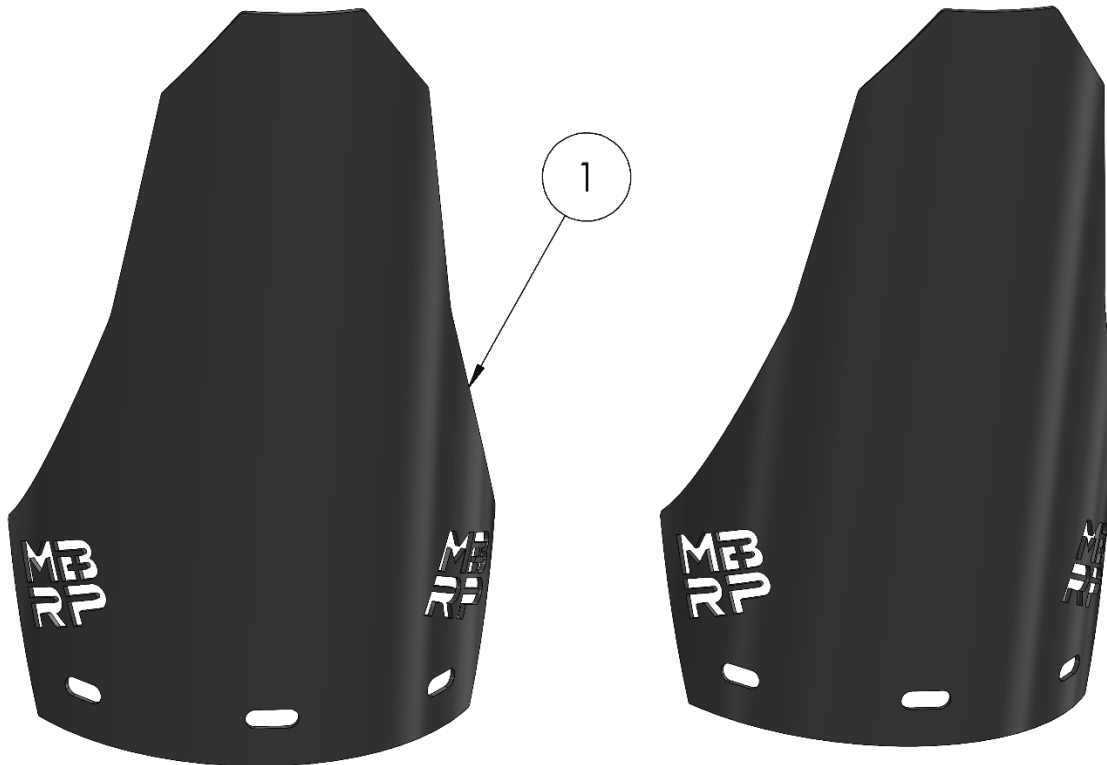

ITEM	DESCRIPTION	QTY
1	SHOCK GUARDS, BLACK	2

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

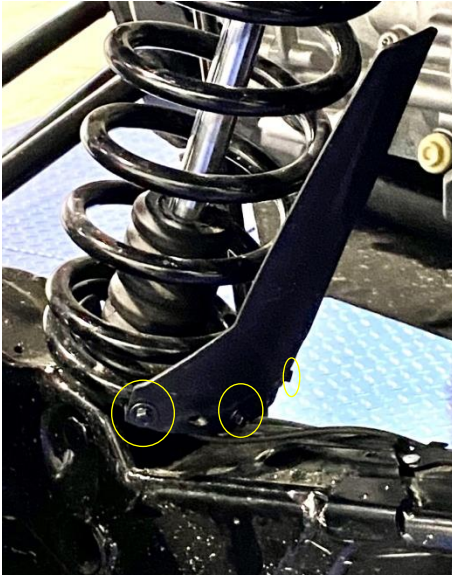


FIGURE 1

REMOVAL OF STOCK SHOCK GUARDS

1. On both sides of the vehicle, remove the three hex head screws holding on the shock guard. There will be 3 bolts per shock guard. **Refer to Figure 1.**

INSTALLATION OF MBRP SHOCK-GUARDS

1. Line up the lower 3 mount holes (on the inside of the guard) and mate them with the outside of each mounting tab. There will be an outside tab, middle tab, and inside tab.
2. Using the OEM hardware, insert one screw into each hole and tighten fully.
Refer to Figure 2.



FIGURE 2