


SL1002

2023-2025 SKI-DOO/LYNX
G5 TRAIL/BACKCOUNTRY
ACCESSORY LIGHT KIT

MBRP®

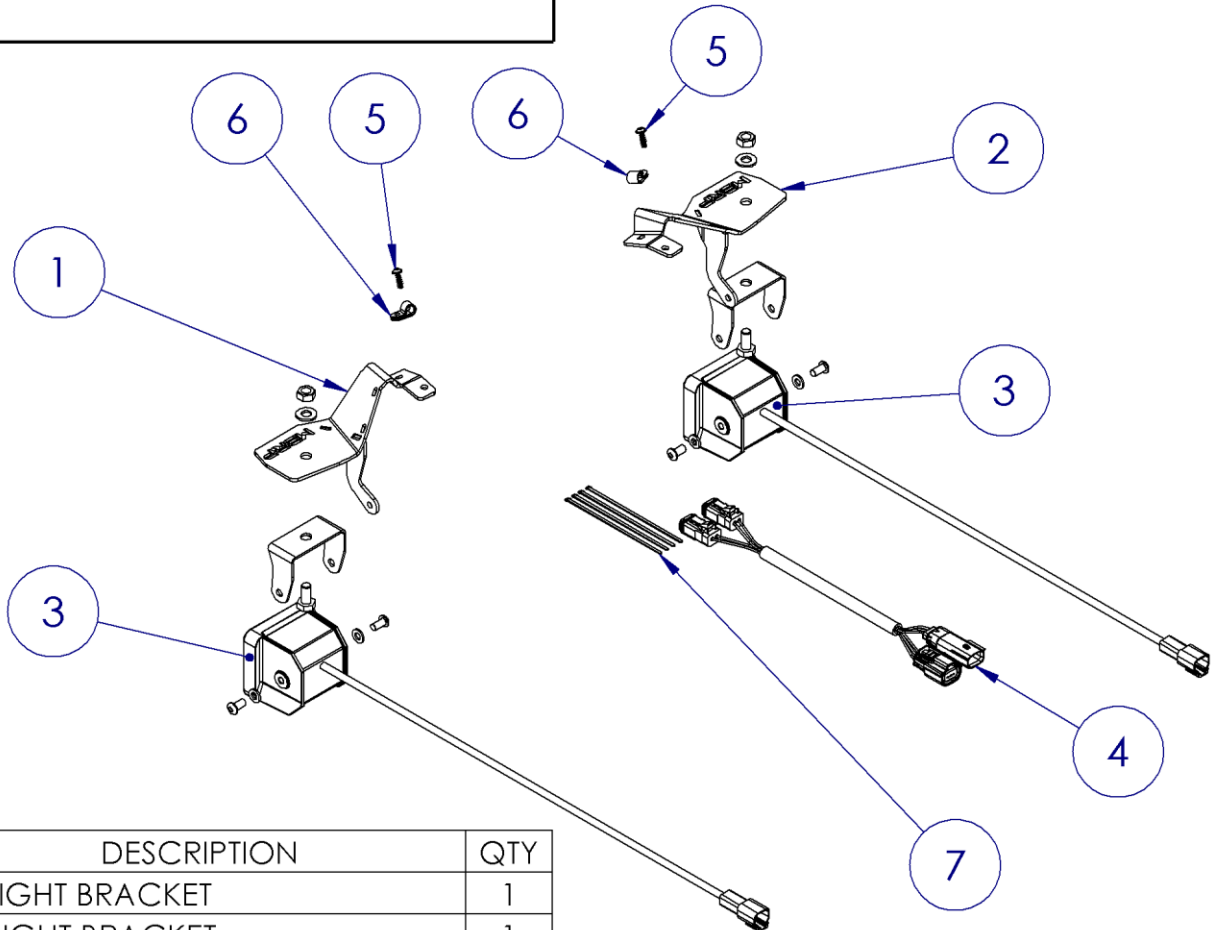

ITEM	DESCRIPTION	QTY
1	LH LIGHT BRACKET	1
2	RH LIGHT BRACKET	1
3	LIGHT ASSEMBLY	2
4	WIRING HARNESS	1
5	M4X14 SCREW	2
6	1/4" P CLAMP	2
7	CABLE TIE	4

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before installation:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

1. Remove both side panels, windshield, storage compartment lid and the steering column access panel located between the gauges and steering column. Disconnect the 2 wiring connectors and remove the 2 stainless screws.
Refer to Figure 1.
2. Remove 2 Stainless screws, one on each side that secure the hood to the chassis. Loosen the intake tube clamp and remove the hood by sliding the assembly forward.
Refer to Figure 2.
3. Unplug the accessory power connector located above the air intake from its storage socket. Connect the **Wiring Harness** to this accessory power connector. The other connector on the **Wiring Harness** is available to supply power to additional accessories. If not required, plug it into the storage socket. Temporarily route the light connectors beside the steering column.
Refer to Figure 3.
4. Reinstall the hood assembly.
5. Remove the front air intake screen screws, and the stainless screws beside the storage compartment. Install the **LH Light Bracket** and **RH Light Bracket**, loosely install the screws.
Refer to Figure 4 and 5.
6. Assemble both **Light Assemblies** and mount them to the **LH Light Bracket** and **RH Light Bracket**.
7. Install the $\frac{1}{4}$ " **P Clamps** onto the light wires and secure them through the bracket using **M4x14 Screws**. Route the wires exactly as shown. Secure the light wires to the brackets using **Cable Ties**. **DO NOT OVERTIGHTEN**
Refer to Figure 6.
8. Remove the gauge assembly from the hood and using a Dremel tool or similar cut wire access slots beside the storage compartment.
Refer to Figures 7 and 8.

MBRP



Figure 6

9. Route the wires through the slots and into the area behind the gauges. Connect both **Light Assemblies** to the **Wire Harness**. Reinstall the gauges, storage compartment lid, and steering column access panel. Refer to **Figures 9 and 10**.

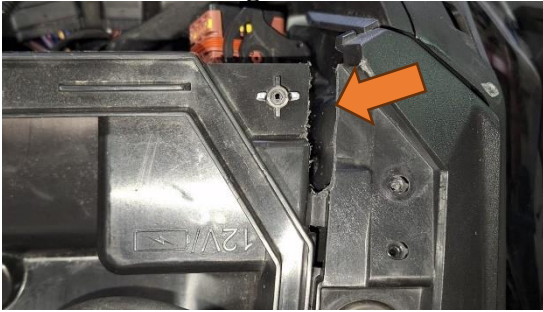


Figure 7

10. Verify the wiring is routed outboard of the windshield mounting grommets before installing the windshield. Refer to **Figure 8**.



Figure 8



Figure 9



Figure 10

Congratulations! You are ready to experience the improved performance of your **MBRP** Accessory Lighting kit. We know you will enjoy your purchase!