


SL4002

2022-UP POLARIS MATRYX RMK ,
ACCESSORY LIGHT KIT

MBRP®

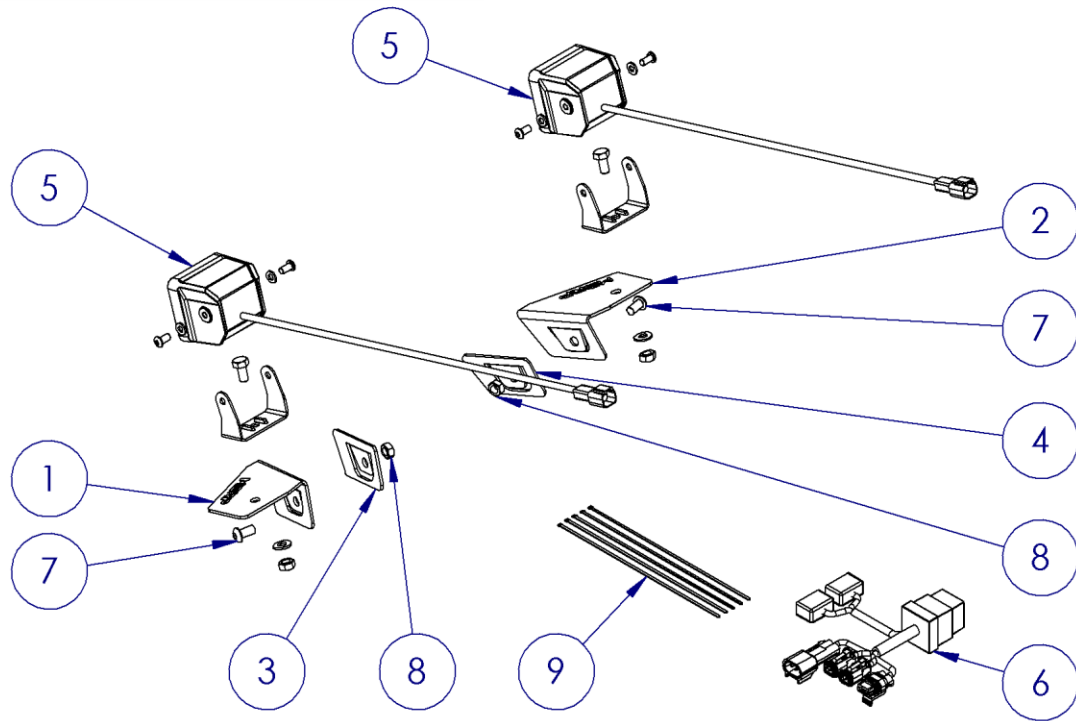

ITEM	DESCRIPTION	QTY.
1	LH BRACKET	1
2	RH BRACKET	1
3	LH BACKER	1
4	RH BACKER	1
5	LIGHT ASSEMBLY	2
6	WIRING HARNESS	1
7	M8x16 BHCS	2
8	M8 HEX NUT	2
9	CABLE TIE	5

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

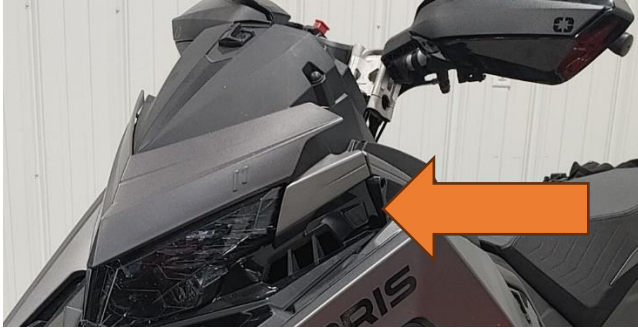


Figure 1

Remove both side panels and the upper hood assembly before following the steps below.

1. Remove the hole plugs from both sides of the hood assembly.
Refer to Figure 1.



Figure 2

2. Install the **LH Bracket** and **LH Backer** using a **M8x16 BHCS** and **M8 Hex Nut** through the hole on the left side of the hood assembly. Be sure the folded tabs on the brackets align correctly with the hood before tightening.
Refer to Figures 2 and 3.

3. Repeat step 2 for the **RH Brackets**.



Figure 3

4. Install both **Light Assemblies** onto the brackets using the supplied hardware.

5. Disconnect the OE headlight connector on the hood assembly. Install the **Wire Harness** between the OE connector and the headlight housing. Connect the 12v accessory power connector on the OE wiring harness to the 2 pin connector on the **Wire Harness**.
Refer to Figures 4 and 5.

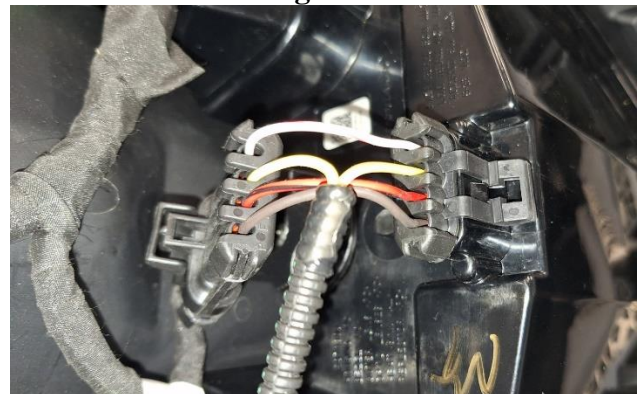


Figure 4

MBRP



Figure 5



Figure 6

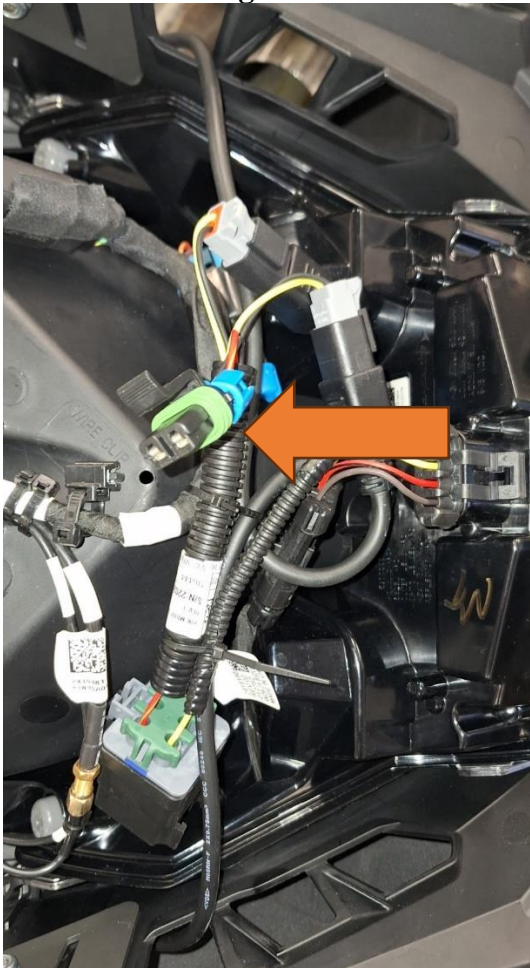


Figure 7

6. Route the Light Assembly wires through the vents.
Refer to Figure 6.
7. Connect the Light Assembly wires to the **Wiring Harness**. Secure the **Wiring Harness** to the OE wiring using the supplied **Cable Ties**.
Refer to Figure 7.

NOTE: There is a 2 pin accessory power connector provided on the **Wiring Harness** to allow for additional accessories to be installed.

Refer to arrow in Figure 7.

8. Reinstall the hood and both side panels. The accessory lights will switch on automatically during Hi Beam use.
9. Adjust both lights to provide desired light coverage.

Congratulations! You are ready to experience your **MBRP** Accessory Lighting kit. We know you will enjoy your purchase!

