


# AC-9219-04

2024-UP CAN AM MAVERICK R,  
ROCK SLIDERS

# MBRP®

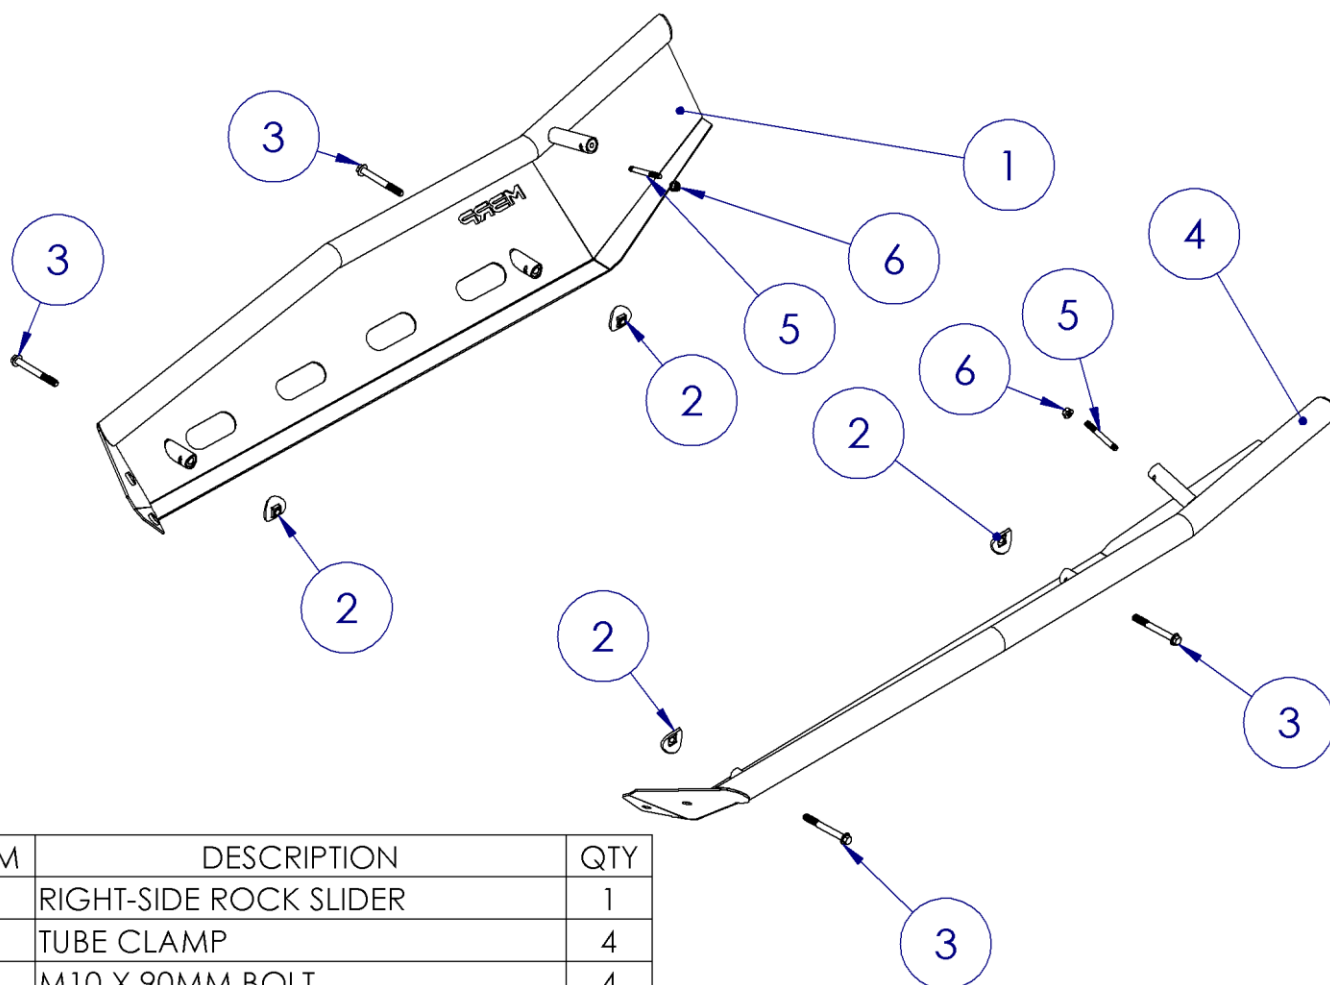

| ITEM | DESCRIPTION            | QTY |
|------|------------------------|-----|
| 1    | RIGHT-SIDE ROCK SLIDER | 1   |
| 2    | TUBE CLAMP             | 4   |
| 3    | M10 X 90MM BOLT        | 4   |
| 4    | LEFT-SIDE ROCK SLIDER  | 1   |
| 5    | M8 STUD                | 2   |
| 6    | M8 FLANGE NUT          | 2   |

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

# MBRP



Figure 1



Figure 2

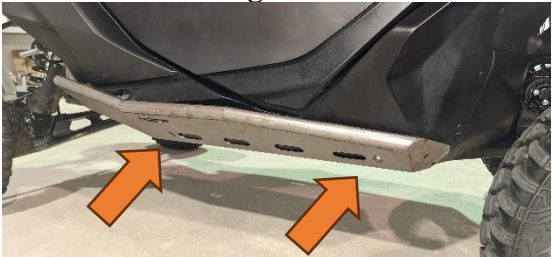


Figure 3

## Installation

1. Install the shorter, threaded end of the **M8 Stud** into the upper rear mount on the **Right-Side Rock Slider**.  
**Refer to Figure 1.**
2. Install the **M8 Stud** on the **Right-Side Rock Slider** through the rear upper mount hole on the chassis of the SxS. Loosely install the **M8 Flange Nut**.  
**Refer to Figure 2.**
3. Install both lower **M10x90 Bolts** through the **Right-Side Rock Slider**, and through the lower chassis tube.  
**Refer to Figure 3.**
4. Install both **Tube Clamps** and loosely thread the **M10x90 Bolts** into them. The **Front Tube Clamp** is installed from below through an access hole in the underpan. The **Rear Tube Clamp** is installed through the interior, under the seat.  
**Refer to Figures 4 and 5.**
5. Tighten all hardware starting with the **M10x90 Bolts**.
6. Repeat steps 1 through 5 for the **Left-Side Rock Slider**.

# MBRP



**Figure 4**



**Figure 5**

**Congratulations!** You are ready to use your **MBRP** Rock Slider kit. We know you will enjoy your purchase!