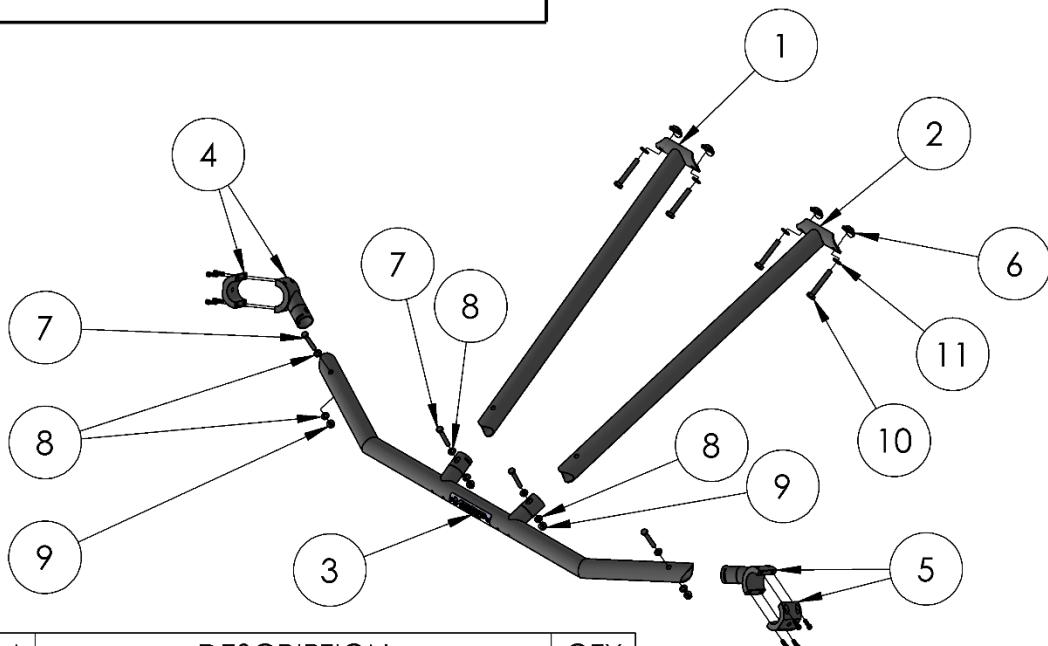
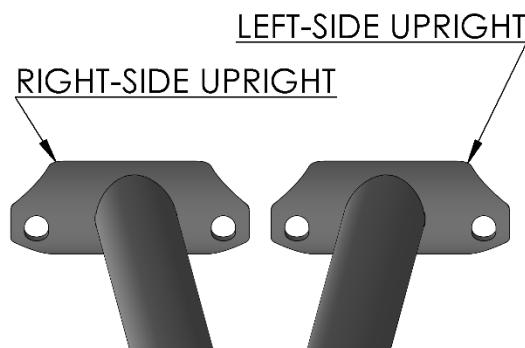


**AC-9219-07**2024-UP CAN-AM MAVERICK R,  
2024-UP CAN-AM MAVERICK R MAX,  
FRONT-INTRUSION BAR**MBRP**

ITEM	DESCRIPTION	QTY
1	RIGHT-SIDE UPRIGHT	1
2	LEFT-SIDE UPRIGHT	1
3	CROSSBAR	1
4	RIGHT-SIDE CROSSBAR MOUNT	1
5	LEFT-SIDE CROSSBAR MOUNT	1
6	TUBE NUT	4
7	M8 X 60 MM HEX BOLT	4
8	M8 WASHER	8
9	M8 FLANGE NUT	4
10	M10 X 70MM HEX BOLT	4
11	M10 FLAT WASHER	4

Refer to this **LOT NUMBER** when contacting customer service: \_\_\_\_\_**PLEASE READ BEFORE STARTING INSTALLATION**

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

THOROUGHLY APPLY ANTI-SEIZE COMPOUND TO ALL  
TUBE CLAMP AND TUBE NUT THREADED CONNECTIONS

1. Disassemble the tube clamps for the **Crossbar Mounts**, retain all for installation.

2. Layout and slide all couplings together, loosely fasten the **Uprights** to the **Crossbar**, do not tighten, leave the **Crossbar Mounts** unfastened, they need to pivot for the installation. Ensure to have the left and right-side **Uprights** located correctly. There are L and R indicators on the inside of the upright mounting tubes that nest on the roof bar. The **Upright** tubes are offset up and to the center about the mounting slots.

Refer to Figure 1 and 2 and Page 1.

3. Pivot the **Crossbar Mounts** and rest the **Front-Intrusion Bar** assembly on the roll cage pillars.

4. Lift the **Upright** mounts up to the roof bar and loosely bolt in place using supplied **M10 Bolts**, **M10 Washers** and **Tube Nuts**. Refer to Figure 3 and 4.

5. Loosely reassemble the tube clamps for the **Crossbar Mounts** to locate the **Crossbar** in the desired position, then install hardware fastening the **Crossbar** to the **Crossbar Mounts**.

6. Carefully align the **Front-Intrusion Bar** and begin tightening all hardware; Starting with the **Upright** to roof bar connections, followed by the **Crossbar** to **Upright** connections and finishing with the tube clamps for the **Crossbar Mounts**.



Figure 1



Figure 2



Figure 3



Figure 4



**Congratulations!** You are ready to begin using your **MBRP** Front-Intrusion Bar. We know you will enjoy your purchase.