


AC-9533-05

2018-2019 POLARIS RZR XP TURBO
2020-UP POLARIS RZR PRO XP
2022-2024 POLARIS RZR TURBO R SPORT
2022-UP POLARIS RZR PRO R
2025-UP POLARIS RZR PRO S

MBRP

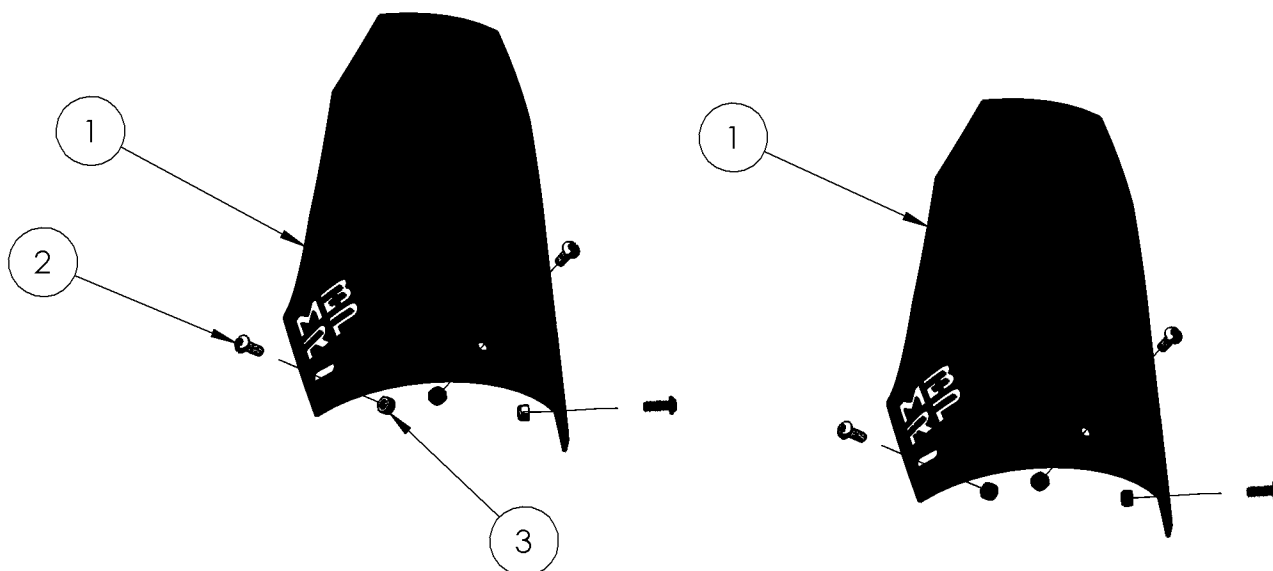

ITEM	DESCRIPTION	QTY
1	SHOCK GUARD	2
2	M5 BUTTON HEAD SCREW	6
3	M5 LOCK NUT	6

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP



FIGURE 1



FIGURE 2



FIGURE 3

REMOVAL OF STOCK SHOCK GUARDS

1. On both sides of the vehicle, drill out the rivets securing the shock guard (If your model does not have rivets, remove and set aside stock hardware). There will be 3 rivets per shock guard. **Refer to Figure 1.**

INSTALLATION OF **MBRP** SHOCK-GUARDS

1. Line up the lower 3 mount holes (on the inside of the guard) and mate them with the outside of each mounting tab. There will be an outside tab, middle tab, and inside tab.
2. Using either the OEM hardware or provided hardware, insert one screw into each hole and tighten fully. It is recommended to start with the center hole and then fasten the two outer holes.
Refer to Figure 2 and Figure 3.