


# SL5247-01

2023-UP FORD F250/F350/F450 SUPERDUTY,  
DITCH LIGHT BRACKETS

# MBRP®

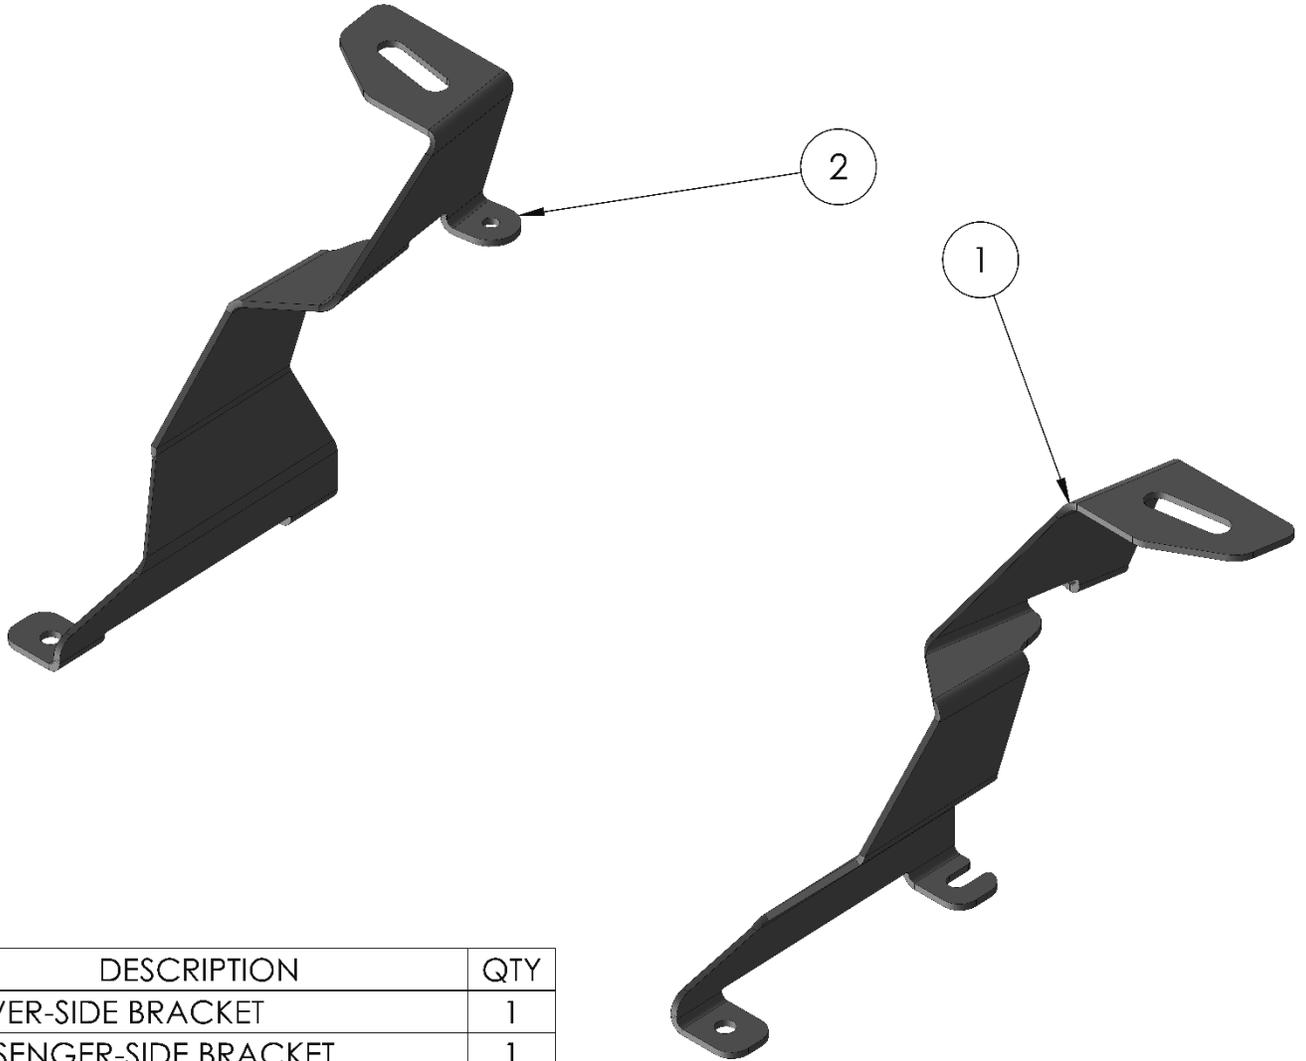

ITEM	DESCRIPTION	QTY
1	DRIVER-SIDE BRACKET	1
2	PASSENGER-SIDE BRACKET	1

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before installation;

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the product you have purchased is appropriate for your vehicle year, model and configuration.
- that the product will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit to your vehicle please contact your dealer before commencing installation.

# MBRP



Figure 1

1. Apply masking tape or stretch film along the edge of the fender where the brackets will be installed to protect the paint during installation.

## Bracket Installation

**Install the passenger-side assembly first to ensure proper clearance and verify there is no interference with the hood, radio antenna, windshield or other vehicle components.**



Figure 2

2. Unscrew the radio antenna from its mount.  
**Refer to Figure 1.**
3. Open the hood, carefully but firmly release the clips shown in **Figure 2** securing the wiper cowl in place. Gently raise the wiper cowl access the bolts needed to mount the **ditch light brackets**. Do not fully remove the wiper cowl at this stage as the windshield wipers retain it in position. The ditch light brackets can be installed without complete removal of the wiper cowl.

**Optional:** For complete removal of the wiper cowl -

- Mark the windshield wiper positions on the windshield using tape.
- Lift each arm in the raised position.
- Pull outward on the locking tabs to release the wiper arms.
- Pull the wiper arms straight off the mounting shafts.
- Repeat for both wiper arms.

**Refer to Figure 2.**



Figure 3

4. Remove the 4 bolts marked in **Figure 3**. Use a 10mm socket for the fender mount bolt and a 7mm socket for the antenna mount bolts. Carefully reposition the antenna mount to allow installation of the bracket. Ensure the antenna signal wire remains undamaged and is not stretched or pinched during this step.

**Refer to Figure 3**

5. Using a 13mm socket, completely remove bolt 1 and loosen bolt 2 (do not remove for ease of installation).

**Refer to Figure 4.**



Figure 4

6. Slide the **Passenger-Side Ditch Light Bracket** between the hood hinge and fender. Position the slotted section of the bracket beneath the washer of bolt 2. Reinstall and fully tighten all the bolts removed or loosened in **Steps 4 and 5**.

**Refer to Figure 5.**

7. Repeat **Steps 4-6** on the Driver Side of the vehicle.

8. Reinstall the wiper cowl and radio antenna.

**Refer to Figure 6**

# MBRP



Figure 5



Figure 6

9. Ensure sufficient clearances with the hood, wipers, radio antenna and windshield in all hood positions (hood open and hood closed).



**Congratulations!** You've just unlocked a brighter, bolder way to stand out. With your new **MBRP** ditch-light brackets installed, your ride is ready for the lighting setup that will turn heads, cut through the dark, and maybe even spark a little envy.