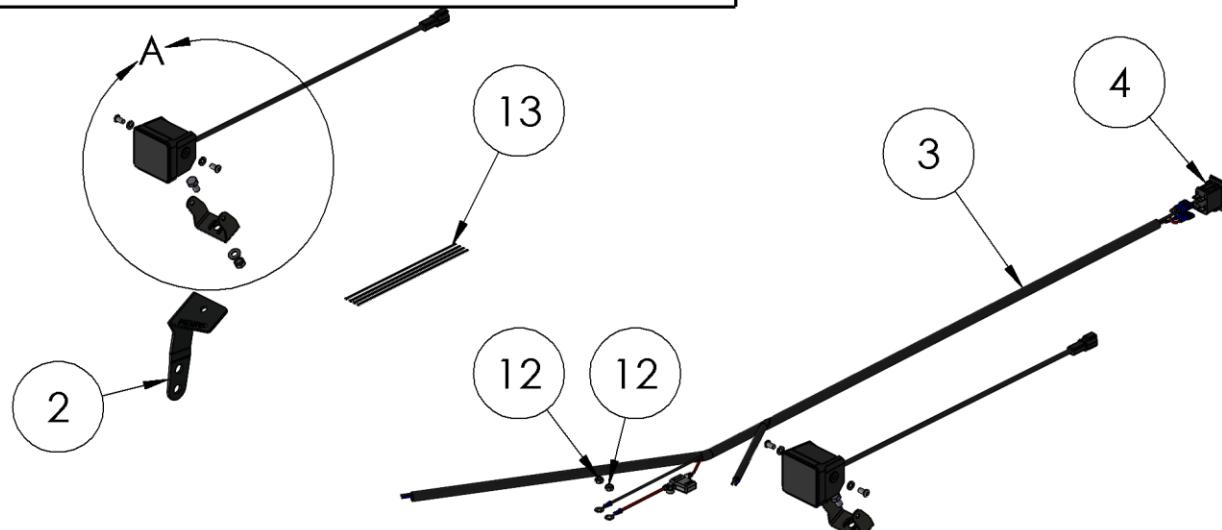
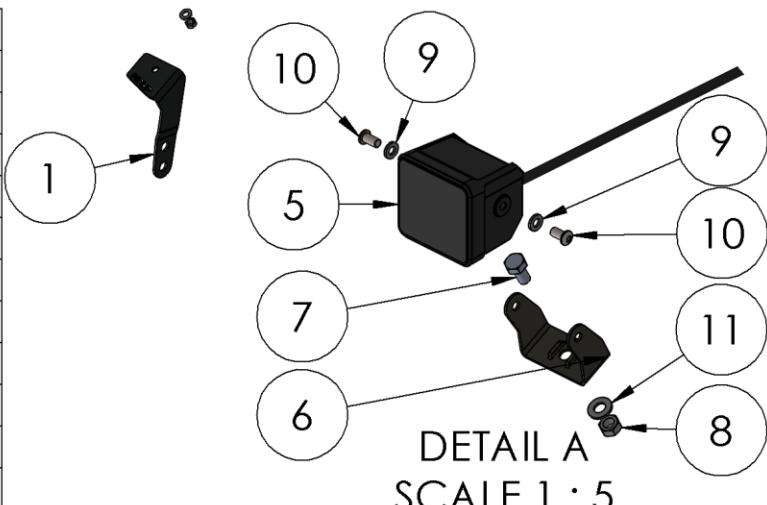


**SL9219-01**2024-UP CAN-AM MAVERICK R,  
PILLAR LIGHT KIT**MBRP**

ITEM	DESCRIPTION	SL9219-01 QTY
1	LEFT-SIDE LIGHT BRACKET	1
2	RIGHT-SIDE LIGHT BRACKET	1
3	WIRING HARNESS	1
4	SWITCH	1
5	LIGHT	2
6	LIGHT BRACKET	2
7	M8 X 16 HEX BOLT	2
8	M8 HEX NUT	2
9	M6 LOCK WASHER	4
10	M6X12 BUTTON HEAD SCREW	4
11	M8 WASHER	2
12	M6 NUT	2
13	CABLE TIE	4

DETAIL A  
SCALE 1 : 5

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

**PLEASE READ BEFORE STARTING INSTALLATION**

While MBRP has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before installation;

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the product you have purchased is appropriate for your vehicle year, model and configuration.
- that the product will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit to your vehicle please contact your dealer before commencing installation.

## Installation

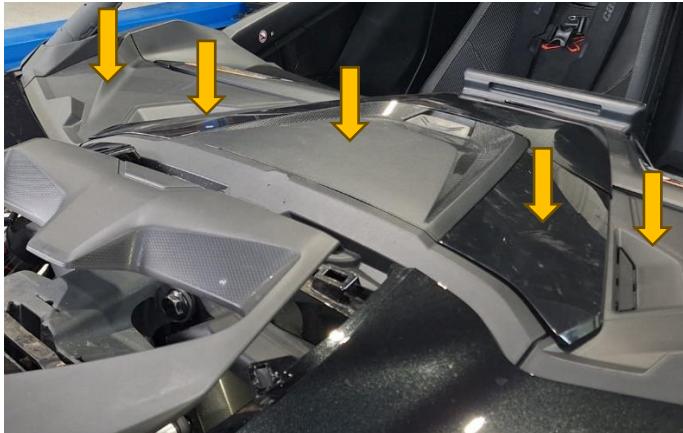


Figure 1



Figure 2

1. Disconnect negative battery lead.
2. Remove the 5 dash panels to allow access for wiring installation.  
**Refer to Figure 1.**
3. Open the Right-Hand access panel at the base of the A pillar. Remove both lower bolts and reinstall securing the **Right-Side Light Bracket**.  
**Refer to Figure 2.**
4. Assemble and install a Light Assembly as per Detail 'A' on page 1 and **Figure 2**.
5. Route wiring under **Right-Side Light Bracket** and through the access hole at arrow location.  
**Refer to Figure 2.**
6. Repeat steps 3-5 for **Left-Side Light Bracket**.



Figure 3



Figure 4

7. Route the spade connector end of the **Wiring Harness** through the access hole beside the master cylinder reservoir. Refer to Figure 5.
8. Pull the **Wire Harness** through the firewall and route it to the center console. Remove the 3-place switch bezel and remove one of the cover plates. Install the **Switch** into the bezel. Connect spade terminals to the **Switch**. Be sure to follow color code/pin assignments in Figure 6. Reinstall Switch Bezel. Refer to Figures 4, 5 and 6.

# MBRP



Figure 5

PIN	COLOR
2	RED
3	BLUE
6	RED
7	BLACK
8	BLACK

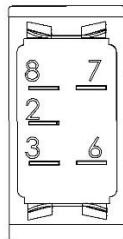


Figure 6

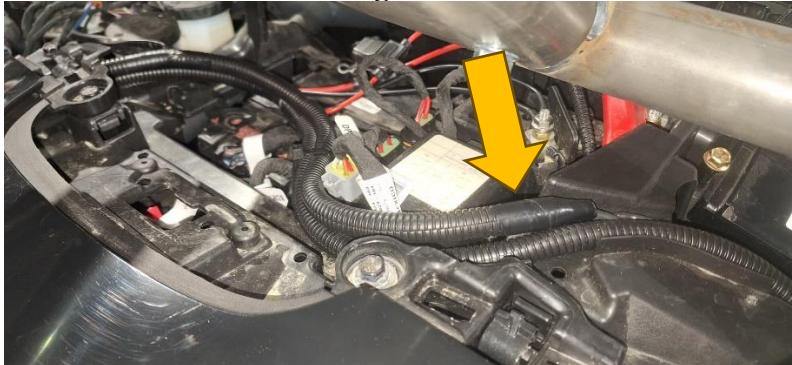


Figure 7

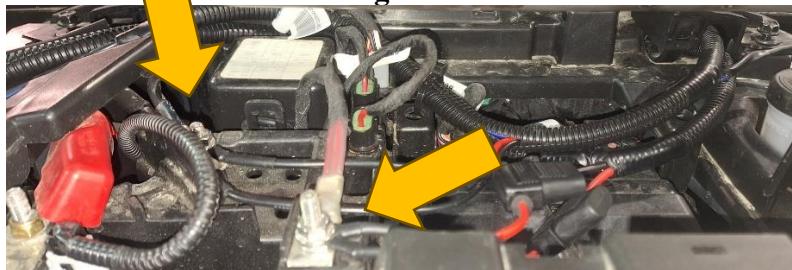


Figure 8

9. Route the wiring harness along the cowl in the wire trough and connect each of the lights.  
Refer to Figure 7.

10. Attach the positive red wire to the accessory power post, and the black wire to the negative ground post. Secure with **M6 Nuts**.  
Refer to Figure 8.

11. Secure the wiring harness along its full length with the supplied **Cable Ties**. Ensure it is clear of all steering and pedal components.

12. Install the dash panels removed in step 2.

13. Reconnect negative battery lead.

**Congratulations!** You are ready to experience the improved performance of your **MBRP** Accessory Lighting kit. We know you will enjoy your purchase!