
SL9533-02

PILLAR LIGHT KIT,
2022-2024 POLARIS RZR PRO R / TURBO R,
2022-2024 POLARIS RZR PRO R 4 / TURBO R 4

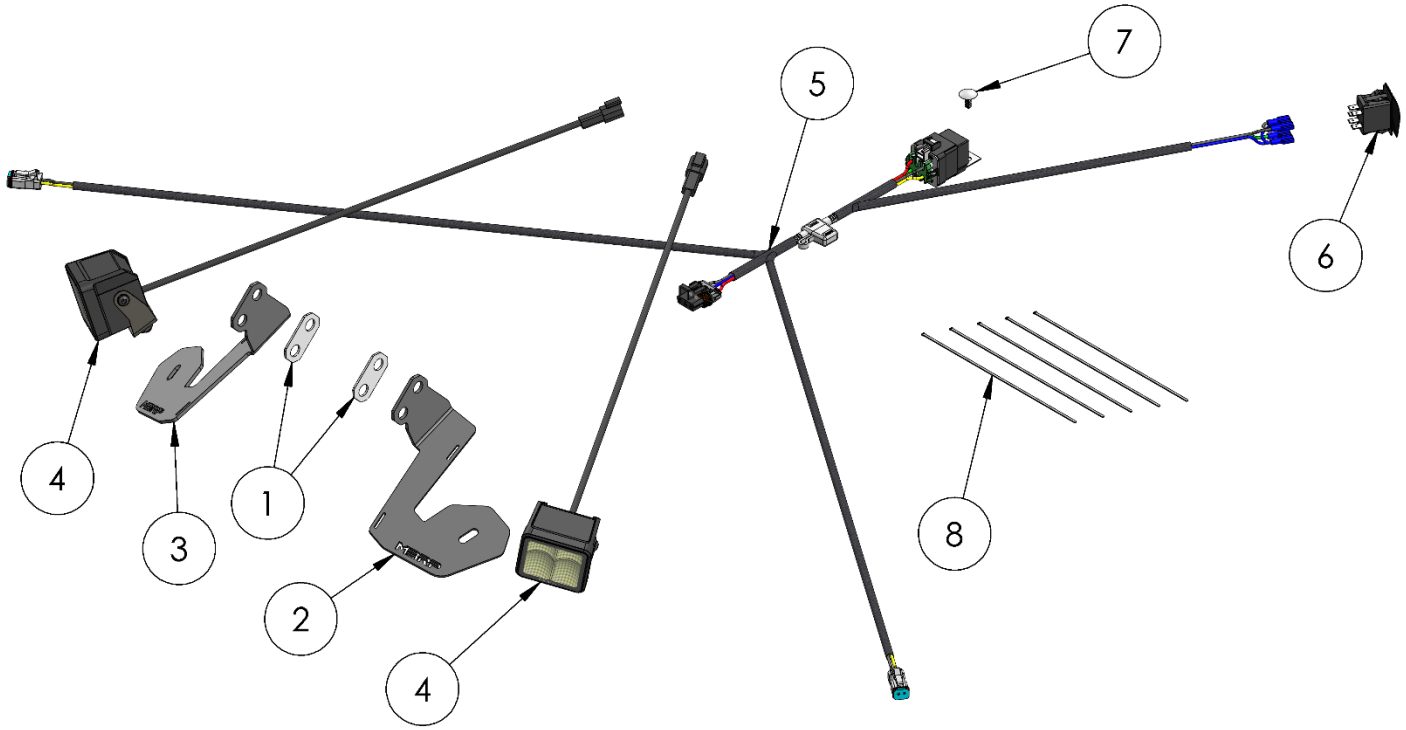

ITEM	DESCRIPTION	QTY.
1	SPACER	2
2	DRIVER-SIDE BRACKET	1
3	PASSENGER-SIDE BRACKET	1
4	LIGHT ASSEMBLY	2
5	WIRING HARNESS	1
6	SWITCH	1
7	BARBED PUSH-IN RIVET	1
8	8" CABLE TIE	5

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



Figure 1



Figure 2



Figure 3



Figure 4

COMPLETE BRACKET INSTALLATION ON ONE SIDE AT A TIME

1. Disconnect the negative battery cable.

2. Push up the A-pillar cover and disconnect the speaker.
Refer to Figure 1.

3. Install the **Wiring Harness** to the bus bar under the glovebox.
Refer to Figure 2.

4. Route the two long leads of the **Wiring Harness** to the area of the A-pillar covers. Remove the desired switch panel cover in the center console and route the spade connector ends of the **Wiring Harness** through it.

5. Connect the **Wiring Harness** spade terminals to the **Switch** following the wiring color and pin assignments. Push the **Switch** into the hole.
Refer to Figure 5.

PIN	COLOR
2	BLUE
3	GREEN
6	BLUE
7	BLACK
8	BLACK

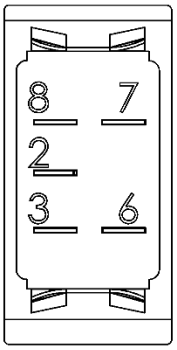


Figure 5

6. The fender must be removed to install the **Bracket**. Remove the fender by removing all 6lobe fasteners and push pins

7. Loosen both cab mounting bolts, then remove them. The cab frame may shift without the hardware in place. Retain all OE hardware for the installation.
Refer to Figure 3.

8. Install the **Light Assembly** on the bracket and secure with **Cable Ties** where required.

9. Loosely install the **Bracket** using one **Spacer** between the cab frame and the **Bracket**, routing the connector for the **Light Assembly** into the open area under the cab mounting location. All OE hardware is to be reused.
Refer to Figure 4.



Figure 6

10. Re-install the fender, then tighten the cab mounting bolts, paying attention to the position of the **Bracket**. Ensure space between the **Bracket** and the fender is maintained.
Refer to Figure 6.

11. Reconnect the speaker in the A-pillar cover and push the cover back down. Push up on the hood from underneath, inside the fender, to help tuck the cover back into place.

REPEAT STEPS 2-11 ON THE OPPOSITE SIDE OF VEHICLE

12. Mate the connectors from the **Light Assemblies** to the **Wiring Harness**. Secure all parts of the **Wiring Harness** and **Light Assembly** using **Cable Ties**. Ensure adequate clearance to all moving, sharp, and hot components is maintained. Reconnect the negative battery cable and adjust the **Light Assemblies** to the desired position.



Congratulations! You are ready to begin using your MBRP Pillar Light Kit.
We know you will enjoy your purchase.