


# MBRP®

## VT-9502

### CLUTCH VENT TUBE ASSEMBLY

2021 POLARIS SPORTSMAN 570 EPS/UTILITY LE & EPS/HUNTER/TRAIL (EXCL. BASE & UTILITY BASE)  
2022-2023 POLARIS SPORTSMAN 570 (ALL MODELS, EXCL. BASE)

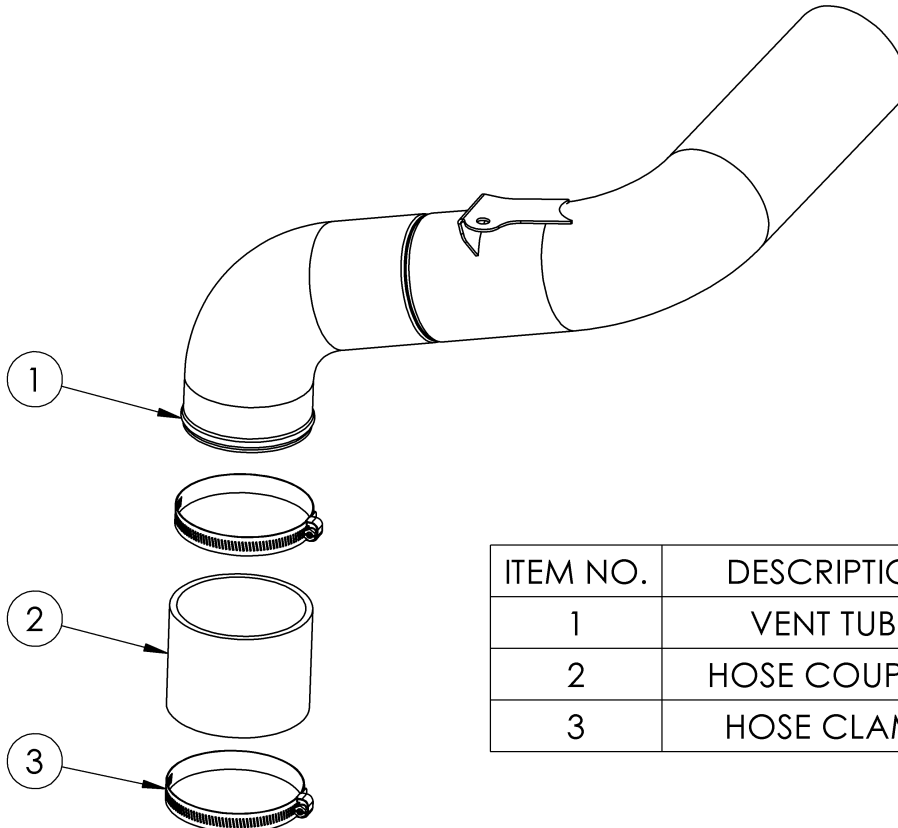

ITEM NO.	DESCRIPTION	QTY.
1	VENT TUBE	1
2	HOSE COUPLER	1
3	HOSE CLAMP	2

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

### PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

# MBRP

## Installation of MBRP Clutch Vent Tube

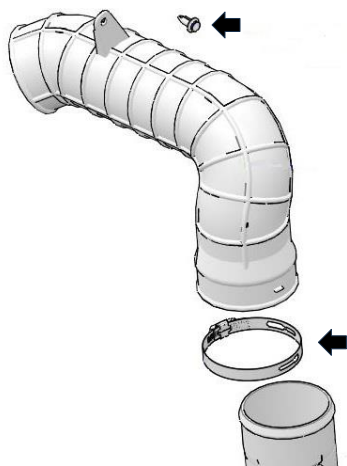


Figure 1

1. Loosen or remove the hose clamp from the clutch cover outlet, then remove the push-pin fastener at the top of the stock vent tube. Remove the vent tube. **Refer to Figure 1.**

2. Place a **Hose Clamp** over the clutch cover outlet, then slide the **Hose Coupler** onto the outlet until it touches the stop. Position the **Hose Clamp** onto the **Hose Coupler** just below the raised ring on the outlet, and tighten it in place.

3. Remove the nut from the frame on the underside of the rear deck (the screw will need to be held from the topside of the deck). **Refer to Figure 2.**

**Refer to Figure 2.**

4. With the second **Hose Clamp** placed over the inlet end of the **Vent Tube**, insert the **Vent Tube** into the **Hose Coupler**. Position the **Vent Tube** to align the mounting bracket hole with the screw from the rear deck. Replace the nut to hold the **Vent Tube** in place, but do not fully tighten it. **Refer to Figure 2.**

5. Adjust the **Vent Tube** to the optimal position, then place the **Hose Clamp** over the **Hose Coupler** and tighten it to the **Vent Tube**. Finally, fully tighten the rear deck screw and nut.

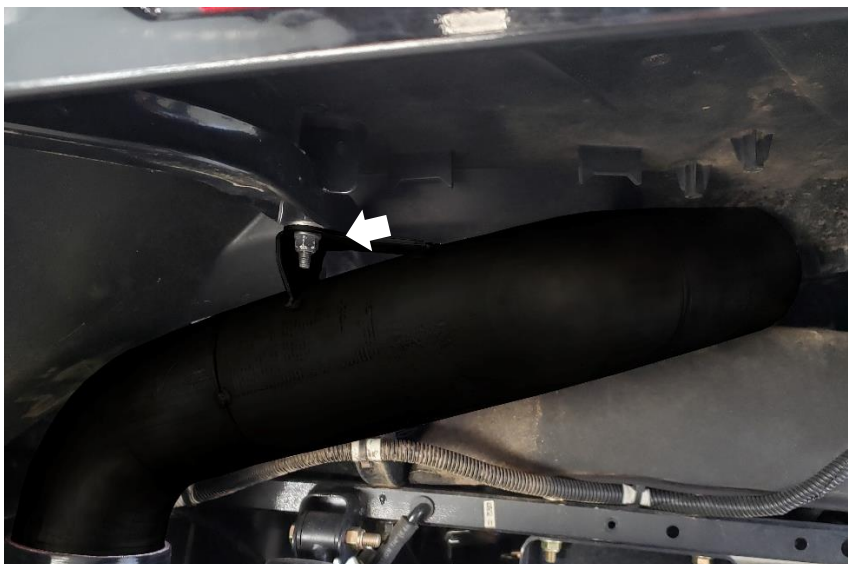


Figure 2

**Congratulations!** Your **MBRP** Vent Tube install is complete.  
We know you will enjoy your purchase!