


INSTALLATION INSTRUCTIONS | PART NO. 106-0194

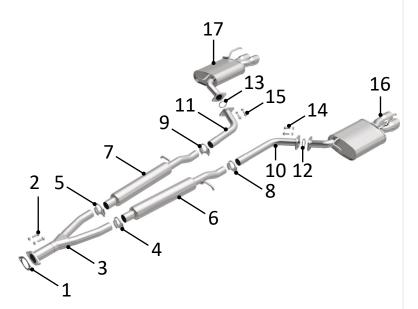

STEP 1

(Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

STEP 2:

Attach item [3] Y Pipe Inlet to existing exhaust with [1] Gasket and [2] Hardware

STEP 3:

Attach items [7] Resonator Assembly/[8] Resonator Assembly to existing isolators and [3] Y Pipe Inlet with [4] Saddle Clamp and [5] Saddle Clamp

STEP 4

Attach items [10] Pipe Assembly/[11] Pipe Assembly to [6] Resonator Assembly/ [7] Resonator Assembly with [8] Saddle Clamp/[9] Saddle Clamp

STEP 5:

Attach items [17] Passenger Side Muffler Assembly to [11] Pipe Assembly with [13] Gasket and [15] Hardware

STEP 6

Attach items [16] Driver Side Muffler Assembly to [10] Pipe Assembly with [12] Gasket and [14] Hardware

STFP 7

Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STFP 8

Tighten all clamps starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056