


A MF MAGNAFLOW GROUP COMPANY

INSTALLATION INSTRUCTIONS | PART NO. 106-0248

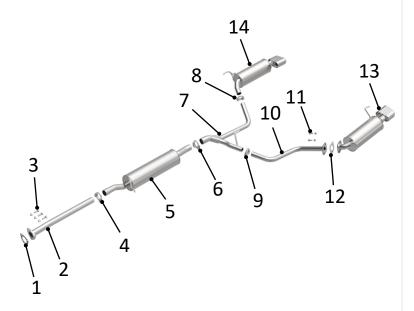

STEP 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

STEP 2: Attach [2] Front Pipe Assembly to existing exhaust with supplied [3] Hardware and [1] Gasket.

STEP 3: Attach [5] Resonator Assembly to [2] Front Pipe Assembly and existing isolator with supplied [4] Clamp.

STEP 4: Attach [7] Y-Pipe Assembly to [5] Resonator Assembly with supplied [6] Clamp.

STEP 5: Attach [10] Rear Pipe Assembly to [7] Y-Pipe Assembly with supplied [9] Clamp.

STEP 6: Attach [14] Passenger Side Muffler Assembly to [7] Y-Pipe Assembly and existing isolators with supplied [8] Clamp.

STEP 7: Attach [13] Driver Side Muffler Assembly to [10] Rear Pipe Assembly and existing isolators with supplied [11] Hardware and [12] Gasket.

STEP 8: Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 9: Tighten all clamps starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056