


## A MF MAGNAFLOW GROUP COMPANY

# **INSTALLATION INSTRUCTIONS** | PART NO. 106-0547

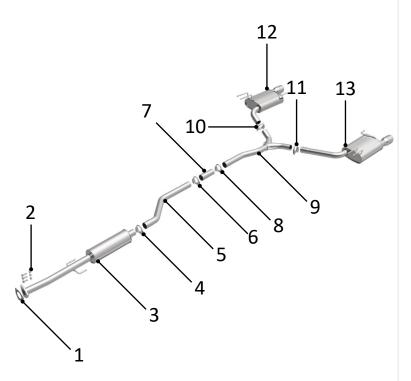

STEP 1: (Carefully read all instructions before installation)
Disconnect the vehicle's battery before removal of the OEM
exhaust system. This will prevent electrical accidents and will
reset the computer if it applies to the vehicle. Remove existing
exhaust system from the vehicle. Only remove parts that will be
replaced. Clean existing flange with a wire brush to ensure proper
sealing.

#### STEP 2:

Attach [3] Resonator Assembly to existing isolators and exhaust with supplied [1] Gasket and [2] Hardware.

#### STEP 3:

For Coupe vehicles Attach [5] Intermediate Pipe to [3] Resonator Assembly with supplied [4] Clamp.

For Sedan vehicles Attach [5] Intermediate Pipe to
[3] Resonator Assembly with supplied [4] Clamp then attach
[7] Extension Pipe to [5] Intermediate Pipe with supplied
[6] Clamp.

#### STEP 4:

Attach [9] Y-Pipe Assembly to selected [5] Intermediate Pipe & [7] Extension Pipe configuration with supplied [8] Clamp.

#### STEP 5:

Attach passenger side [12] Muffler Assembly to existing isolators and [9] Y-Pipe Assembly with supplied [10] Clamp.

#### STEP 6:

Attach driver side [13] Muffler Assembly to existing isolators and [9] Y-Pipe Assembly with supplied [11] Clamp.

**STEP 7:** Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 8: Tighten all clamps and bolts starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)



**BRExhaust** recommends professional installation for all products

### **WARNING:**

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

**Technical Support: 1-800-631-7271** 

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056