


# **INSTALLATION INSTRUCTIONS** | PART NO. 106-0812

#### STEP 1:

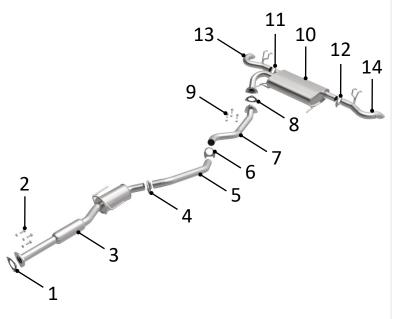

### WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed. (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

#### STEP 2:

Attach [3] Resonator Assembly to existing isolators and exhaust with supplied [1] Gasket and [2] Hardware.

#### STEP 3:

Attach [5] Mid Pipe to [3] Resonator Assembly with supplied [4] Clamp.

STEP 4:

Attach [7] Mid Pipe Assembly to [5] Mid Pipe with supplied [6] Clamp.

STEP 5:

Attach [10] Muffler Assembly to existing isolators and [7] Mid Pipe Assembly with supplied [8] Gasket and [9] Hardware.

STEP 6:

Attach [14] Driver Side Tailpipe to existing isolators and [10] Muffler Assembly with supplied [12] Clamp.

STEP 7:

Attach [13] Passenger Side Tailpipe to existing isolators and [10] Muffler Assembly with supplied [11] Clamp.

**STEP 8:** Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 9: Tighten all clamps starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)



**BRExhaust** recommends professional installation for all products

## Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056

www.brexhaust.com