


INSTALLATION INSTRUCTIONS | PART NO. 106-0837



WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

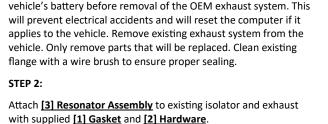

(Carefully read all instructions before installation) Disconnect the

STEP 3:

Attach [5] Mid Pipe Assembly to existing isolator and [3] Resonator Assembly with supplied [4] Clamp.

STEP 4:

Attach [7] Y-Pipe Assembly to [5] Mid Pipe Assembly with supplied [6] Clamp.

STEP 5:

Attach [12] Driver Side Muffler Assembly to existing isolators and [7] Y-Pipe Assembly with supplied [8] Gasket and [10] Hardware.

STEP 6:

Attach [13] Passenger Side Muffler Assembly to existing isolators and [7] Y-Pipe Assembly with supplied [9] Gasket and [11] Hardware.

STEP 7:

Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 8:

Tighten all clamps starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056

www.brexhaust.com