


A MF MAGNAFLOW GROUP COMPANY

INSTALLATION INSTRUCTIONS | PART NO. 106-0877

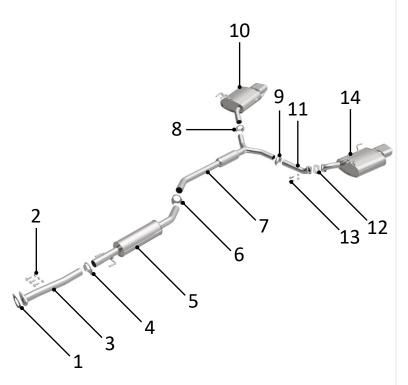

STEP 1: (Carefully read all instructions before installation)
Disconnect the vehicle's battery before removal of the OEM
exhaust system. This will prevent electrical accidents and will reset
the computer if it applies to the vehicle. Remove existing exhaust
system from the vehicle. Only remove parts that will be replaced.
Clean existing flange with a wire brush to ensure proper sealing.

STEP 2:

Attach [3] Inlet Pipe Assembly to existing exhaust with supplied [1] Gasket and [2] Hardware.

STEP 3:

Attach [5] Resonator Assembly to existing isolators and [3] Inlet Pipe Assembly with supplied [4] Clamp.

STEP 4:

Attach [7] Y-Pipe Assembly to [5] Resonator Assembly with supplied [6] Clamp.

STEP 5:

Attach passenger side [10] Muffler Assembly to existing isolators and [7] Y-Pipe Assembly with supplied [8] Clamp.

STEP 6:

Attach [11] Intermediate Pipe Assembly to [7] Y-Pipe Assembly with supplied [9] Clamp.

STEP 7:

Attach driver side [14] Muffler Assembly to existing isolators and [11] Intermediate Pipe Assembly with supplied [12] Gasket and [13] Hardware.

STEP 8: Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 9: Tighten all clamps and bolts starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056