MAGNAFLOW Exhaust PRODUCTS

Mufflers, Converters, Systems and Tips

INSTALLATION INSTRUCTIONS
15215

2013 Hyundai Veloster 1.6L

Resonator Assy

[3] 2.50" Clamps

Extension Pipe "A" Assy

Extension Pipe "B" Assy

Alternate Tail Pipe Assy without Tips

Tail Pipe Assy withTips
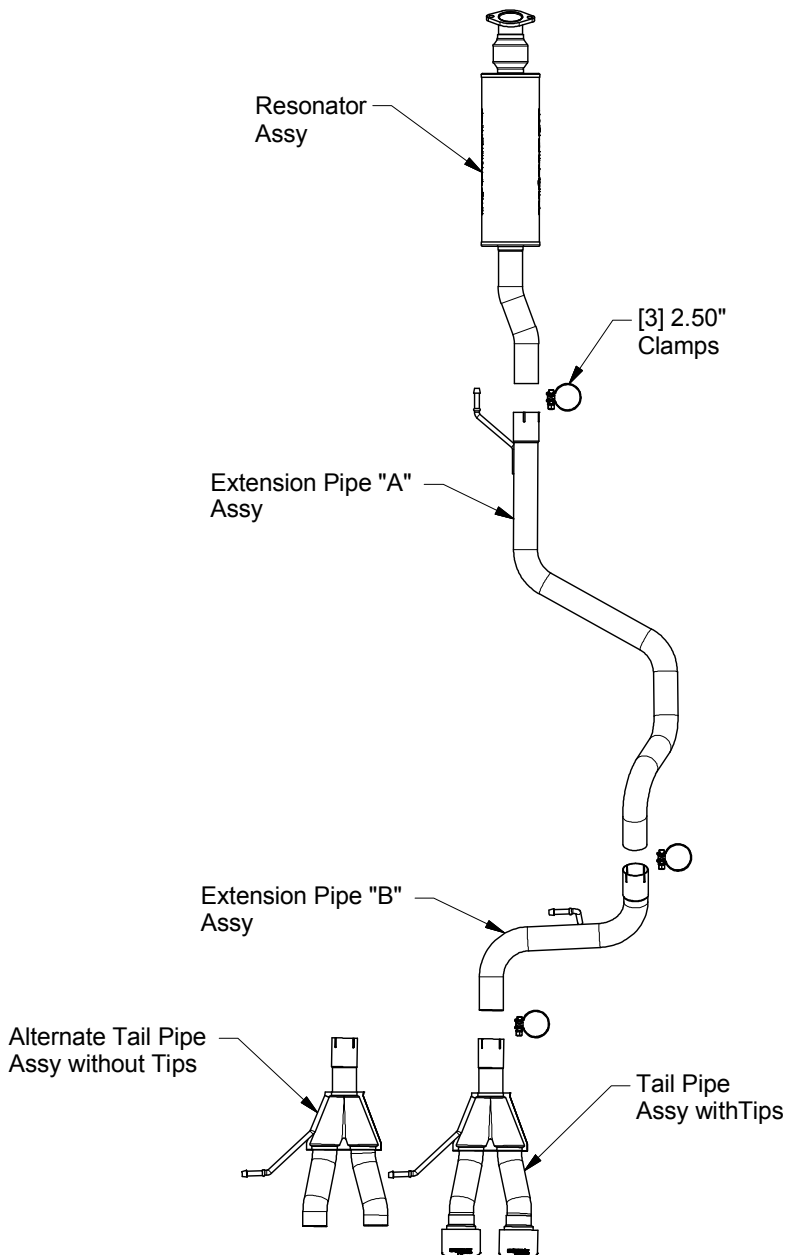
Warning: *When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.*

Step 1: Begin removing your OEM exhaust system by first unfastening the two bolt flange at the outlet of the catalytic converters. Working front to rear loosen the clamps holding the exhaust system together and detach all hangers from the rubber insulators. Retain the insulators and fasteners as they will be used to install your new exhaust system. Remove the system from the vehicle.

Step 2: Install your new MAGNAFLOW system by first attaching the Resonator Assembly to the catalytic converter outlet using the OEM fasteners. Next, slip the Extension Pipe Assemblies onto the Resonator Assembly in the specified order and secure using the supplied 2.50" clamps. There are two tip options available with this kit, one allows the retension of the OEM tip the second uses Magnaflow tips in place of the OEM tip. Select the desired option and install. Locate all hangers into the rubber isolators.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 40ft-lbs). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*** Magnaflow Performance Exhaust recommends professional installation on all their products**

11/13/12
Rev: 000