


09 Dodge V8 5.7L Std,Qd,Cw/Cab, St Bd, W/O OEM Duals

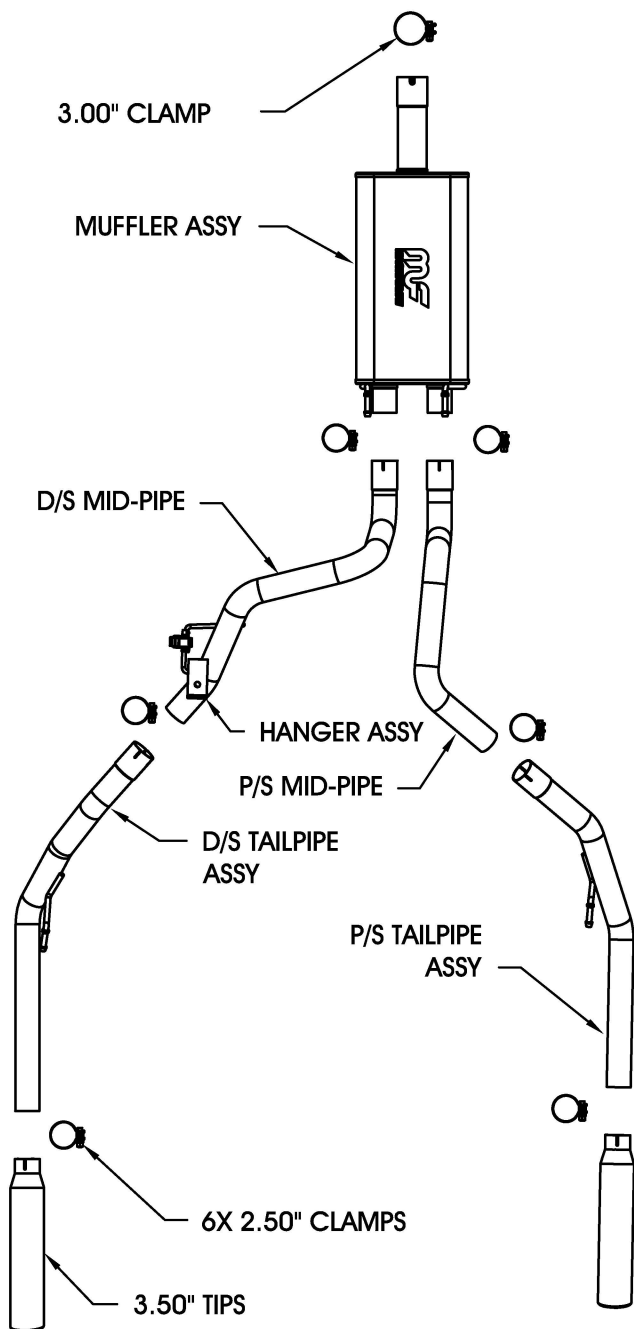

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. To remove the OEM system, unbolt the tailpipe and muffler assemblies. Disengage the welded hangers from the OEM rubber insulators, taking care not to damage them.

Step 2: Begin installation of the new system by fastening the muffler assembly to the catalytic converter extension pipe using the supplied 3.00" clamp (Be sure to line up the large notch in the pipe with the alignment peg or the system will not fit properly). Leave all clamps and fasteners loose for final adjustment of the complete system. Install the Mid-pipes, Tailpipes, and Tip Assemblies in a similar fashion, using the supplied clamps and hanger assemblies as shown in the diagrams. The hanger assembly is to be installed in a pre-drilled hole in the frame. The photo of the hanger assembly (figure 1.) may differ slightly from your vehicle, it is provided for reference. The adjustable tips are supplied to fit a variety of bumpers and rear fascias, and should be welded on once a final position is chosen.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be very tight to properly align the pipes and prevent leaks (Approx. 40ft. lbs.). Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

MAGNAFLOW

Mufflers, Converters,
Systems and Tips

Performance
EXHAUST

INSTALLATION INSTRUCTIONS FOR 16870

09 Dodge V8 5.7L Std,Qd,Cw/Cab, St Bd, W/O OEM Duals



Figure 1.

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW 1901 Corporate Centre Dr., Oceanside CA 92056

16870 2/15/18 REV 003