

Long Travel Uniball Upper Arm Instructions

Ford Bronco 2021-2025

Always inspect your suspension after off-roading and at your routine service intervals. Use of products sold by Camburg Engineering is at the consumer's own risk. Proper installation and proper use of all products must be followed for optimal safety and performance. Installing most suspension products will raise the center of gravity of the vehicle and can increase the susceptibility to a rollover and alter the handling characteristics. Camburg Engineering products may void aspects of the vehicles warranty. Camburg Engineering reserves the right to change the design, material or specifications of any product without assuming any obligation to modify any product previously manufactured and without prior notice. Every effort has been made to avoid printing errors and specifications. By purchasing, installing and/or using these products you are accepting these stated conditions and accept all liability and responsibility.




Warranty Information

Scan or Click QR Code

Parts Supplied

QTY	Description	ID
8	Polyurethane Pivot Bushings	1
4	7/8" OD x 9/16" ID x 2.15" L Sleeves	2
4	Large Flat Bushing Washers	3
4	Large Stepped Bushing Washers	4
4	90 deg. Zerk Grease Fittings (self-tapping)	5
2	M14 x 2.0 Flanged Nyloc Nuts	6
2	9/16" Upper Domed Uniball Spacers	8
2	9/16" Tapered Uniball Spindle Adapters	9
2	9/16-18 x 4.5" 12pt Bolts	7
2	9/16" SAE Grade 8 Washers	10
2	9/16-18 Stover Lock Nuts	11
2	Uniball Cover Caps (press-on)	12
2	Uniball Cover Cap O-rings	13
4	Bushing Grease Packets	
1	#30 x 10" Fishing Line (for cap install only)	

* REFER TO EXPLODED CAD DRAWING ON *
* OTHER SIDE FOR PARTS REFERENCE NUMBERS *

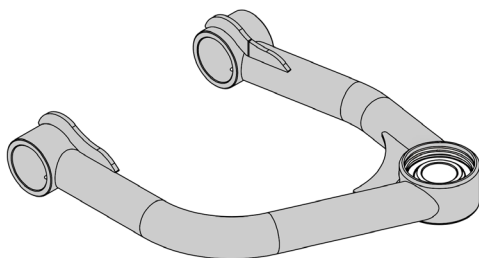

Please follow all instructions. If you are not installing these yourself have a qualified shop do so. These arms are designed specifically for our long travel kit and are to be used with stock OEM spindles or Camburg performance spindles. Make sure to check the parts list to make sure you have every component prior to starting. Camburg Engineering has made every attempt to insure you receive the highest quality components in the most complete manner. This is a guide to help you through the process with recommended torque specs. It's your responsibility to ensure parts are being installed correctly using the correct tools and procedures. We recommend reviewing a service manual for more details.

Tools & Supplies Required

Eye Protection | Jack | Jack Stands | Deburring Tool | Hammer
2-3 lb. Mini Sledge Hammer | Rubber Mallet | 21mm Socket & Wrench
18mm Socket & Wrench | 19mm Socket | 9/16" 12pt Socket
1/4" Wrench | 7/8" Socket | Torque Wrench
Brake Cleaner | Anti-seize | Grease | Red Loctite

1.0 Setup

Park the vehicle on level ground and set the parking brake and chock both rear wheels. Jack up the front end from the chassis until the front tires are off the ground. Place jack stands under the front frame rails and set down. Make sure the vehicle is supported correctly and the front tires are still off the ground. Place the jack under the driver side lower arm and raise the tire 1/2", then remove the wheel while keeping jack under lower a-arm to support the suspension. Read these instructions start to finish before moving forward and review diagrams.

2.0 Removal

Using a 18mm socket, loosen the upper ball-joint nut where it connects to the spindle but do not fully remove. With a mini sledge hammer strike the top of the spindle numerous times to release the ball-joint tapered stud. This can be a little difficult since it's a press fit, heating up the spindle to get it to expand will help if need be. Once the ball joint releases from the spindle, then remove the nut. This will allow you to position the upper arm and spindle out of the way. Make sure to position & support the spindle so that it doesn't pull on the brake line and on 4wd models that it doesn't pull out the inner CV or strain the CV boots and axles. Use a 18mm & 21mm wrench to loosen and remove the OEM upper arm bolt. Then remove the stock upper arm.

3.0 Pre-Installation

You will need to remove the large under head washer from the OEM bolt that is pressed on. In a vise or on a table, use a hammer and tap off the washer. You will not reuse the washer or the OEM nut. Using a 1/4" wrench install the self-tapping 90-degree zerk fittings into the Camburg arms. Do not bottom out the fittings into the arms. The zerk fitting is two parts that thread together, you may need to remove the nipple when installing. Position them pointing outward for grease gun access. Now press the polyurethane bushings into the arms.

Using the supplied bushing grease, apply grease onto the OD of the inner pivot sleeves and press into the bushings. Wipe excess grease onto outer bushing faces and apply additional grease if needed. See diagram for reference.

Using a countersink bit or deburring scraper tool, slightly chamfer the top-hole edge of the ball-joint taper in the spindle. This will allow the spacer to fully seat when tightened and eliminate possible stress risers. Then inspect and clean the tapered hole. See diagram for reference.

4.0 Installation

Install the driver side Camburg upper arm onto the frame using two of the supplied machined stepped washers on either side of the inner polyurethane bushings with the small diameter portion towards the frame and two of the supplied large flat washers on either side of the outer bushings with the original bolt in the same orientation as it was removed. To insure you're installing the correct arm, the zerk fittings and pivot gussets will be on top and the longer a-arm tube towards the front of the vehicle. With the bolt pushed all the way through, clean the threads with brake cleaner and once dry apply a little red loctite to the nut area. Using a 18mm wrench and 21mm socket, torque the supplied M14 nyloc nut to 90 ft/lbs. Cycle the arm up and down to make sure there are no clearance issues. See diagram for reference.

Apply anti-seize to the uniball spacer surfaces shaded gray in the diagram. Insert the tapered lower uniball spacer into the uniball. Then install the upper spacer into the top of the uniball making sure both spacers are fully seated. If not damage will occur in the following steps. Install the 9/16" 12pt bolt through the spacers and uniball and attach the upper arm to the spindle by swinging it down to the spindle with some finesse. You may need to jack up the lower arm and move the uniball joint. The tapered spacer should sit almost flush with the top of the spindle/knuckle before tightening. Make sure the lower spacer did not pull out slightly from the uniball or damage will occur as the spacer can get caught on the bearing race. Install the 9/16" washer and stover lock nut with a small amount of red loctite onto clean threads. Using a 9/16" 12pt socket and 7/8" socket, torque to 120-125 ft/lbs. Don't not over-tighten or use an impact gun. See diagram for reference.

Lastly install the uniball cap by first installing one of the supplied o-rings into the caps lower groove. Then apply a small amount of grease to the inside of the top of the uniball cup. Use the supplied 30# fishing line and insert 2" of it into the upper arm cup. This will be used to release the trapped air as the cap is pressed on. Position and center the cap over the uniball cup with the Camburg logo in your desired position. Cover the cap with a rag to protect the finish and use a rubber mallet to tap the cover in if not by hand. Make sure to apply even pressure so that it presses in straight.

When the cap is fully seated and you hear the air escape, pull the fishing line out and make sure the cap is tight to the cup. Twist the cap a few degrees to the right and left to help seat the cap and o-ring. Periodically check the caps to make sure they are fully seated after off-road use and remove temporarily after any pressure washing for moisture to dissipate.

Repeat steps 1 through 4 to install passenger side arm

5.0 Alignment

You will need to have your vehicle aligned by a qualified shop. Additional caster is built into the Camburg arms to correct alignment issues that are inherent with lifting the vehicle. Have your alignment shop increase positive caster, then set camber and toe to factory OEM specifications. Having an increase in caster helps with straight line stability and cornering precision for performance driving on and off-road.

6.0 Maintenance & Care

Over time the pivot bushings will also need to be cleaned and lubricated. Use grease that's designed specifically for polyurethane bushings. Not using the correct grease can cause the bushings to squeak abnormally and wear faster. The best method to grease the bushings is to remove the arms from the vehicle, disassemble, clean and lubricate. When using a grease gun, loosen the upper arm bolts so you're able to pull the washers slightly away from the outer bushings to relieve pressure prior to greasing them slowly. Most grease guns operate at 1500+ psi. and can damage the bushings applying too much pressure.

Uniballs are precision parts with tight tolerances which can lead to occasional noise when they become dirty. Occasionally wipe off the heims and underside of the uniball with a clean rag to remove road grime and dirt. Cleaning and lubricating them with WD-40 or a PTFE dry film lube like Super Lube can minimize any noise from stiction. Do not use harsh chemicals or grease/oil that attracts dirt to clean & lubricate the uniball as it will damage and wear the PTFE liner that is bonded internally. You will also need to occasionally remove the uniball cover to clean the top-side of the uniball.

We recommend greasing the polyurethane bushings 2-3 times a year or every 5-8k miles depending on use with a high temp., waterproof teflon (PTFE) based grease like Super Lube.

Higher frequency lubing may be required when used off-road and/or in wet/snow/mud conditions.

Neglecting care and upkeep will wear parts out faster.

Inspect and re-torque all hardware and components after the first 500 miles, inspect at your scheduled maintenance intervals and whenever using the vehicle off-road.

Notes


Recommended tire size: 35-37 in.

Recommended wheel size: 17-20 in.

Recommended wheel backspacing = 4.75 in.



Maximum wheel backspacing = 5.00 in.

Torque M14 nut to 85-90 ft/lbs. w/ red loctite

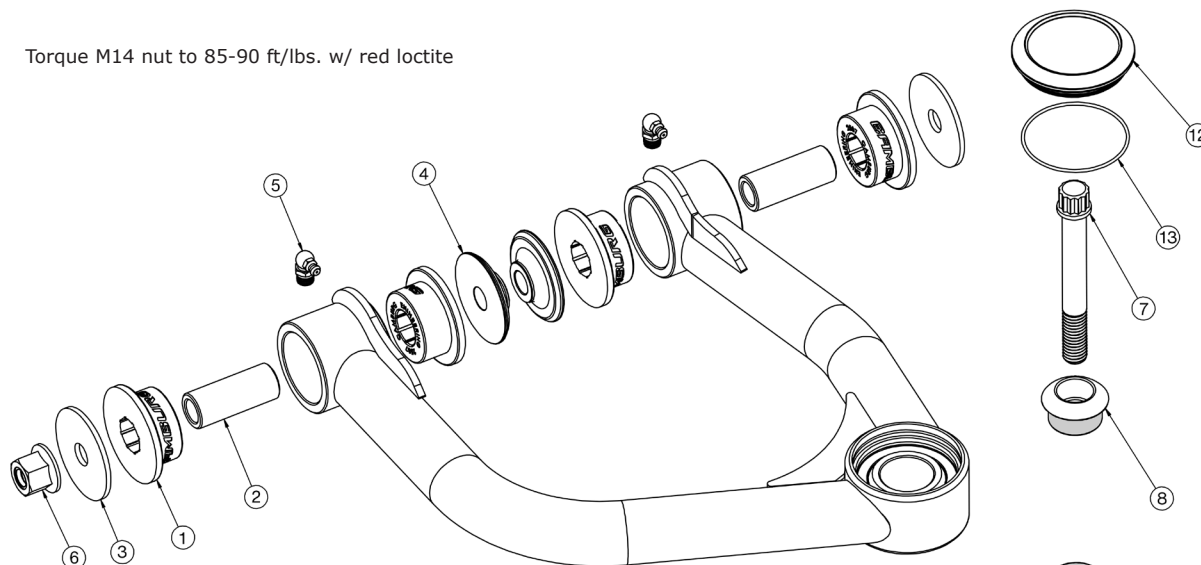

[DRIVER-SIDE]

Torque 9/16" nut to 120-125 ft/lbs. w/ red loctite

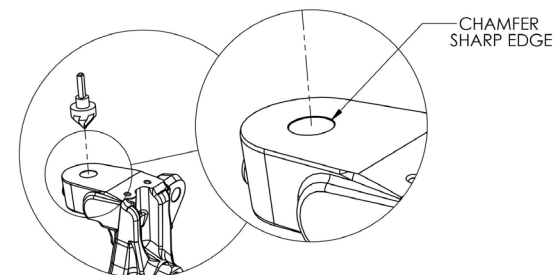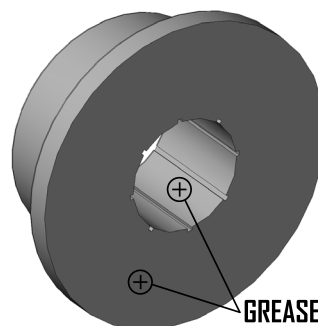

Always inspect your suspension after off-roading and at your routine service intervals. Use of products sold by Camburg Engineering is at the consumer's own risk. Proper installation and proper use of all products must be followed for optimal safety and performance. Installing most suspension products will raise the center of gravity of the vehicle and can increase the susceptibility to a rollover and alter the handling characteristics. Camburg Engineering products may void aspects of the vehicles warranty. Camburg Engineering reserves the right to change the design, material or specifications of any product without assuming any obligation to modify any product previously manufactured and without prior notice. Every effort has been made to avoid printing errors and specifications. By purchasing, installing and/or using these products you are accepting these stated conditions and accept all liability and responsibility.

If you are not installing these yourself have a qualified shop do so. These long-travel arms are designed to be used with stock OEM spindles or Camburg performance spindles. Check the parts list to make sure you have every component prior to installing. Camburg Engineering has made every attempt to insure you receive the highest quality components in the most complete manner. This is a guide to help you through the process with some recommended torque specs & notes. It's your responsibility to ensure parts are being installed correctly using the correct tools and procedures. For step-by-step instructions refer to a Ford service/repair manual.



Important Installation Notes:

- Factory wheels will not work with these, you need aftermarket wheels with 4.75-5.00" of backspacing.
- Thread the heims into the link rod with only 2-3 threads showing outside the jam nut.
- Insert the bushing #16 into the OEM sway bar end to reduce to 1/2". The heim will go on the outside of the sway bar.
- Apply anti-seize to uniball spacer surfaces and heim joint threads (shaded gray in diagram)
- Use RED loctite on all fasteners > 1/4" dia.
- Use BLUE loctite on 1/4" skid plate bolts.
- Inspect and re-torque all hardware and components after the first 500 miles, inspect at your scheduled maintenance intervals and whenever using the vehicle off-road.
- We recommend greasing the ball-joints 2-3 times per year or every 5-8k miles depending on use, higher frequency lubing may be required when used off-road and/or in wet/snow/mud conditions. We recommend using a high temp. lithium complex #2 synthetic grease.

Recommended Torque Specs:

- Lower X-Joint Flanged Nut = 90 ft/lbs.
- Lower Arm Frame Hardware = 210 ft/lbs.
- Lower Shock Hardware = 55 ft/lbs.
- 1/2" Sway Bar Hardware = 85 ft/lbs.
- 1/4" Skid Plate Bolts = 10-15 ft/lbs.

ID	DESCRIPTION	QTY
	DRIVER SIDE LOWER ARM	1
	PASSENGER SIDE LOWER ARM	1
	DRIVER SIDE LOWER ARM SKID PLATE	1
	PASSENGER SIDE LOWER ARM SKID PLATE	1
3	LCA UNIBALL FRAME SPACERS	8
4	M12 X 1.75 X 40 10.9 HEX BOLTS	4
5	M12 ZINC WASHERS	4
11	FK HJMX-8T SWAY BAR HEIMS	4
12	1/2-20 RH STEEL JAM NUTS	4
10	1/2-20 X 2.25L SWAY BAR LINK RODS	2
16	1/2" OEM SWAY BAR BUSHINGS	2
17	1/2-13 X 2.25 GRADE 8 HEX BOLTS	2
13	1/2-13 X 2.50 GRADE 8 HEX BOLTS	2
14	1/2" SAE GRADE 8 WASHERS	8
15	1/2-13 ZINC STOVER LOCK NUTS	4
9	1/4" SAE GRADE 8 WASHERS	12
8	1/4-20 X 1" GRADE 8 HEX BOLTS	12
6	GREASE ZERK FITTINGS	2
7	M14 X 2.0 FLANGED NYLOC NUTS	2

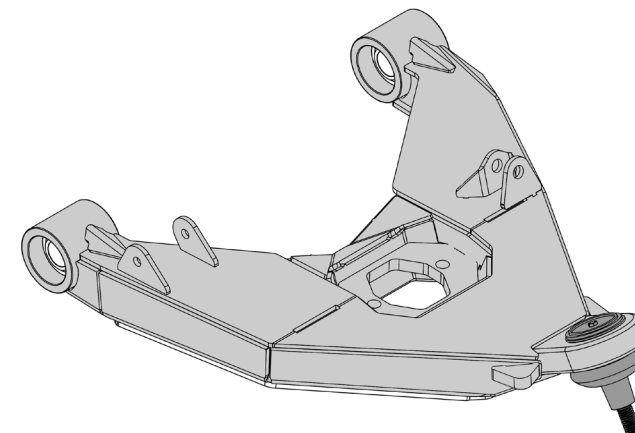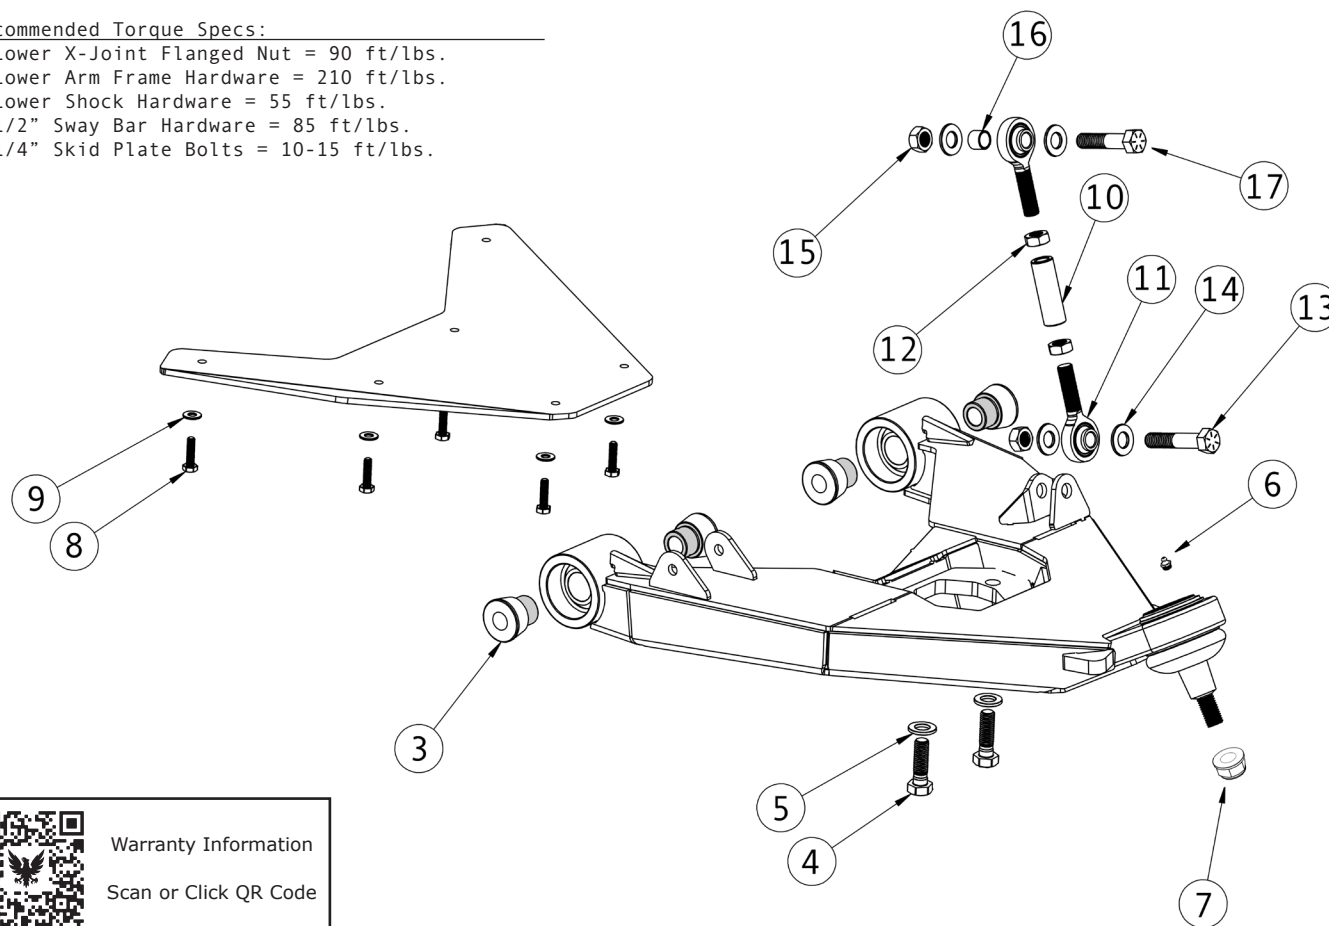

[DRIVER SIDE ARMS SHOWN]



Warranty Information
Scan or Click QR Code



FORD BRONCO 2021-2025

LONG-TRAVEL STEERING & MISC PARTS

PART# CAM-110243-UC

[980139-3]

Always inspect your suspension after off-roading and at your routine service intervals. Use of products sold by Camburg Engineering is at the consumer's own risk. Proper installation and proper use of all products must be followed for optimal safety and performance. Installing most suspension products will raise the center of gravity of the vehicle and can increase the susceptibility to a rollover and alter the handling characteristics. Camburg Engineering products may void aspects of the vehicles warranty. Camburg Engineering reserves the right to change the design, material or specifications of any product without assuming any obligation to modify any product previously manufactured and without prior notice. Every effort has been made to avoid printing errors and specifications. By purchasing, installing and/or using these products you are accepting these stated conditions and accept all liability and responsibility.

If you are not installing these yourself have a qualified shop do so. Check the parts list to make sure you have every component prior to installing. Camburg Engineering has made every attempt to insure you receive the highest quality components in the most complete manner. This is a guide to help you through the process with some recommended torque specs & notes. It's your responsibility to ensure parts are being installed correctly using the correct tools and procedures. For step-by-step instructions refer to a Ford service/repair manual.



ID		QTY
1	BRONCO L/T FRONT CV AXLE SHAFTS (17.562" OAL)	2
2	M14 x 1.5 STEERING EXTENSIONS	2
3	M16 x 1.5 STEERING EXTENSIONS	2

Important Installation Notes:

- You will need to disassemble the OEM front axle assemblies to install the supplied longer axle shafts. If you're not familiar with this process, we recommend a driveline shop doing this work for you. Inspect axle components and replace any parts showing signs of wear or fatigue. These axle shafts do not fit aftermarket non-OEM axle assemblies.
- We supply both M14 and M16 steering tie rod extensions as these can vary throughout the years and models. Use the size that matches your Bronco's steering.
- Use RED loctite on all fasteners > 1/4" dia.
- Use BLUE loctite on all fasteners < 1/4" dia.
- Inspect and re-torque all hardware and components after the first 500 miles, inspect at your scheduled maintenance intervals and whenever using the vehicle off-road.

Recommended Torque Specs:

- Axle Shaft Outer Hub Nut = 221 ft/lbs.
- Outer Tie Rod End Nut = 50 ft/lbs.

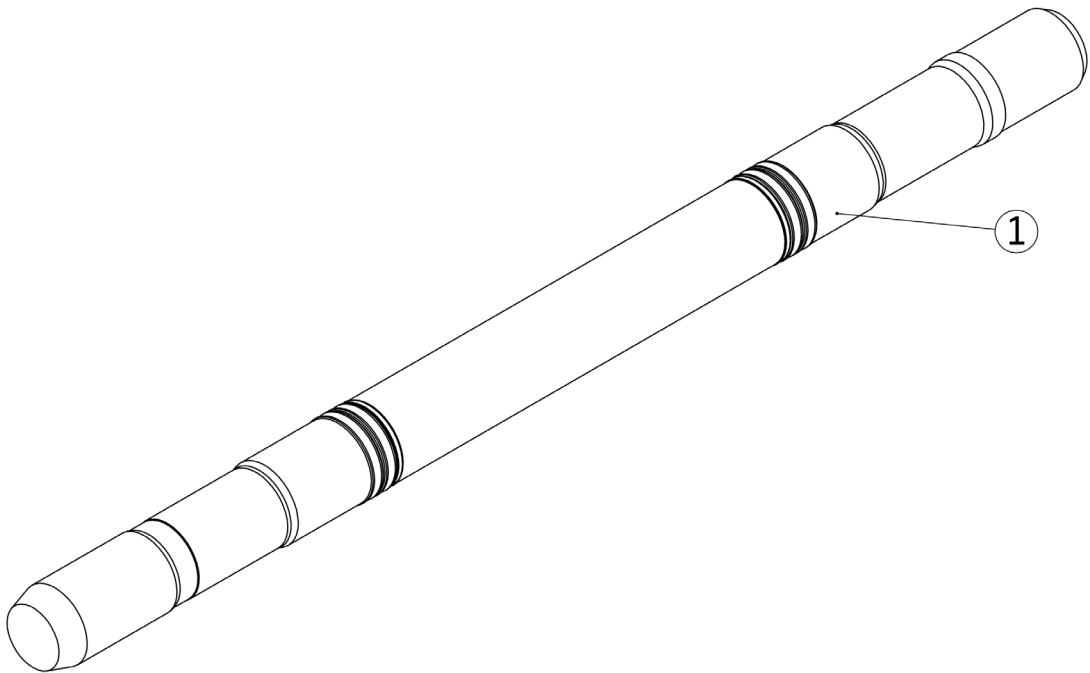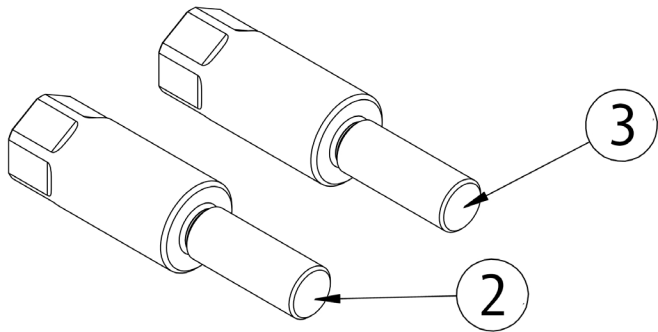

Warranty Information

Scan or Click QR Code