



INSTALLATION INSTRUCTIONS FOR PART 99-7873

APPLICATIONS Honda CR-V 2007-up

99-7873


KIT FEATURES

- DIN Mount Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Mount Radio Provision
- Stacked ISO Mount Units Provision



KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate • D) Double DIN Brackets
- E) Double DIN Trim Plate • F) Pocket

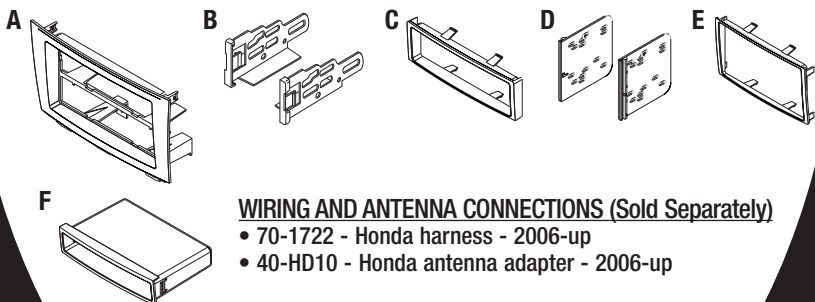

WIRING AND ANTENNA CONNECTIONS (Sold Separately)

- 70-1722 - Honda harness - 2006-up
- 40-HD10 - Honda antenna adapter - 2006-up

TOOLS REQUIRED:

Small Flat Blade Screwdriver • Panel Removal Tool
Phillips Screwdriver



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



99-7873

TABLE OF CONTENTS

Dash Disassembly

- Honda CR-V 2007-up.	1
-----------------------------------	----------

Kit Assembly

- DIN Mount Radio Provision with Pocket.	2
- ISO Mount Radio Provision with Pocket.	3
- Double DIN Radio Provision	4
- Stacked ISO Units Provision	5

<u>Final Assembly</u>	6
--	----------

***Note:**

Refer also to the instructions included with the aftermarket radio.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.




**Metra recommends MECP
certified technicians**

HONDA CR-V 2007-UP


- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip a/c control. Unplug and remove a/c control. (Figure A)
- 3 Unclip and remove panel above a/c vents. (Figure B)
- 4 Unclip the a/c vent panel including the hazard switch. Unplug and remove the panel. (Figure C)
- 5 Remove (4) Phillips screws securing the radio. Unplug and remove radio. (Figure D)

Continue to kit assembly.


A

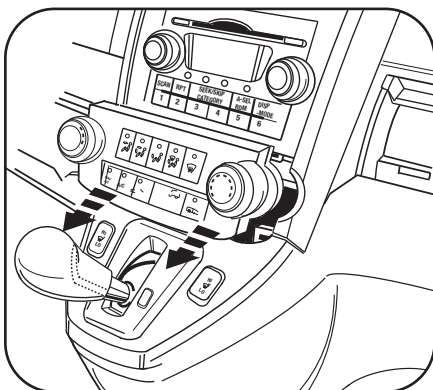


B

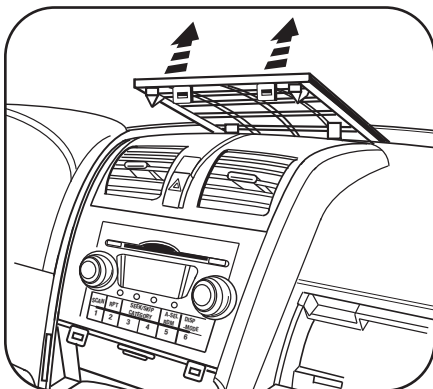

C

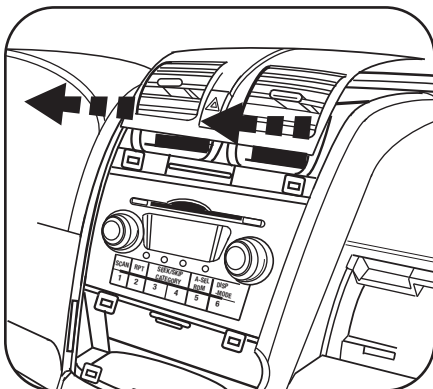

D



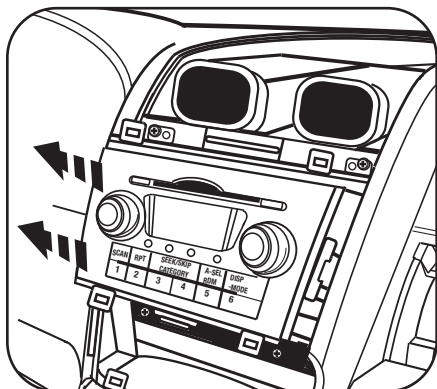


DIN MOUNT RADIO PROVISION WITH POCKET

****Note: Refer also to the instructions included with the aftermarket radio.***

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs outward. (Figure A)
- 2** Slide the aftermarket radio into the DIN cage until it snaps into place. (Figure B)
- 3** Snap the pocket into the radio housing. (Figure C)

Continue to final assembly.

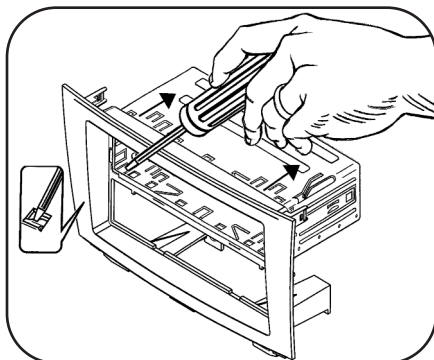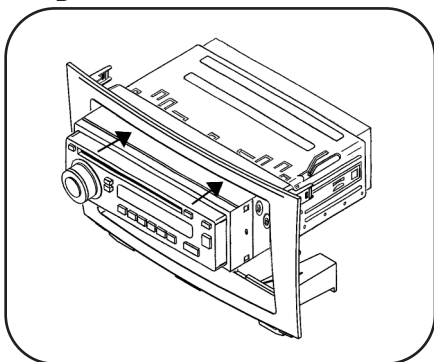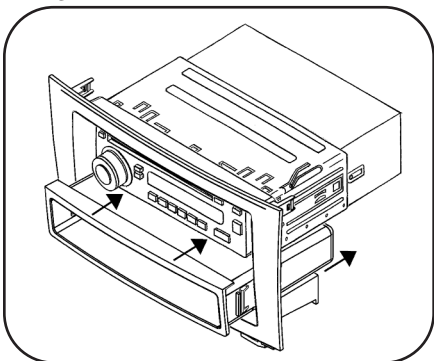A**B****C**




ISO MOUNT RADIO PROVISION WITH POCKET

****Note: Refer also to the instructions included with the aftermarket radio.***


- 1 Mount the ISO Brackets to the radio using the screws supplied with the radio. (Figure A)
- 2 Slide the radio into the Radio Housing until it snaps into place. (Figure B)
- 3 Snap the Trim Plate onto the front of the Radio Housing. (Figure B)
- 4 Snap the Pocket into the Radio Housing. (Figure C)

Continue to final assembly.


A

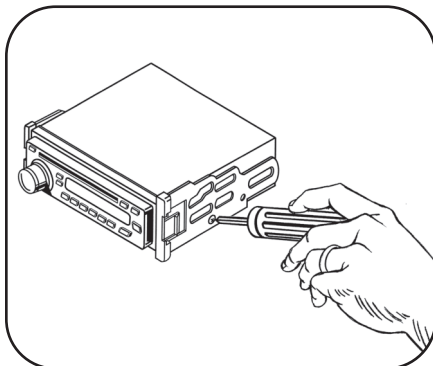

B

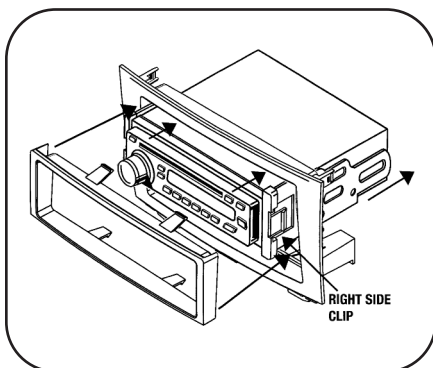

C

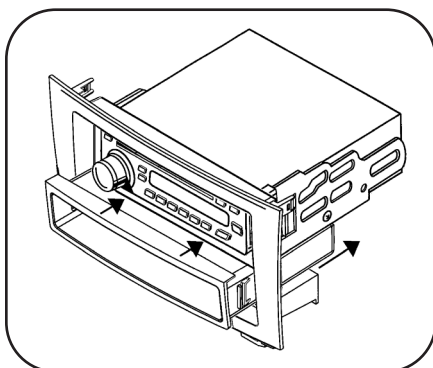


DOUBLE DIN MOUNT RADIO PROVISION

****Note:** Refer also to the instructions included with the aftermarket radio.*


- 1** Cut and remove the center bar from the Radio Housing. (Figure A)
- 2** Snap the Double DIN brackets to the inside edge of the Radio Housing. (Figure B)
- 3** Slide the Double DIN radio into the DDIN bracket/Radio Housing assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure C)
- 4** Snap the Double DIN trim plate onto the front of the Housing/Radio assembly. (Figure C)

Continue to final assembly.


A

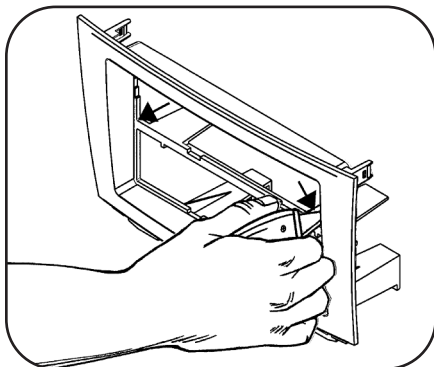

B

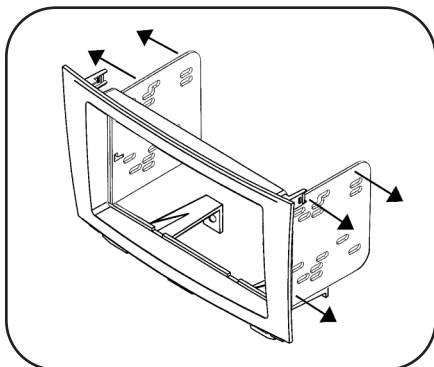

C

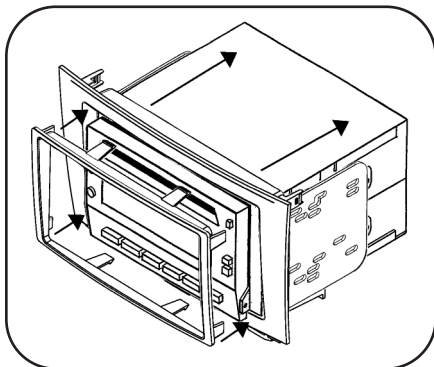


STACKED ISO UNITS PROVISION

****Note:** Refer also to the instructions included with the aftermarket radio.*


- 1** Cut and remove the center bar from the Radio Housing. (Figure A)
- 2** Snap the Double DIN brackets to the inside edge of the Radio Housing. (Figure B)
- 3** Slide the stacked ISO mount units into the Double DIN Bracket/Radio Housing assembly and secure the units to the assembly using the screws supplied with the units. (Figure C)
- 4** Snap the Double DIN trim-plate onto the front of the Housing/Radio assembly. (Figure C)

Continue to final assembly.


A

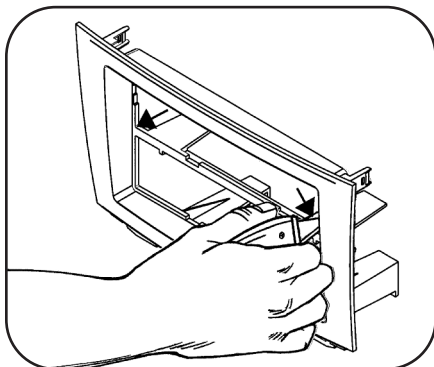

B

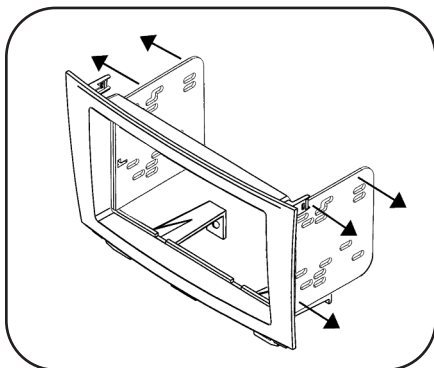


C

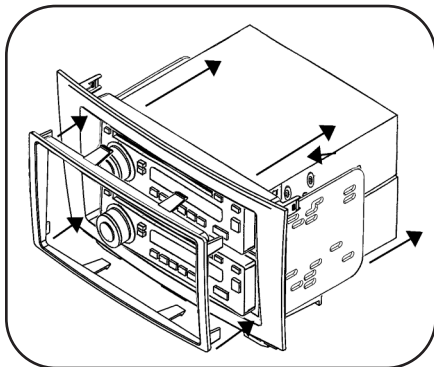



FINAL ASSEMBLY

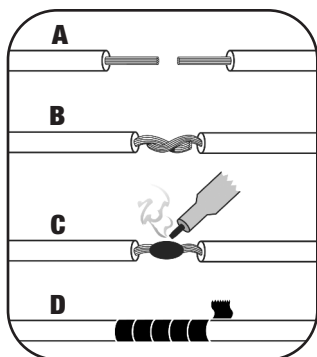

(A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

METRA / EIA WIRING CODE

12V Ignition / Acc. Red

12V Batt / Memory. Yellow

Ground. Black*

Power Antenna. Blue

Amp Turn-On Blue / White

Amp Ground. Black / White

Illumination Orange

Dimmer Orange / White

Right Front (+) Gray

Right Front (-). Gray/ Black

Left Front (+) White

Left Front (-). White / Black

Right Rear (+) Violet

Right Rear (-) Violet / Black

Left Rear (+) Green

Left Rear (-) Green / Black

***NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.



1-800-221-0932



www.metraonline.com