


MISHIMOTO

INSTALLATION STEPS:

1. WITH THE NOTCH FACING DOWN, PLACE MM10183-02 & MM10183-04 BEHIND MM10172-03 IN THE DESIRED HORIZONTAL POSITION. PLACE 2X BF8X1.25-85 BOLTS THROUGH THE LOWER SET OF SLOTS IN MM10172-03 AND INTO THE UPPER HOLE OF MM10183-02 AND THE HOLE OF MM10183-04.
2. WITH THE NOTCH FACING DOWN ON MM10183-01 THREAD THE 2X BF8X1.25-85 BOLTS FROM THE ASSEMBLY MADE IN THE PREVIOUS STEP INTO THE UPPER HOLE OF MM10183-01 & THE HOLE OF MM10183-03.
3. HOLD THE MM10183-01 & MM10183-03 PARTS AT A 90-DEGREE ANGLE TO PLACE THE ASSEMBLY INTO THE BUMPER IN THE DESIRED POSITION, THEN ROTATE AGAIN SO THE NOTCH IS FACING DOWNWARD.
4. SNUG THE 2X BF8X1.25-85 BOLTS AND THEN HOLD MM10172-03 LEVEL TO THE GROUND AND TORQUE 2X BF8X1.25-85 BOLTS TO 88.5IN/LBS (10NM).
5. INSTALL THE REMAINING BF8X1.25-85 BOLT INTO THE LOWER HOLE OF MM10183-02 AND THREAD INTO MM10183-01. TORQUE TO 88.5IN/LBS (10NM).
6. ATTACH YOUR LICENSE PLATE AND PLATE FRAME TO MM10172-03 WITH 4X BF6X1.0-10 BOLTS AND A 4MM ALLEN KEY.

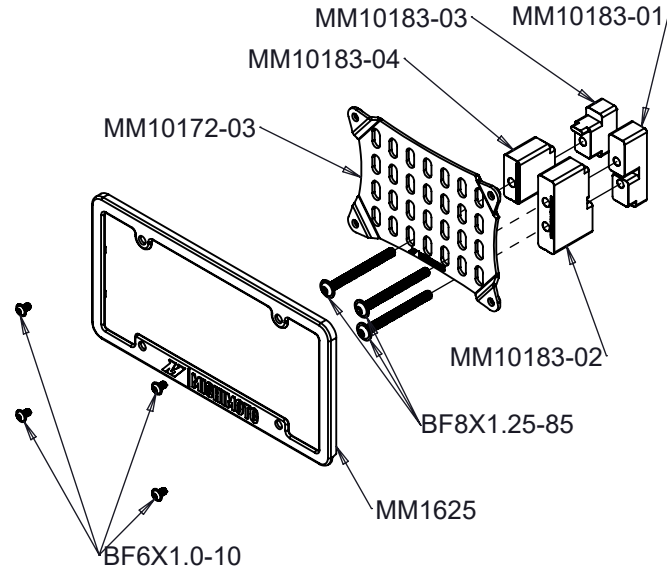

BILL OF MATERIALS

DRAWING NUMBER	PART NUMBER	DESCRIPTION	QUANTITY
MM10172	MM10172-03	BRACKET ASSEMBLY	1
MM10183	MM10183-01	INNER PART ASSEMBLY 1	1
MM10183	MM10183-02	OUTER PART 1	1
MM10183	MM10183-03	INNER PART ASSEMBLY 2	1
MM10183	MM10183-04	OUTER PART 2	1
MM1625	MM1625	PLATE FRAME	1
MM1521	BF6X1.0-10	M6 BUTTON HEAD FLANGED BOLT	4
MM1521	BF8X1.25-85	M8 BUTTON HEAD FLANGED BOLT	3

FOR QUESTIONS OR ASSISTANCE WITH YOUR MISHIMOTO PRODUCT,
CONTACT US AT 1.877.GOMISHI OR SUPPORT@MISHIMOTO.COM