



OLD MAN EMU

FITTING INSTRUCTIONS

FK82

REAR BRAKE LINE DROP FITTING KIT
TO SUIT LANDCRUISER 70 SERIES REAR BRAKE LINE DROP
2014 ON


KIT CONTENTS

DESCRIPTION	QTY.
LC70 REAR BRAKE HOSE DROP BRACKET	1
LC70 REAR BRAKE LINE DROP BRACKET	1
BOLT M8 X 20 GR8.8	2
NUT NYLOCK M8	1
WASHER FLAT M8	3
WASHER SPRING M8	1


FITTING PROCEDURE



1. DISCONNECT THE REAR BRAKE HOSE BRACKET FROM THE CHASSIS.

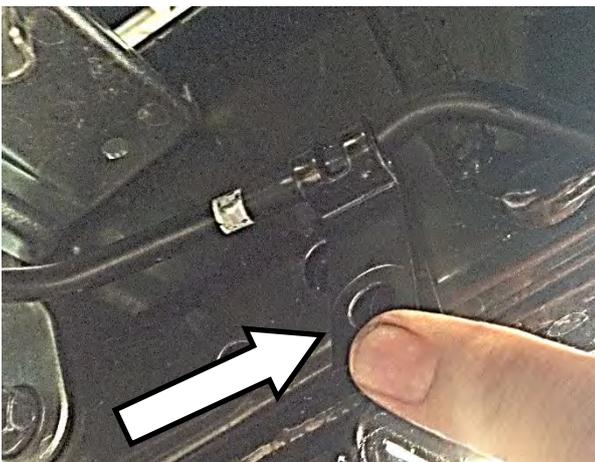

2. DISCONNECT THE BRAKE HARD LINE BRACKET FROM THE CHASSIS.

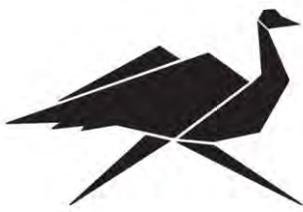


OLD MAN EMU FITTING INSTRUCTIONS



3. RE- USING THE ORIGINAL BOLTS, ATTACH THE OME LC70 REAR BRAKE HOSE DROP BRACKET (LARGER BRACKET) TO THE CHASSIS

PARTS REQUIRED

- REAR BRAKE HOSE DROP BRACKET
- ORIGINAL M8 BOLT

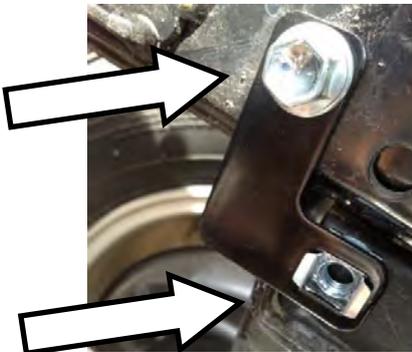

4. INSERT CAGE NUT INTO DROP BRACKET AND RE- USING THE ORIGINAL BOLTS, ATTACH TO THE CHASSIS

PARTS REQUIRED

- REAR BRAKE HOSE DROP BRACKET (SMALLER BRACKET)
- ORIGINAL M8 BOLT
- M8 CAGE NUT



5. ATTACH THE ORIGINAL BRAKE HOSE BRACKET TO THE NEW OME DROP BRACKET. USE THE M8 BOLT, NUT AND WASHERS PROVIDED. TIGHTEN HAND TIGHT.

PARTS REQUIRED

- REAR BRAKE HOSE DROP BRACKET
- M8 BOLT
- M8 NYLOCK NUT
- M8 SPRING WASHER M8 FLAT WASHER X 2



6. RE- ATTACH THE ORIGINAL HARD LINE BRACKET TO NEW OME BRACKET USING THE M8 BOLT AND WASHER PROVIDED. TIGHTEN ALL BOLTS THOROUGHLY.

PARTS REQUIRED

- REAR BRAKE LINE DROP BRACKET
- M8 BOLT
- M8 SPRING WASHER
- M8 FLAT WASHER