



**10-12 DODGE RAM HD TOWING MIRROR CHROME TRIM INSTALLATION
INSTRUCTIONS KIT #400520**

Congratulations on your purchase of a high quality PUTCO product.
Should you need any application or technical assistance feel free to call us at: 1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.
PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

Please read all instructions first before beginning installation.

Kit Contents:

- Chrome Trim Mirror Cover RH
- Chrome Trim Mirror Cover LH
- Chrome Trim Extension Arm RH
- Chrome Trim Extension Arm LH
- 3M™ Adhesion Promoter 4298

Tools:

- Protective Gloves
- Lint Free Cloth

Installation Steps

Step 1: Verify kit contents.

Step 2: Test fit the parts on the vehicle noting the difference between the right and left hand parts.


Step 3: Fold the Mirror up to the **vertical** position.



Step 4: Insure that the surface which the **Chrome Trim** is to be applied is clean, dry and free of all oil, grease and wax. The application surface must also be warm, the recommended temperature range is 15.6° - 43.3°C (60° - 110°F).

Step 5: Apply the supplied **3M™ Adhesion Promoter 4298** to the surface and allow surface to dry approximately 2 minutes before applying the chrome trim.

Step 6: Remove the red protective liner from the 3M™ Tape on **middle two strips and lift a small portion of a corner on the outside ring** of 3M tape and place the part on to the factory mirror.
(Note: Do NOT remove the entire outside ring of tape)

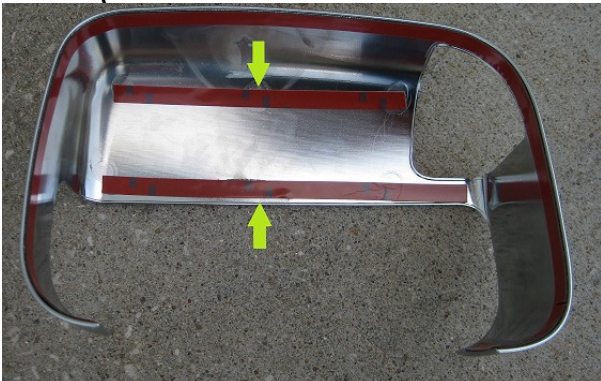

Step 7: With the two inside pieces of tape installed on the mirror, remove the red protective liner from the 3M™ Tape on the **outside ring** to fully secure the mirror cover to the factory mirror.



Step 8: Now that the mirror cover has been installed, remove the red protective liner from the 3M™ Tape on the extension arm and install.

Step 9: Press the parts into place by firmly applying pressure for 5 seconds. **(Note: Be careful not to contaminate the adhesive before pressing into place!!!)**

Step 10: Repeat **Steps 2 - 9** for the opposite side.

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance of you chrome trim.

INSTRUCTION # May 2012

LIMITED WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. Black products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.