

2015+ Ford F-150 Door Handle Bucket Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty
Regular Cab Kit (2 w/Putco logo, 2 w/o)	4
Super Cab & Super Crew Kit (4 w/Putco logo, 4 w/o)	8

Tools Required:

- Rubbing Alcohol
- Clean Towel

Bucket Installation

1. Clean and dry the vehicle thoroughly.
2. The vehicle surface temperature must be a minimum of 15°C (60°F).
3. Apply rubbing alcohol to the clean towel and wipe down the entire boxed area shown in Figure 1 on the door. This will ensure proper adhesion to the vehicle. (Passenger handle shown)

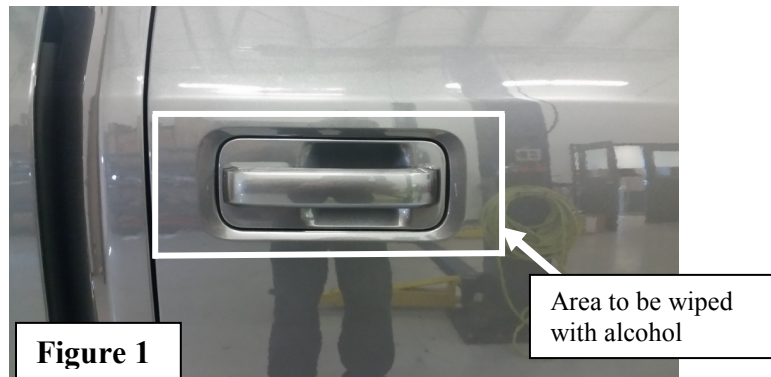

4. As shown in Figure 2, remove the 3M tape from back of the blank (no Putco Logo) door handle bucket.



5. While pulling the door handle out slightly, insert the bucket so it sets with the rear tabs in the surrounding gap. **IMPORTANT: Do not to allow the adhesive surface of the panels to touch the vehicle prior to being in the correct location.** When aligned, press and hold in position for 30 seconds to ensure proper adhesion. See Figure 3 for proper alignment.



6. As shown in Figure 4, remove the 3M tape from back of the door handle bucket with the Putco logo.



7. While pulling the door handle out slightly, insert the bucket so it sets with the rear tabs in the surrounding gap and the buckets interlock. **IMPORTANT: Do not to allow the adhesive surface of the panels to touch the vehicle prior to being in the correct location.** When aligned, press and hold in position for 30 seconds to ensure proper adhesion. See Figure 5 for proper alignment. (Driver's handle shown)



8. Repeat steps 3 - 7 for each door.