



Technical Support Line: (952) 985-5675 Email: Info@QA1.net

INSTALLATION INSTRUCTIONS

QA1 P/N 5275 Lower Trailing Arm Relocation Brackets 1982-2002 Camaro/Firebird

READ ALL INSTRUCTIONS CAREFULLY AND THOROUGHLY PRIOR TO STARTING INSTALLATION. PRODUCTS THAT HAVE BEEN INSTALLED ARE NOT ELIGIBLE FOR RETURN. USE THE PROPER JACKING LOCATIONS. DEATH OR SERIOUS INJURY CAN RESULT IF INSTRUCTIONS ARE NOT CORRECTLY FOLLOWED. A GOOD CHASSIS MANUAL, AVAILABLE AT YOUR LOCAL PARTS STORE, MAY ALSO AID IN YOUR INSTALLATION.

• DISCLAIMER / WARRANTY •

QA1 WARRANTS THAT THE PRODUCTS WILL BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP FOR ONE YEAR FROM DATE OF SALE TO THE ORIGINAL PURCHASER. QA1 MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. QA1 SHALL HAVE NO OBLIGATION UNDER THE FOREGOING WARRANTY WHERE THE DEFECT IS THE RESULT OF IMPROPER OR ABNORMAL USE, YOUR NEGLIGENCE, VEHICLE ACCIDENT, IMPROPER OR INCORRECT INSTALLATION OR MAINTENANCE, NOR WHEN THE PRODUCT HAS BEEN REPAIRED OR ALTERED IN ANY WAY. QA1'S LIABILITY IN THE CASE OF DEFECTIVE PRODUCTS SUBJECT TO THE FOREGOING WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT QA1'S OPTION, OF THE DEFECTIVE PRODUCTS.

THE USER UNDERSTANDS AND RECOGNIZES THAT RACING PARTS, SPECIALIZED STREET ROD EQUIPMENT, AND ALL PARTS AND SERVICES SOLD BY QA1 ARE EXPOSED TO MANY AND VARIED CONDITIONS DUE TO THE MANNER IN WHICH THEY ARE INSTALLED AND USED. QA1 SHALL BEAR NO LIABILITY FOR ANY LOSS, DAMAGE OR INJURY, EITHER TO A PERSON OR TO PROPERTY, RESULTING FROM THE INSTALLATION, DIRECT OR INDIRECT USE OF ANY QA1 PRODUCTS OR INABILITY BY THE BUYER TO DETERMINE PROPER USE OR APPLICATION OF QA1 PRODUCTS. WITH THE EXCEPTION OF THE LIMITED LIABILITY WARRANTY SET FORTH ABOVE, QA1 SHALL NOT BE LIABLE FOR ANY CLAIMS, DEMANDS, INJURIES, DAMAGES, ACTIONS, OR CAUSES OF ACTION WHATSOEVER TO BUYER ARISING OUT OF OR CONNECTED WITH THE USE OF ANY QA1 PRODUCTS. MOTORSPORTS ARE DANGEROUS; AS SUCH, NO WARRANTY OR REPRESENTATION IS MADE AS TO THE PRODUCT'S ABILITY TO PROTECT THE USER FROM INJURY OR DEATH. THE USER ASSUMES THAT RISK!

TOOLS AND SUPPLIES REQUIRED

- Floor jack and jack stands
- 18mm socket and combination wrench
- Torque wrench
- Tire chocks
- Blue Loctite™
- Grease gun
- Lug wrench
- Hand grinder
- Mig welder

REMOVAL OF STOCK TRAILING ARMS

1. Place the vehicle on a level surface and place tire chocks in front of and behind front tires.
2. Support the rear of the vehicle on jack stands and remove the rear wheels.
3. Place a floor jack under the differential and lift up slightly to remove tension from the trailing arm bolts. Make sure not to lift the vehicle off the jack stands. *NOTE: Keep the floor jack under vehicle during the complete removal and installation procedure.*


CAUTION: Do not remove both trailing arms at the same time or the axle will rotate and the trailing arm installation will be much more difficult.

4. Remove the rear bolt from the trailing arm and rotate the arm out of the way.
5. Using the relocation bracket as a reference, clean the surface of the stock trailing arm mounting bracket for welding.

Notes:

- a. The parking brake cable retaining bracket on later model cars will need to be modified.
- b. The spacer sleeves in this kit are to be mounted in the factory trailing arm location. Using the supplied bolts, nuts and thick washers, install the relocation bracket onto the stock trailing arm bracket. The relocation brackets should sit tight against the stock bracket for proper welding (torque bolts to 70 lb. ft.).

6. Using the supplied bolts, nuts, and thick washers, attach the trailing arm to the relocation bracket. Snug but do not torque at this time.
7. Make several tack welds around edges of relocation bracket. Remove the trailing arm from the relocation bracket and stitch weld around edges of the relocation bracket. **Note: Welding should be done by an experienced welder.**
8. After welding is complete, paint the brackets and welded areas to prevent rusting.
9. Re-install the trailing arm into the relocation bracket using Blue Loctite™ on threads and torque to 70 lb. ft.
10. Repeat steps 4-8 on other side of vehicle.

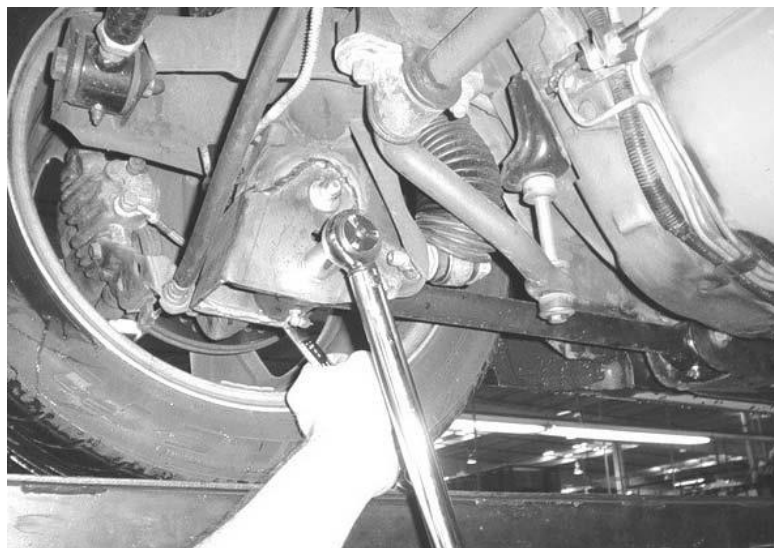

Note: It is highly recommended that you run QA1 boxed control arms P/N 5204. Stock arms tend to flex and twist under hard acceleration and aggressive cornering.

Dedicated Technical Support Team

QA1 is dedicated to providing quality support and instructions. We employ passionate racers and car enthusiasts that know our products and the industry to better serve you.

Check out our tech videos at www.YouTube.com/QA1Tech for:

- Frequently Asked Questions
- Quick Tips
- Install Information
- Tuning and Repair Guides
- Other technical information

Or call to speak with one of our experts: 1.800.721.7761

*Our technical support and order lines are open Monday - Friday, 8 am to 5 pm CST.

 [Facebook.com/QA1Motorsports](https://www.facebook.com/QA1Motorsports)

 [Twitter.com/QA1Motorsports](https://twitter.com/QA1Motorsports)

 [Instagram.com/QA1Motorsports](https://www.instagram.com/QA1Motorsports)



www.QA1.net/Tech