



HVAC Application Instructions

Structural Vibration & “Oil Canning” - Noise Reduction

- Select a single sheet from the package
- Locate the first panel you wish to treat for vibration/noise reduction – with your knuckle – knock on this panel. You will hear a hollow vibrating noise from the panel)
- Remove the Brown release paper backing from the HushMat material (This exposes the black butyl rubber – be careful not to allow the part to fold or stick to itself – The adhesion is very aggressive and this could damage the HushMat)
- Place the HushMat butyl rubber side against the center area of the panel you wish to treat.
- Apply hand pressure or use the HushMat Pro-Installation Roller to smooth out/bond the sheet to the HVAC panel.
- With your knuckle – knock on the panel again – you will hear a solid “thud” and the vibration/noise will be significantly reduced.
- Repeat these steps for each panel you wish to treat.
- HUSHMat treatment is Universal to all makes/models HVAC units and duct work as pictured below

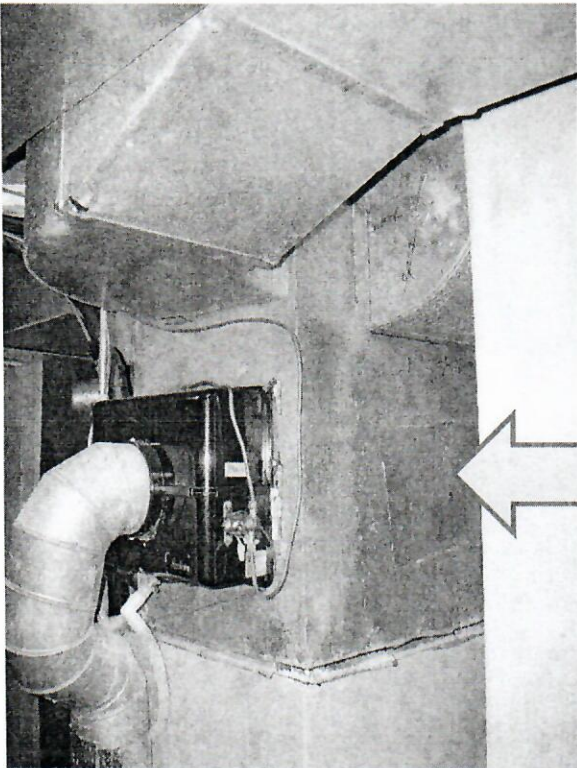

Universal to all HVAC Units

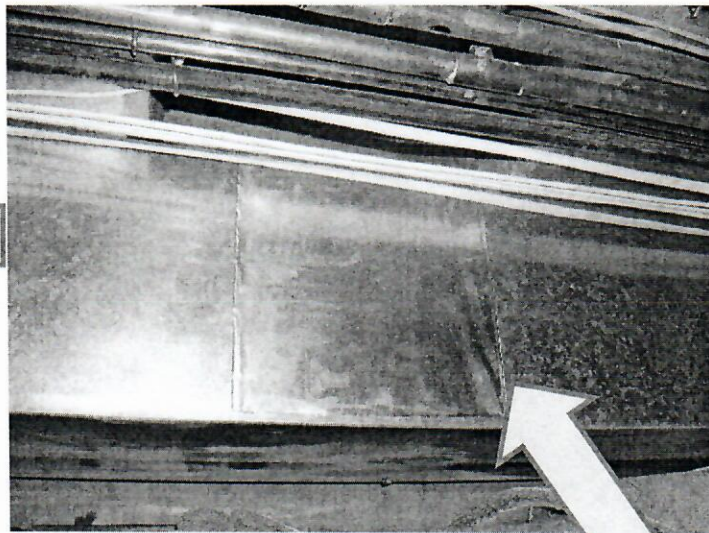

Universal to all HVAC Ducts