



## 2024+ Hyundai Santa Fe Mud Flap Installation Instructions















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** Low-profile offset, ratcheting, flat & Phillips screwdrivers, pick.

**ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages.

<b>MF118 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</b>			
<b>MUD FLAP KIT PN MF118</b>	<b>SEE PAGE 4 DRAWINGS</b>	<b>PART DESCRIPTION</b>	<b>QUANTITY</b>
MF118-LF		LEFT FRONT	<b>1</b>
MF118-RF		RIGHT FRONT	<b>1</b>
MF118-LR		LEFT REAR	<b>1</b>
MF118-RR		RIGHT REAR	<b>1</b>
<b>BRACKET KIT PN BMF118</b>			
BMF118-LR		BRACKET LEFT REAR	<b>1</b>
BMF118-RR		BRACKET RIGHT REAR	<b>1</b>
BMF118-RE2		BRACKET REAR	<b>2</b>
<b>HARDWARE KIT PN HMF118</b>			
.25SP		SPACER	<b>2</b>
1SP		LONG SPACER	<b>2</b>
1SS		SCREW	<b>4</b>
2SS		LONG SCREW	<b>4</b>
BLKNUT		NUT	<b>4</b>
HXBLT		BOLT	<b>4</b>
INS5		INSERT	<b>4</b>
POLCLP		CLIP	<b>6</b>
SMWASH		WASHER	<b>16</b>




## 2024+ Hyundai Santa Fe Mud Flap Installation Instructions

**FRONT FLAP** Turn steering wheel towards installation side to access interior wheel well. **Do not fully tighten fasteners until flap is aligned to vehicle.** 1 Flap Bracket & Hardware → 1 x 1SP; 2 x 1SS; 1 x 2SS; 1 x INS5; 2 x POLCLP; 3 x SMWASH

**FIGURE A** Remove fasteners 1 - 3.

**FIGURE B** Move liner aside to install POLCLP over mounts 1 & 2. Replace liner.


**FIGURE C** Remove and discard pin A from INS5. Install stem B into mount 3.

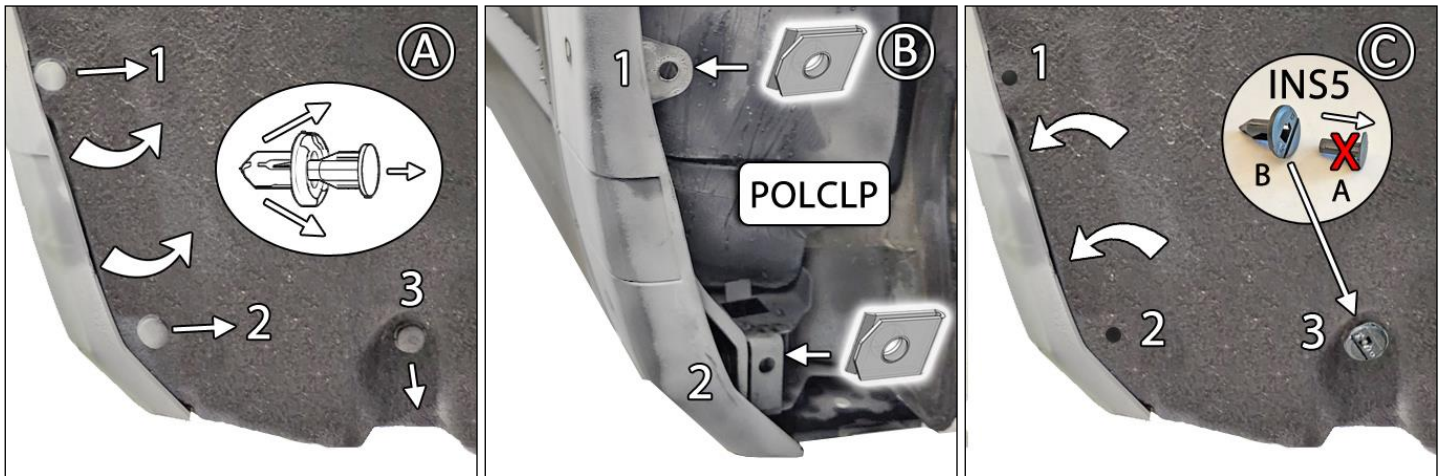

**FIGURE D** Place 1SP between liner mount 3 and flap.

**FIGURE E** Place logo-side of flap facing vehicle rear. Install SMWASH & 1SS into mounts 1 & 2 and SMWASH & 2SS through mount 3.

**FIGURE F** Align flaps to even ground before tightening fasteners until just seated.

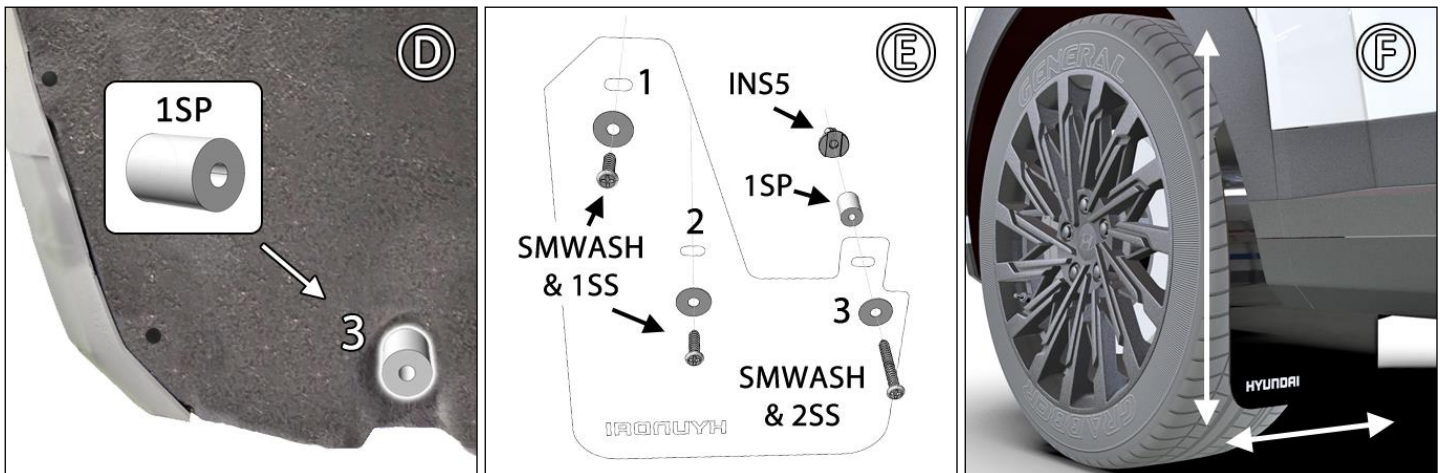

**REAR FLAP** Do not fully tighten fasteners until flap is completely aligned to vehicle.


Bracket/Hardware 1 x Flap → 1 x BMF118-LR/RR; 1 x BMF118-RE2; 1 x .25SP; 1 x 2SS; 2 x BLKNUT; 2 x HXBLT; 1 x INS5; 1 x POLCLP; 5 x SMWASH

**FIGURE G/H** Remove fasteners 1 & 2. Move liner away to install POLCLP over mounts 1 & 2. Replace liner.

**FIGURE I** Short leg A of BMF118-RE2 pointed towards ground, place INS5 through BMF118-RE2 leg B and mount 2.




## 2024+ Hyundai Santa Fe Mud Flap Installation Instructions

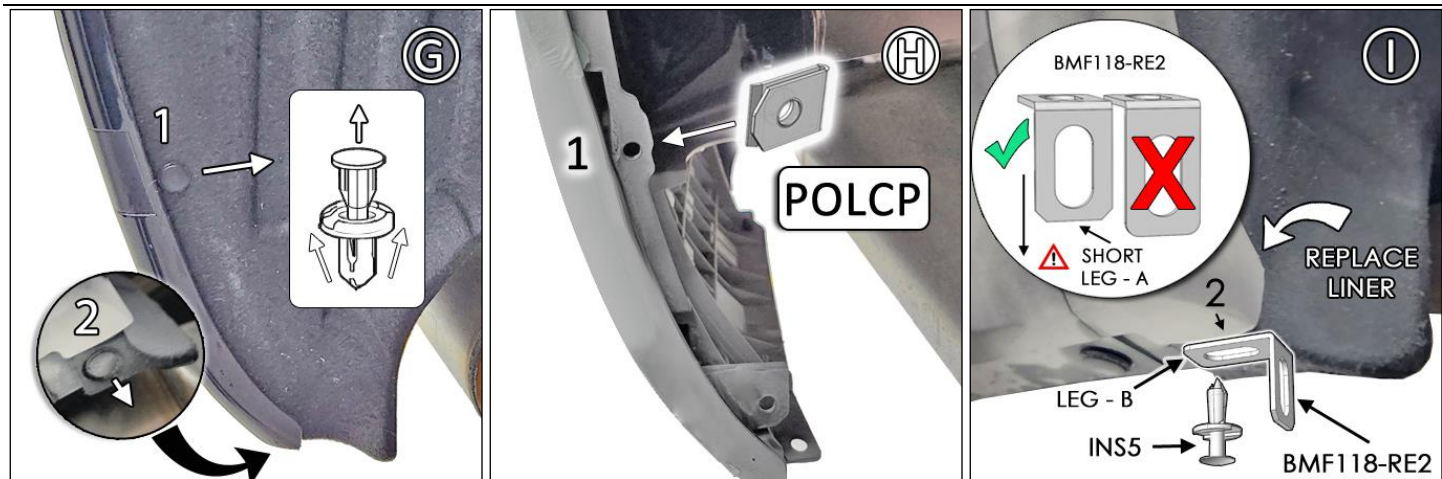

**FIGURE J** Position .25SP between flap & mount 1.

**FIGURE K** Place logo-side of flap facing vehicle rear. Mount curved side of BMF118-LR/RR over flap, facing away from tire. Install SMWASH & 2SS through bracket & flap mount 1. Place SMWASH & HXBLT through mounts 3 & 4, securing opposite sides with SMWASH & BLKNUT.

**FIGURE L** Align flaps to even ground before tightening fasteners until just seated.

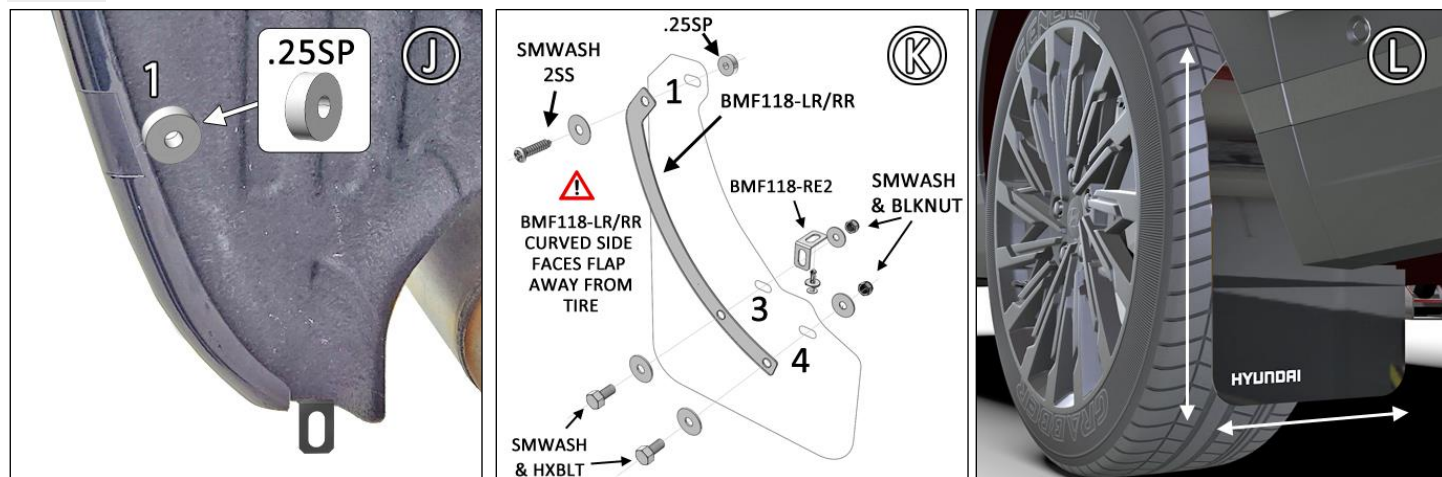



## 2024+ Hyundai Santa Fe Mud Flap Installation Instructions

