

# IMF103



## 2024+ KONA N LINE MUD FLAP INSTALLATION INSTRUCTIONS




Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** 10mm/11mm wrench, Phillips screwdriver, pick.

**Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF103 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF103 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF103-LF	LEFT FRONT	1
MF103-RF	RIGHT FRONT	1
MF103-LR	LEFT REAR	1
MF103-RR	RIGHT REAR	1
BRACKET PN: BMF103		
BMF103 	BRACKET	4
HARDWARE PN: HMF103		
1.5SS 	SCREW	8
BLKNUT 	NUT	4
HXBOLT 	BOLT	4
POLCLP 	CLIP	4
SMWASH 	WASHER	16
SMF103-LR 	SPACER LEFT REAR	1
SMF103-RR 	SPACER RIGHT REAR	1
SPGCLP 	SPRING CLIP	4

### FRONT MUD FLAP

To access interior wheel well, turn steering wheel towards installation side.

Bracket/Hardware for 1 Flap → 1 x BMF103; 2 x 1.5SS; 1 x BLKNUT; 1 HXBOLT; 4 x SMWASH; 2 x SPGCLP

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.


**FIGURE A** Remove factory fasteners 1 - 3. Move liner aside.

**FIGURE B** Install SPGCLP over inner liner mounting points 1 and 2. Re-install liner behind side skirt. Re-install fastener 3.

**FIGURE C** Place flap against fender with logo facing rear bumper. Position BMF103 bracket against mud flap mounts.

Install SMWASH & 1.5SS through mounts 1 & 2. Install SMWASH & HXBOLT through flap mount 3, then secure with SMWASH & BLKNUT. Align flaps to even ground before tightening fasteners until washers are just seated.

## 2024+ KONA N LINE MUD FLAP INSTALLATION INSTRUCTIONS

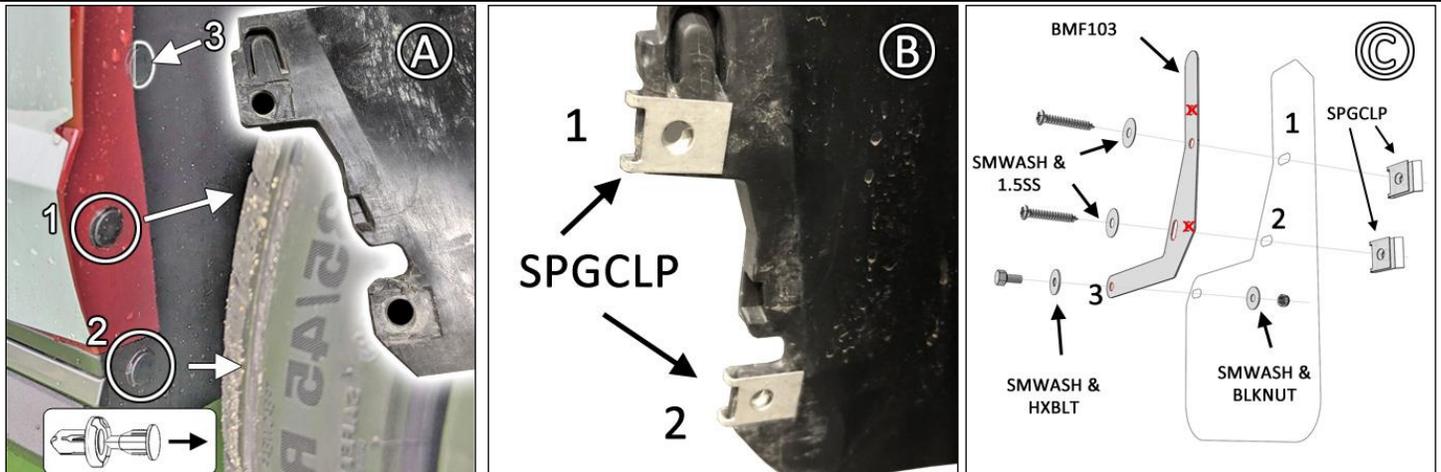


**REAR MUD FLAP** Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF103; 2 x 1.5SS; 1 x BLKNUT; 1 HXBLT; 2 x POLCLP; 1 x SMF103-LR/RR; 4 x SMWASH

**FIGURE D** Remove and retain factory fasteners 1 - 3.

**FIGURE E** Pull liner away to access and uninstall factory anchors.

**FIGURE F** Install POLCLP over mounts 1 & 3. Replace liner.

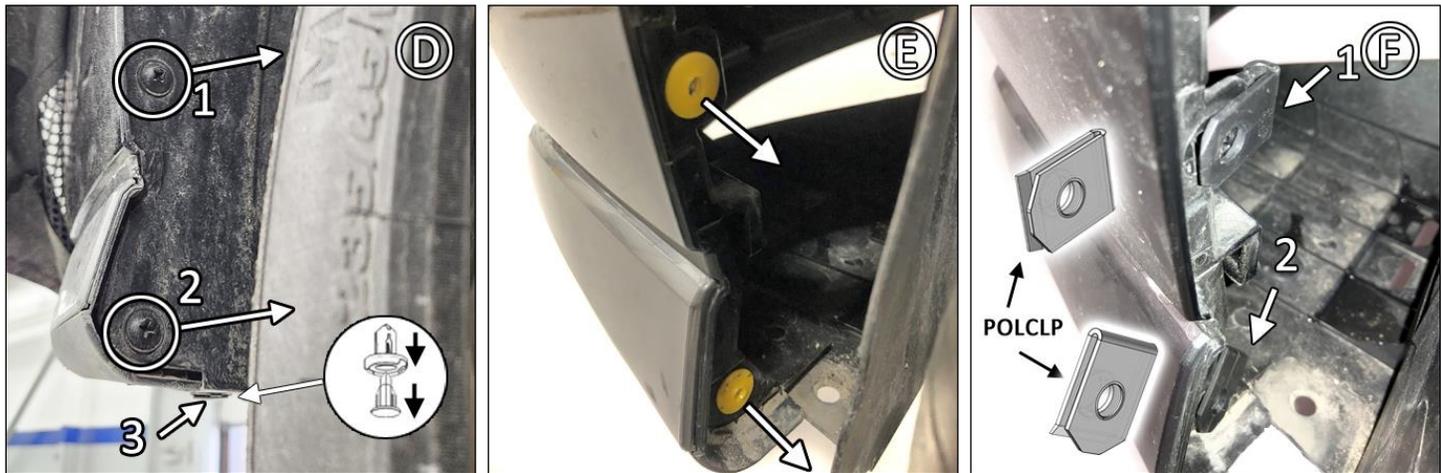

**FIGURE G** Reinstall factory fastener 3. Wipe area clean before adhering SMF103-LR/RR against mounting points.


**FIGURE H** Place flap with logo facing rear bumper. Position BMF103 against flap, then install SMWASH & 1.5SS through mounts 1 & 2. Install SMWASH & HXBLT through flap and bracket mount 4. Secure with SMWASH & BLKNUT.

**FIGURE I** Align mud flaps to even ground before tightening fasteners until washers are just seated.

# IMF103



## 2024+ KONA N LINE MUD FLAP INSTALLATION INSTRUCTIONS

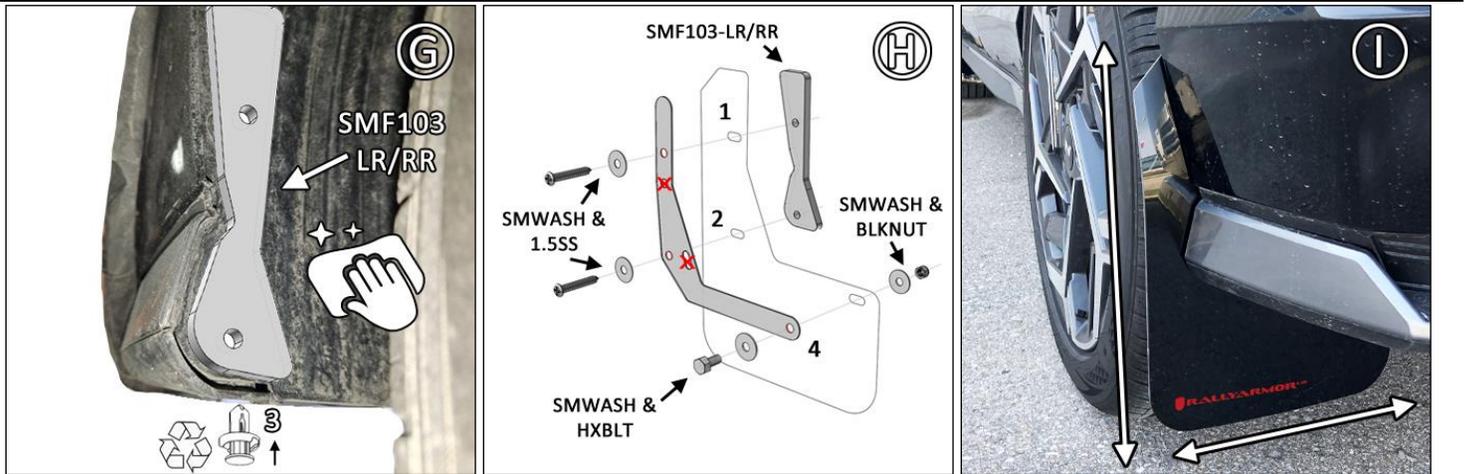

FRONT

MF103 MOUNTING DIAGRAM

REAR

