

IMF110



2022+ Toyota Tundra Installation Instructions Also online www.rallyarmor.com












Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.
ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages over time.

MF110 KIT CONTENTS <i>CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</i>				
MUD FLAP KIT PN:	MF110	SEE PAGE 3 DRAWINGS	PART DESCRIPTION	QUANTITY
	MF110-LF		LEFT FRONT	1
	MF110-RF		RIGHT FRONT	1
	MF110-LR		LEFT REAR	1
	MF110-RR		RIGHT REAR	1
BRACKET KIT PN:	BMF110	SEE PG 3		
	BMF110		BRACKET FRONT & REAR	4
HARDWARE KIT PN:	HMF110	SEE PG 3		
	1SS		SCREW	14
	1.5SS		LONG SCREW	2
	BLKNUT		NUT	4
	HXBLT		BOLT	4
	SMF110-LR		SPACER LEFT REAR	1
	SMF110-RR		SPACER RIGHT REAR	1
	SMF29-1		SPACER	2
	SMWASH		WASHER	24

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side. Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware 1 FLAP → 1 x BMF110; 4 x 1SS; 1 x BLKNUT; 1 x HXBLT; 6 x SMWASH

IMAGE A If equipped, remove factory splash guards. Uninstall fasteners 1 - 4.

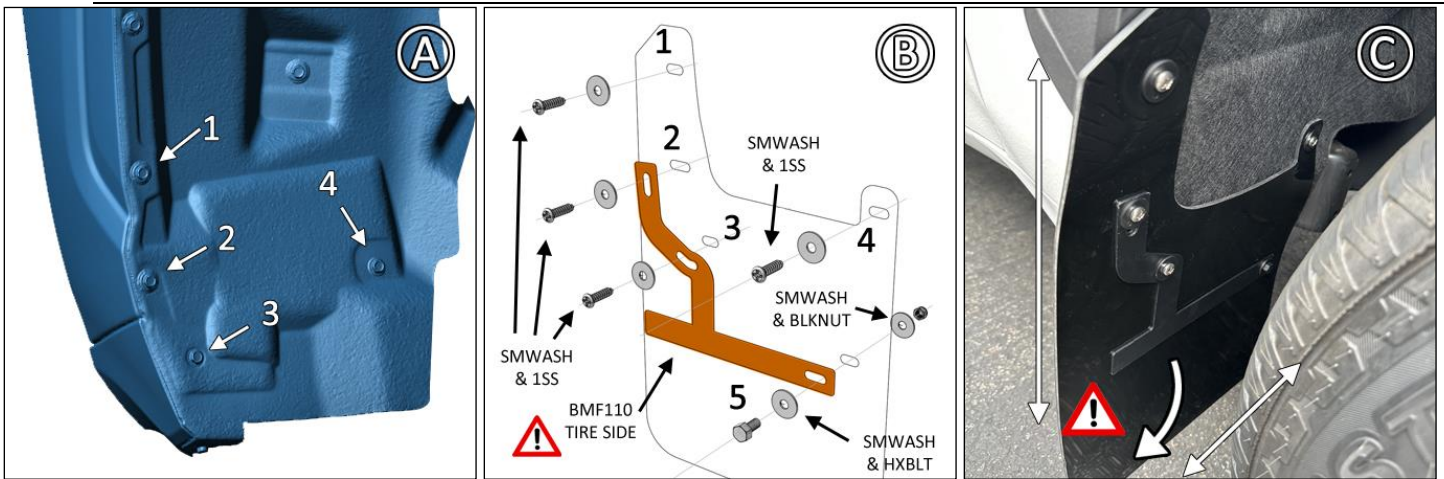
IMAGE B Place flap against liner, then Install SMWASH & 1SS into mounts 1 & 4. Position BMF110 between mud flap and tire, against mounting points 2, 3 & 5. Install SMWASH & 1SS into mounts 2 & 3 and SMWASH & HXBLT to mount 5. Secure reverse side of mount 5 with SMWASH & BLKNUT.

IMAGE C Ensure mud flap is parallel to even ground. Adjust preferred width before hand-tightening washers just until flush to flap.

IMF110



2022+ Toyota Tundra Installation Instructions Also online www.rallyarmor.com



REAR FLAP Bracket/Hardware 1 FLAP → 1 x BMF110; 3 x 1SS; 1 x 1.5SS; 1 x BLKNUT; 1 x HXBLT; 1 x SMF29-1; 6 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

IMAGE D If equipped, remove factory splash guards. Uninstall fasteners 1 - 4.

IMAGE E Wipe clean before adhering SMF110-LR/RR to liner and SMF29-1 to mount 4.

IMAGE F/G Position flap against liner, then install SMWASH & 1SS into mounts 1 & 2. Place BMF110 between flap and tire, against mounts 3, 4 & 5. Install SMWASH & 1SS into mount 3 and SMWASH & 1.5SS into mount 4. Secure mount 5 with SMWASH & HXBLT and reverse side with SMWASH & BLKNUT.



IMAGE H/I Ensure mud flap is parallel to even ground. Adjust preferred width before hand-tightening washers flush to flap. For extra tire clearance, contour bracket towards liner.

IMF110



2022+ Toyota Tundra Installation Instructions Also online www.rallyarmor.com



FRONT

MF110 MOUNTING DIAGRAM

REAR

