

IMF114



2024+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com


















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages over time.

MF114 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION			
MUD FLAP KIT PN MF114	<i>SEE PAGE 3 DRAWINGS</i>	PART DESCRIPTION	QUANTITY
MF114-LF		LEFT FRONT	1
MF114-RF		RIGHT FRONT	1
MF114-LR		LEFT REAR	1
MF114-RR		RIGHT REAR	1
BRACKET KIT PN BMF114			
BMF96-RE		BRACKET FRONT 2	2
BMF114-FRT		BRACKET FRONT	2
BMF114-RE		BRACKET REAR	2
HARDWARE KIT PN HMF114			
1SS		SCREW	16
BLKNUT		NUT	8
HXBLT		BOLT	8
SMWASH		WASHER	34
SMF29-1		SPACER	6
SMF114-LF		SPACER LEFT FRONT	1
SMF114-RF		SPACER RIGHT FRONT	1
SMF114-LR		SPACER LEFT REAR	1
SMF114-RR		SPACER RIGHT REAR	1
SSLNUT		LOCK NUT	2
ST96		STICKER	2
POLCLP		CLIP	2

IMF114



2024+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com

FRONT FLAP Access interior wheel well by turning steering wheel towards the installation side. **Do not fully tighten fasteners until mud flap is completely aligned to vehicle.**

Bracket/Hardware 1 Flap → 1 x BMF96-RE; 1 x BMF114-FRT; 4 x 1SS; 2 x BLKNUT; 2 x HXBLT; 1 x POLCLP; 1 x SMF29-1; 1 x SMF114-LF/RF; 9 x SMWASH; 1 x SSLNUT; 1 x ST96

IMAGE A If equipped, remove factory splash guards. Remove fasteners 1 - 4. Located under fender, **temporarily** remove fastener 5.

IMAGE B Wipe areas clean prior to adhering SMF29-1 over mounts 1 & 4 and SMF114-LF/RF over mounts 2 & 3. Place POLCLP **between** fender mount 4 & liner.

IMAGE C Wipe BMF96-RE clean before affixing ST96.


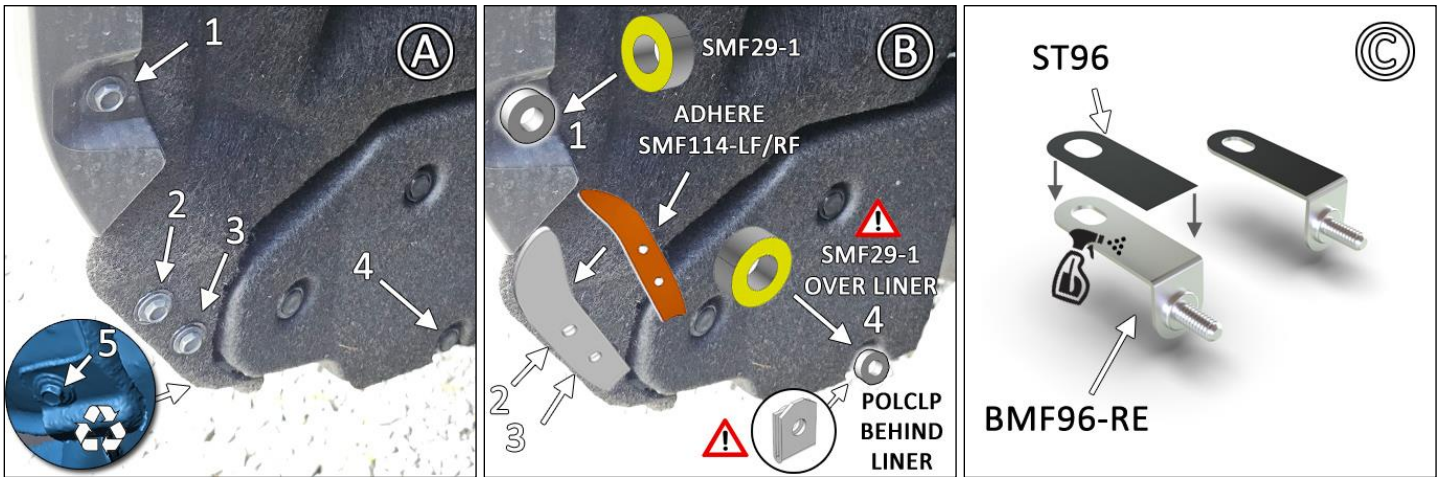


IMAGE D Place BMF96-RE over mount 5, then reinstall original fastener 5.

IMAGE E Position BMF114-FRT over flap, then both against liner. Install SMWASH & 1SS into BMF114-FRT mounts 1 – 4, SMWASH & SSLNUT onto mount 8 and SMWASH & HXBLT through tire-side mounts 6 & 7. Secure logo-side of flap mounts 6 & 7 with SMWASH & BLKNUT.

IMAGE F Ensure flap is parallel to even ground, adjusting preferred width before hand-tightening washers just until flush to flap.

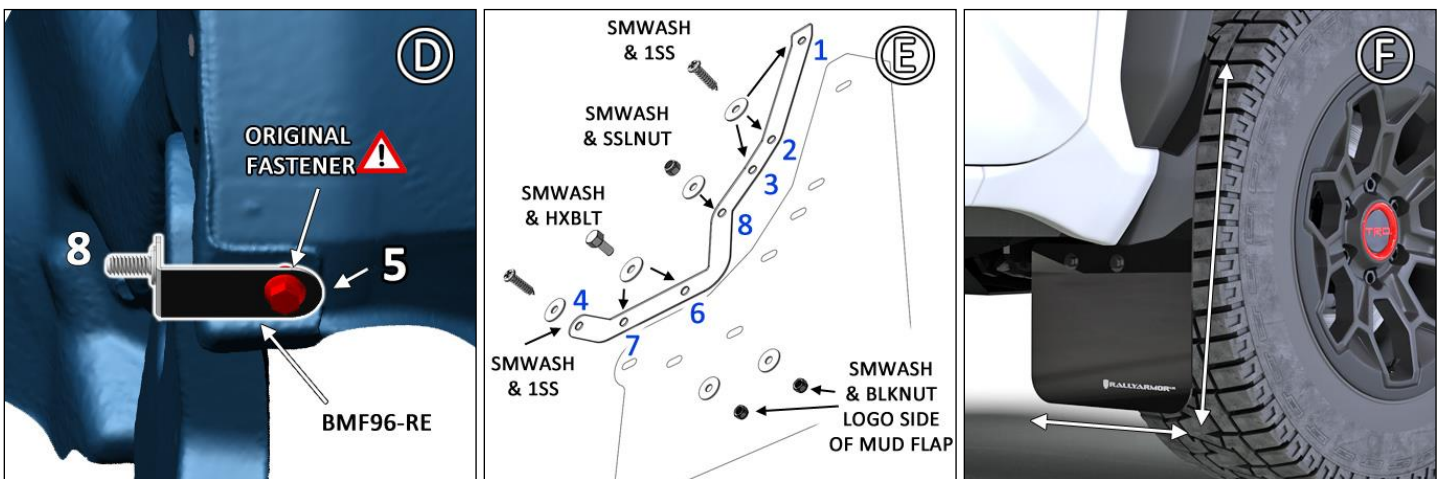

REAR FLAP 1 x BMF114-RE; 4 x 1SS; 2 x BLKNUT; 2 x HXBLT; 2 x SMF29-1; 1 x SMF114-LR/RR; 8 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

IMF114




2024+ Toyota Tacoma Installation Instructions [Also online www.rallyarmor.com](http://www.rallyarmor.com)

IMAGE G If equipped, remove factory splash guards. Uninstall fasteners 1 - 4.

IMAGE H Wipe areas clean before installing SMF29-1 over mounts 1 & 4 and SMF114-LR/RR over mounts 2 & 3.

IMAGE I Place BMF114-RE over flap, then both against liner. Install SMWASH & 1SS through BMF114-RE mounts 1 - 4. Install SMWASH & HXBLT into tire-side mounts 5 & 6 and SMWASH & BLKNUT onto bumper-side mounts 5 & 6. Ensure flap is parallel to even ground, adjusting preferred width before hand-tightening washers just until flush to flap.

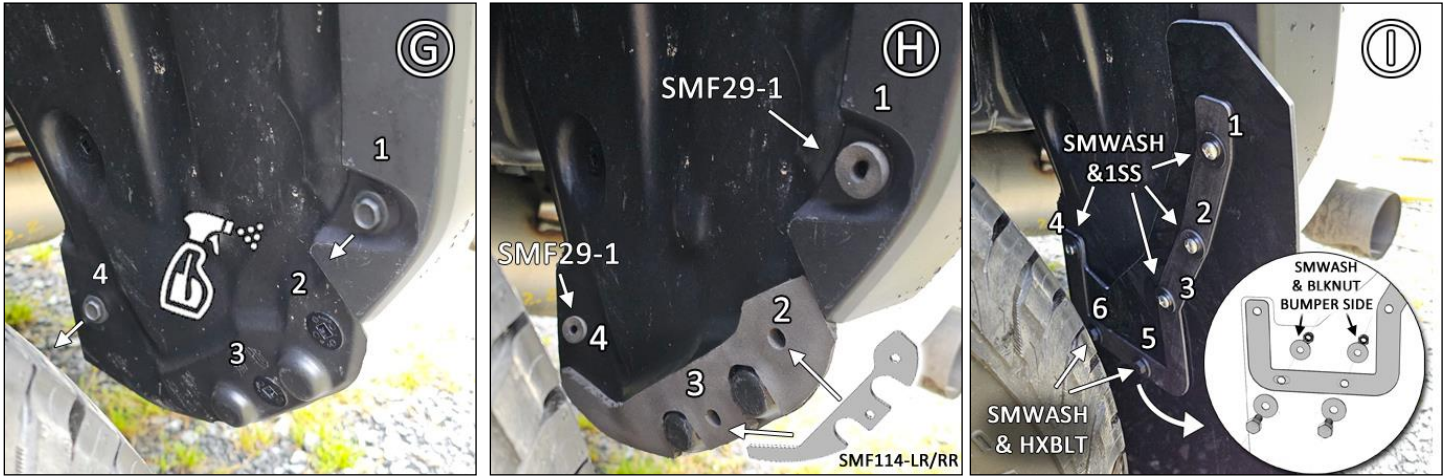

MF114 MOUNTING DIAGRAM

