

# IMF91



## 2022+ KIA EV6 MUD FLAP INSTALLATION INSTRUCTIONS














Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

**INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → [www.rallyarmor.com/support](http://www.rallyarmor.com/support)**

**Recommended Tools** 10mm/11mm wrench, Phillips screwdriver, pick.

**Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.**

**ABOUT OUR STANDARD IN MUD FLAPS** Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF91 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF91 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF91-LF	LEFT FRONT	1
MF91-RF	RIGHT FRONT	1
MF91-LR	LEFT REAR	1
MF91-RR	RIGHT REAR	1
BRACKET PN: BMF91		
BMF52-LR 	BRACKET LEFT REAR	1
BMF52-RR 	BRACKET RIGHT REAR	1
BMF57-LR 	BRACKET LEFT FRONT	1
BMF57-RR 	BRACKET RIGHT FRONT	1
BMF63 	BRACKET FRONT	2
HARDWARE PN: HMF91		
1.5SS 	SCREW	8
INS5 	INSERT	4
POLCLP 	CLIP	8
SMWASH 	WASHER	12
SMF29-1 	SPACER	8
SSLNUT 	LOCKNUT	4

## 2022+ KIA EV6 MUD FLAP INSTALLATION INSTRUCTIONS


**FRONT FLAP** To access interior wheel well, turn steering wheel towards installation side. **Do not fully tighten fasteners until mud flap is completely aligned to vehicle.**

Bracket/Hardware for 1 Flap → 1 x BMF57-LR/RR; 1 x BMF63; 2 x 1.5SS; 1 x INS5; 2 x SMF29-1; 3 x SMWASH; 1 x SSLNUT

**FIGURE A** Remove factory fasteners 1 - 3. Temporarily remove and retain fastener 4. Pull liner away.

**FIGURE B** Install POLCLP over mounts 1 & 2. Replace liner.


**FIGURE C** Stud facing tire, place BMF57-LR/RR over mount 3 then secure with INS5. Reinstall factory fastener 4.

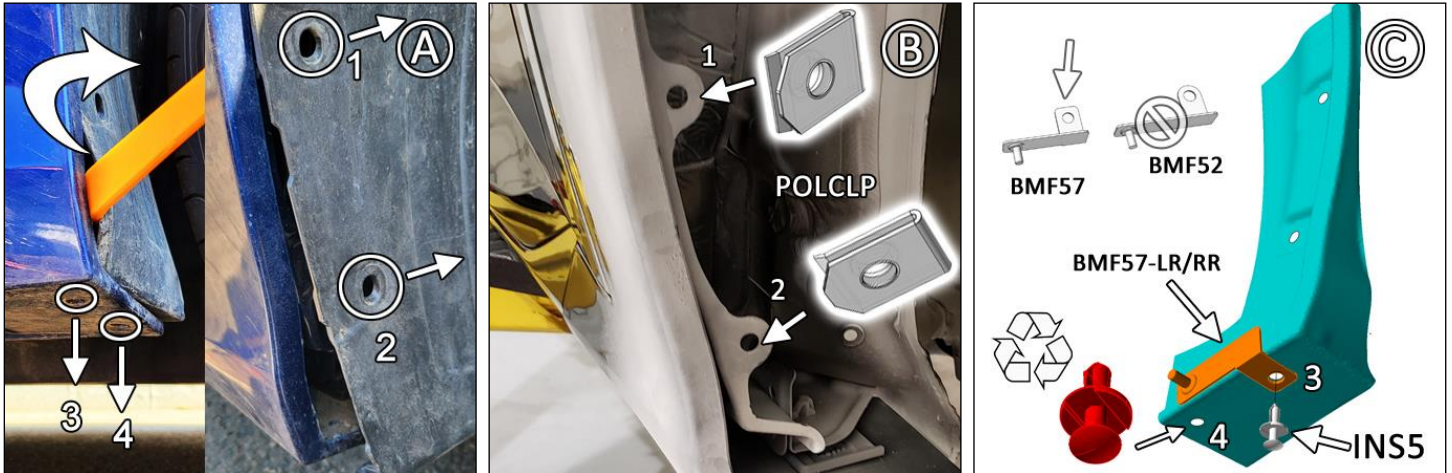

**FIGURE D** Wipe liner before adhering SMF29-1 over mounts 1 & 2.

**FIGURE E** Logo-side of flap facing rear bumper, position BMF63 against flap mounting points. Install SMWASH & 1.5SS through mounts 1 & 2 and SMWASH & SSLNUT onto mount 5.

**FIGURE F** Align flaps to even ground before tightening fasteners just until washers are seated.

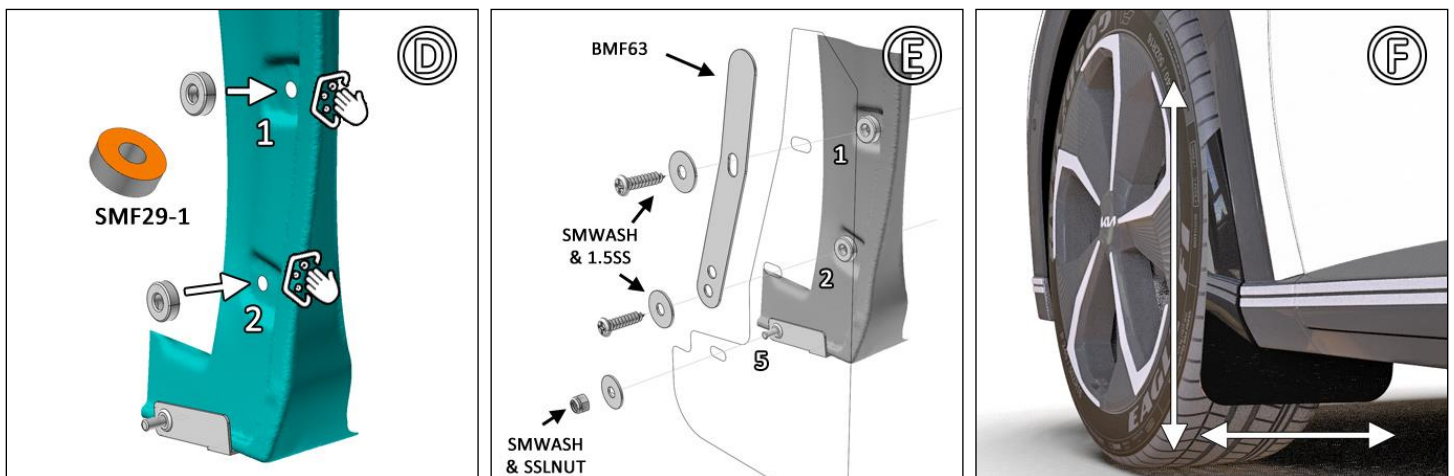

## 2022+ KIA EV6 MUD FLAP INSTALLATION INSTRUCTIONS


### REAR MUD FLAP Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF52-LR/RR; 2 x 1.5SS; 1 x INS5; 2 x SMF29-1; 3 x SMWASH; 1 x SSLNUT

**FIGURE G** Remove factory fasteners 1 - 3. Lift liner away.

**FIGURE H** Install POLCLP over mounts 1 & 2. Replace liner.


**FIGURE I** Stud facing tire, position BMF52-LR/RR over mount 3 then secure with INS5.

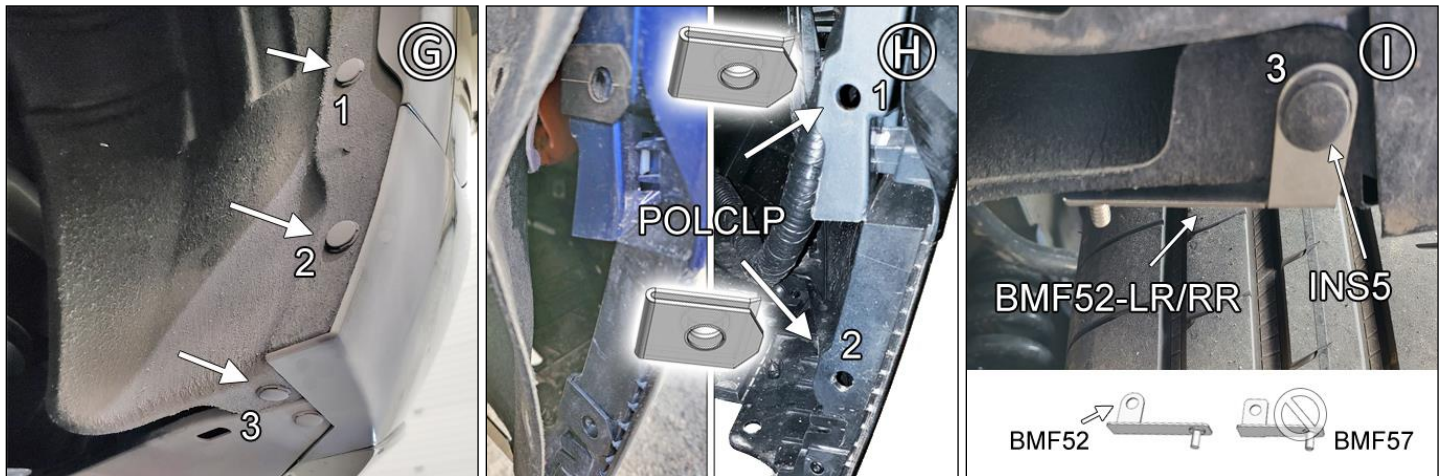

**FIGURE J** Wipe liner before adhering SMF29-1 over liner mounts 1 & 2.

**FIGURE K** Place logo-side of flap facing rear bumper, against mounting points. Install SMWASH & 1.5SS into mounts 1 & 2 and SMWASH & SSLNUT onto mount 4.

**FIGURE L** Align flap to even ground before tightening fasteners just until washers are seated.

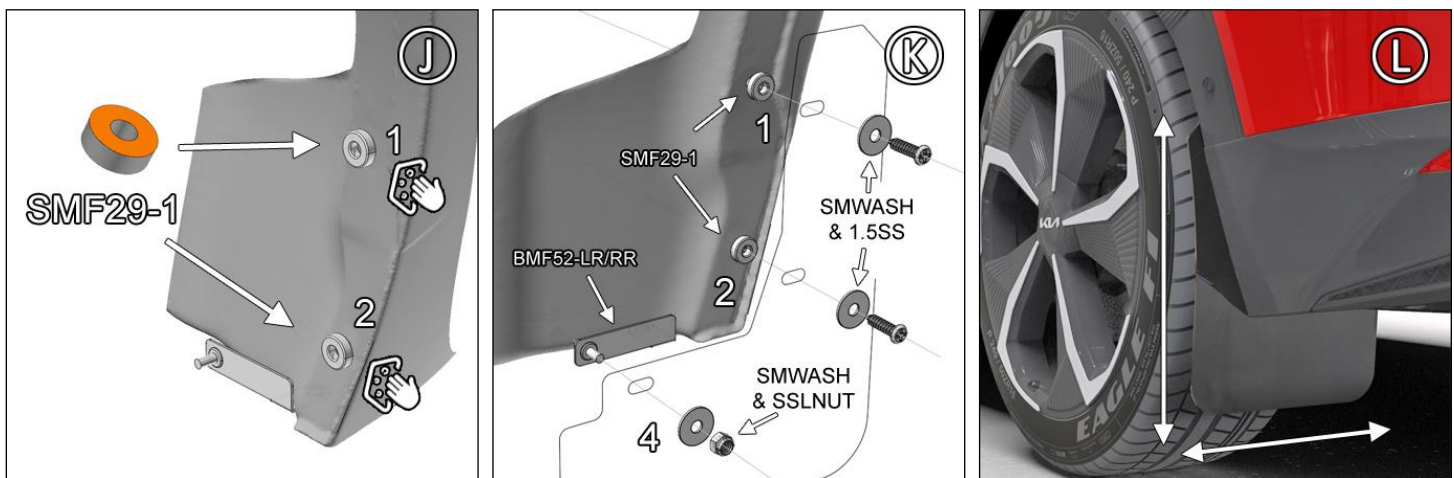

# IMF91



## 2022+ KIA EV6 MUD FLAP INSTALLATION INSTRUCTIONS



### MF91 MOUNTING DIAGRAM

FRONT

REAR

