

IMF96



2021+ FORD MUSTANG MACH-E MUD FLAP INSTALLATION INSTRUCTIONS

















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 10mm/11mm wrench, Torx and Phillips screwdriver, pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF96 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF96 SEE PAGE 4	PART DESCRIPTION	QUANTITY
MF96-LF	LEFT FRONT	1
MF96-RF	RIGHT FRONT	1
MF96-LR	LEFT REAR	1
MF96-RR	RIGHT REAR	1
BRACKET PN: BMF96		
BMF96-LF	 BRACKET LEFT FRONT	1
BMF96-RF	 BRACKET RIGHT FRONT	1
BMF96-RE	 BRACKET REAR	2
HARDWARE PN: HMF96		
1SS#8	 SCREW	8
1.5SS#8	 LONG SCREW	2
BLKNUT	 NUT	2
EXPANCH	 ANCHOR	8
HXBLT	 BOLT	2
RACLP	 CLIP	4
SMF29-1	 ROUND SPACER	6
SMF96-LR	 SPACER LEFT REAR	1
SMF96-RR	 SPACER RIGHT REAR	1
SMWASH	 WASHER	16
SSLNUT	 LOCK NUT	2

2021+ FORD MUSTANG MACH-E MUD FLAP INSTALLATION INSTRUCTIONS

FRONT MUD FLAP

To access interior wheel well, turn steering wheel towards installation side.

Bracket/Hardware for 1 Flap → 1 x BMF96-LF/RF; 1 x 1SS#8; 1 x 1.5SS#8; 1 x BLKNUT; 1 x EXPANCH; 1 x HXBLT; 2 x RACLP; 2 x SMF29-1; 4 x SMWASH

Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

FIGURE A Remove factory fasteners 1 & 2.

FIGURE B Fold EXPANCH, then install into mount 1. Use a pick to open EXPANCH hole about ½" into liner.

FIGURE C Adhere SMF29-1 over mount 1.

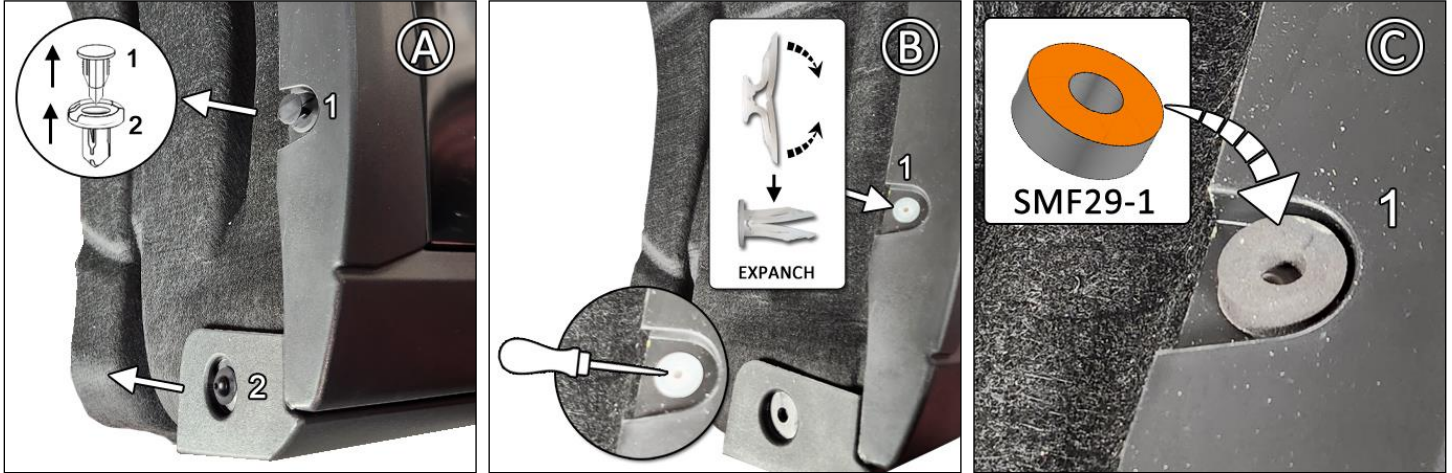


FIGURE D Install angled section of BMF96-LF/RF behind side skirt.

FIGURE E Align side skirt hole over BMF96-LF/RF hole. Bottom of bracket nests against side skirt.

FIGURE F Adhere SMF29-1 over mount 2.

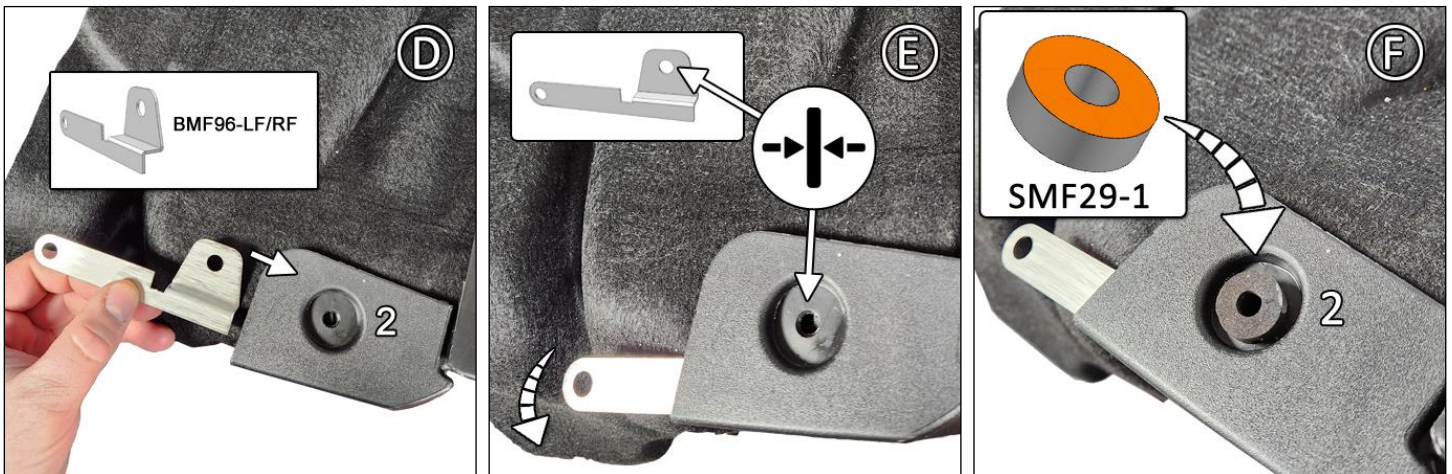


FIGURE G Place flap with logo facing rear bumper, against mounting points. Install SMWASH & 1SS#8 into mount 1, SMWASH & 1.5SS#8 to mount 2, SMWASH & HXBLT into mount 3. Secure opposite side of mount 3 with SMWASH & BLKNUT.

FIGURE H Align flaps before tightening fasteners.

FIGURE I Install RACLP on upper and lower sections of flap.

2021+ FORD MUSTANG MACH-E MUD FLAP INSTALLATION INSTRUCTIONS



REAR MUD FLAP Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF96-RE; 3 x 1SS#8; 3 x EXPANCH; 1 x SMF29-1; 1 x SMF96-LR/RR; 4 x SMWASH; 1 x SSLNUT

FIGURE J Remove fasteners 1 - 3.

FIGURE K Fold EXPANCH, then install into mounts 1 - 3. Use a pick to open EXPANCH hole about ½" into liner.

FIGURE L Adhere SMF29-1 over mount 1. Wipe recessed area of liner clean. Ensure mounts 2 & 3 are visible through SMF96-LR/RR, then adhere.

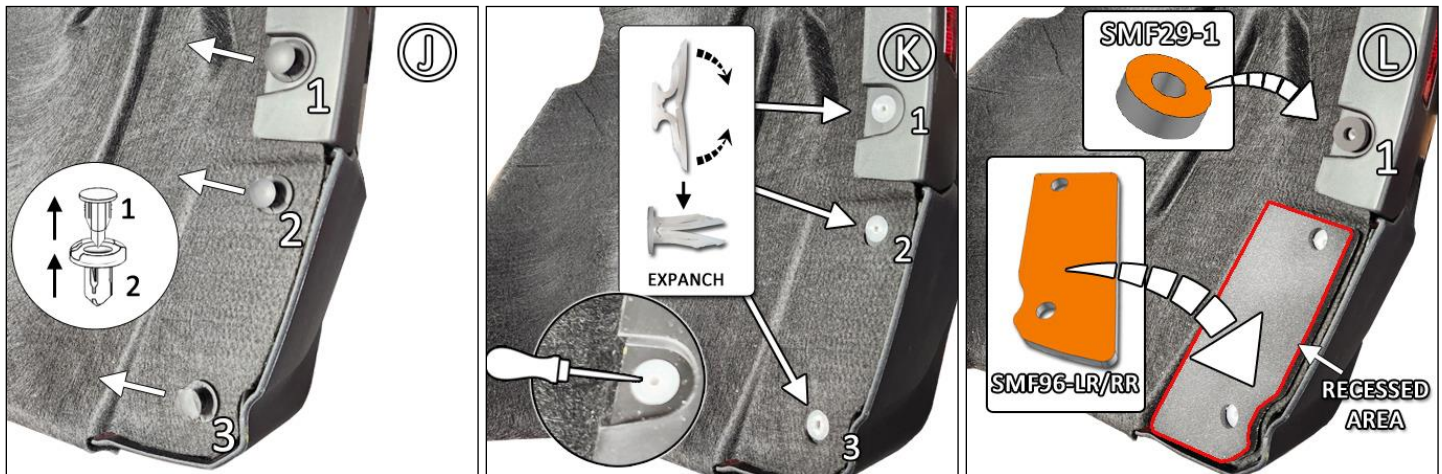


FIGURE M Located underneath vehicle, temporarily remove fastener 4. Stud of BMF96-RE facing tire, install using fastener 4.


FIGURE N Place logo-side of flap facing rear bumper, against mounting points. Install SMWASH & 1SS#8 into mounts 1 – 3 and SMWASH & SSLNUT onto mount 5.

FIGURE O Align flaps before fully tightening fasteners.

IMF96



2021+ FORD MUSTANG MACH-E MUD FLAP INSTALLATION INSTRUCTIONS

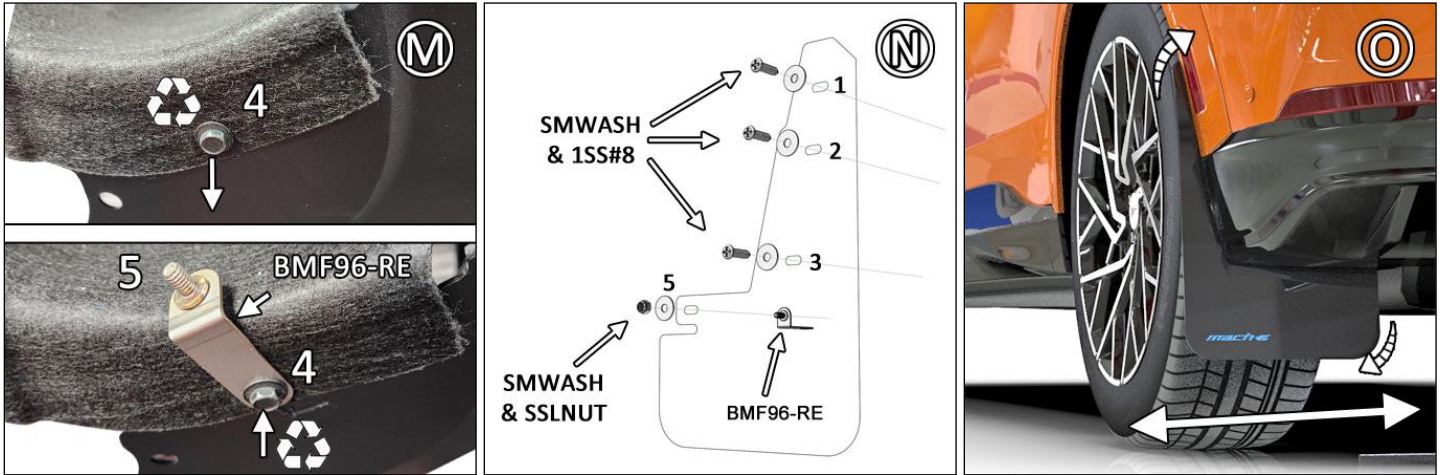

FRONT

MF96 MOUNTING DIAGRAM

REAR

