



## JK All-Terrain Wheel Liner Kit

Contents:	QTY
1. All Terrain Wheel Liners	(4)
2. Side Marker Retainer	(2)
3. Push Rivet	(28)
4. M6 Flange Bolt	(8)
5. M6 Flange Nut	(8)

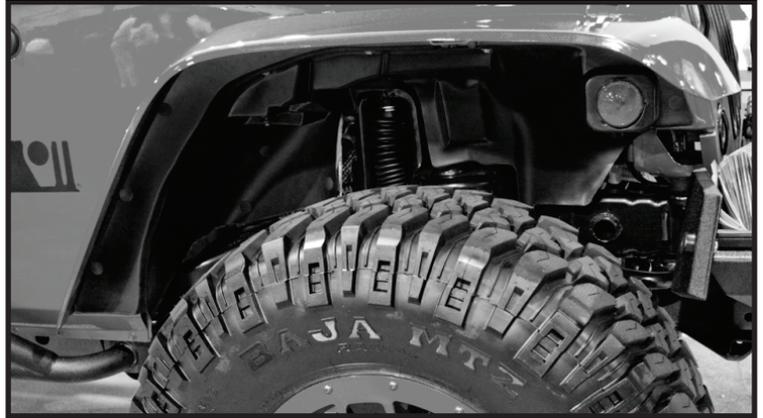

NOTE: This product is intended to be used with Rugged Ridge All-Terrain Flat Flares (P/N 11620.10). Instructions for the removal of OE flares and installation of Flat Flares can be found online at [www.omix-ada.com](http://www.omix-ada.com).

1. Install OE side marker into the mounting location of the front Wheel Liner and secure it using the Side Marker Retainer. NOTE: If Flat Flares were previously installed, disconnect electrical connector and remove OE side marker from the Side Marker Relocation Bracket. Side Marker Relocation Bracket should be removed from the vehicle. Note: For ease of installation of the side marker retainer, it may be necessary to make slight bends on the four tabs of the Side Marker Retainer with pliers as shown below.

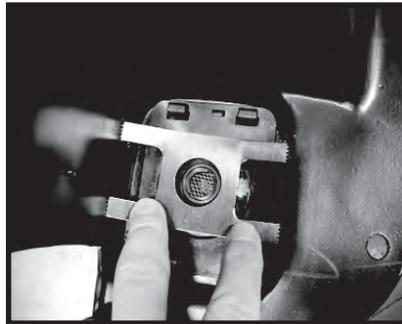

2. If Flat Flares were previously installed, remove all bolts securing the front Flat Flare except for the top 2 bolts. Reconnect electrical connector to the side marker. Use supplied Push Rivets to loosely secure fender liner to the mounting holes previously occupied by the Flat Flare mounting bolts.



## JK All-Terrain Wheel Liner Kit


3. Loosely secure the Wheel Liner with the 4 factory bolts used to mount the factory wheel liner to the vehicle. Once all holes are lined up, fully engage push rivets and tighten all bolts. **NOTICE:** Do not overtighten bolts as this could cause damage to the Liners.



4. If Flat Flares were previously installed, remove all bolts securing the rear Flat Flare except for the top 2 bolts. Position Wheel Liner and loosely install Push Rivets. Using the supplied M6 hardware, loosely fasten the wheel liner to the vehicle using the mounting locations provided in the Wheel Liner. Once all holes are lined up, fully engage push rivets and tighten all bolts. **NOTICE:** Do not overtighten bolts as this could cause damage to the Liners.



5. Secure the axle vent hose with the Wheel Liner mounting hardware on the rear passenger side. There is a hole in the plastic clip attached to the hose for making the attachment. The hose should be secured to the rear most mounting hole in the Wheel Liner just above the frame rail.

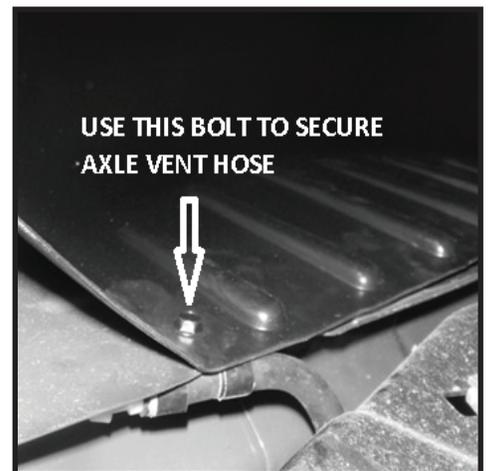

For assistance, please contact Omix-ADA Technical Support department  
(770) 614-6101  
techsupport@omix-ada.com  
© Copyright 2011, Omix-Ada