

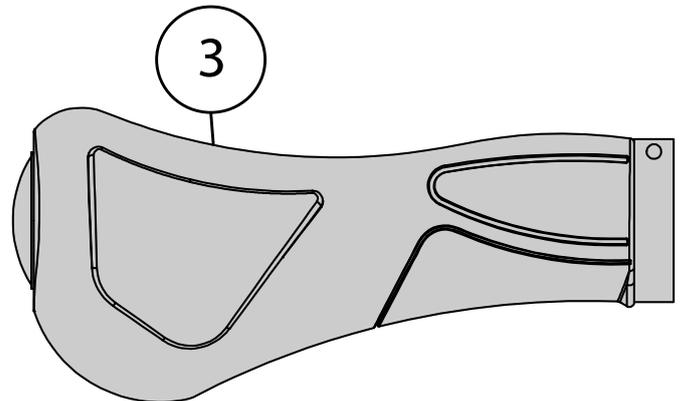
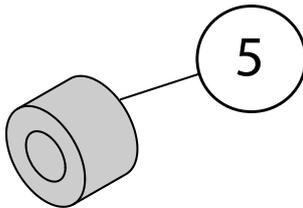
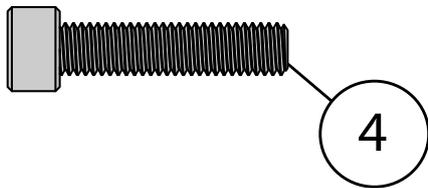


Trail Grip for Tube Doors

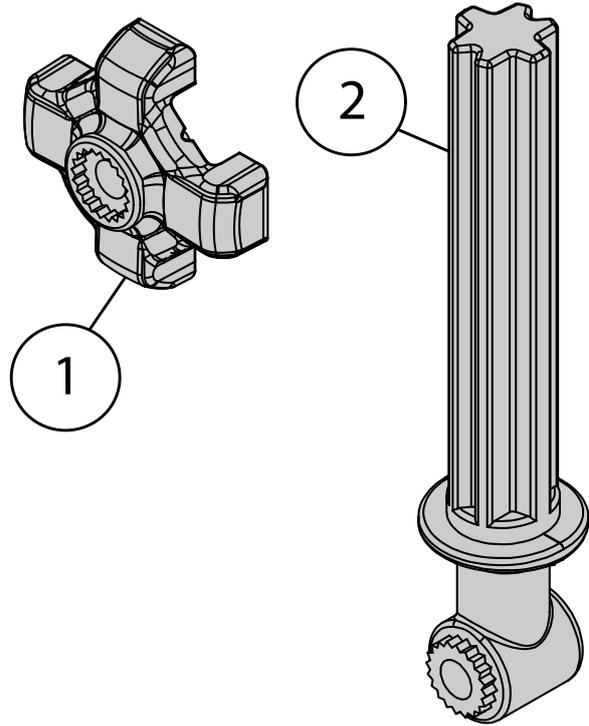

Components

- | | | | |
|---------------|-----|------------|-----|
| 1. Base | (1) | 4. M8 Bolt | (1) |
| 2. Grip Shaft | (1) | 5. Spacer | (4) |
| 3. Grip | (1) | | |

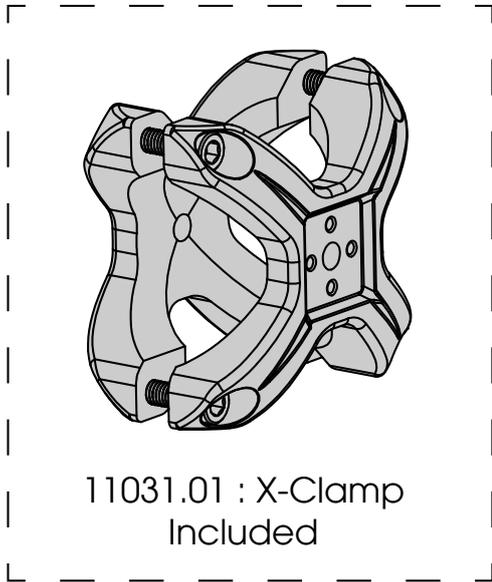

WARNING Always wear seat belt and shoulder harness for all vehicle occupants. Keep arms and body inside vehicle. Drive safely, read and understand all manufacturers warning and product instructions before installation.


OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: webmaster@omixsupport.com


FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com

Trail Grip for Tube Doors

1. Install X-Clamp on tube door.

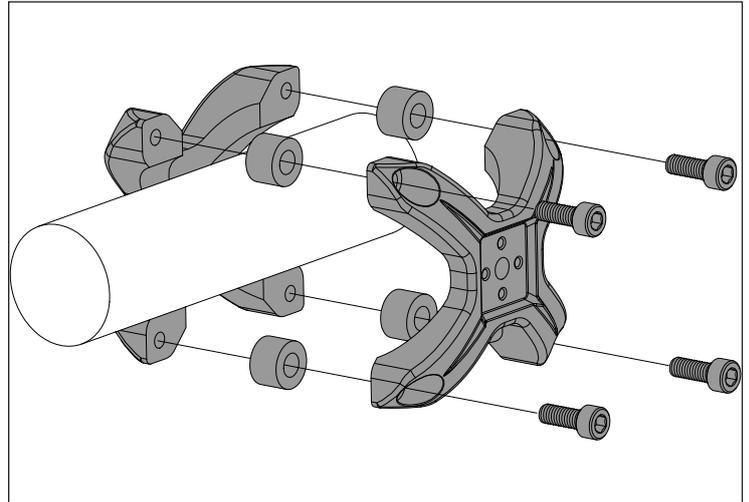

2. Slide Grip onto Grip Shaft. Using supplied M8 Bolt, loosely attach Grip Shaft and Base to X-Clamp.

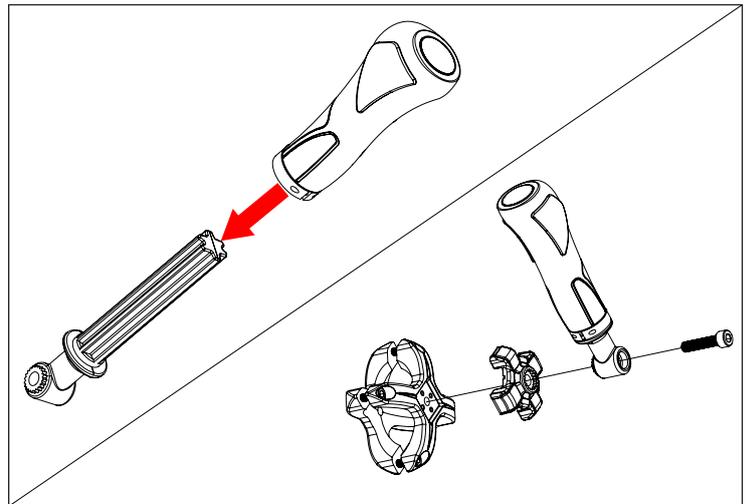

3. Adjust X-Clamp and Grip according to personal preference. Tighten M8-35mm Socket Head bolt to 12ft-lbs. Tighten M6 X-Clamp hardware to 4ft-lbs.

