

Cherokee (XJ) 4.0L 91-01, Grand Cherokee 4.0L 93-98 W/O ABS


This product has met all CARB E.O. requirements and is legal for sale on pollution controlled vehicles operating on public streets and highways. E.O. # D-779

Contents:

- | | |
|------------------------------|-------------------------------|
| 1. Intake Tube (1) | 7. Charcoal Canister Hose (1) |
| 2. Heat Shield (1) | 8. Small Hose Clamps (4) |
| 3. Air Filter (1) | 9. Large Hose Clamps (3) |
| 4. Rubber Hose Elbow (1) | 10. M8 Washers (5) |
| 5. Rubber Isolator Mount (1) | 11. Zip Tie (1) |
| 6. Breather Hose (1) | 12. Air filter emblem (1) |



1. Remove original air intake system including air filter housing, air filter, breather hoses, inlet duct. Do not discard hardware, it will be reused.

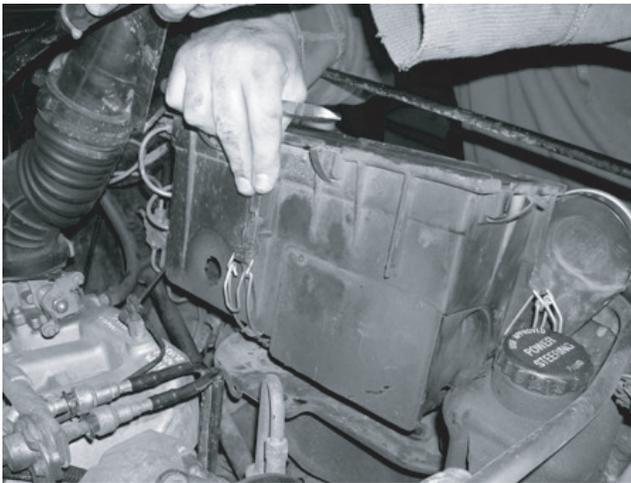

2. Mount the heat shield in place using the original mounting hardware saved in step 1.



Cherokee (XJ) 4.0L 91-01, Grand Cherokee 4.0L 93-98

3. Install the rubber elbow on the throttle body, securing with a large hose clamp. Install the rubber isolater mount on the heat shield.



4. Install small edge trim around the intake tube area. Install the intake tube, securing with a hose clamp.



5. Secure intake tube to the rubber isolater mounted on the heat shield with nut and washer.



Cherokee (XJ) 4.0L 91-01, Grand Cherokee 4.0L 93-98

6. Install one end of the rubber hose on the valve cover vent. Trim to the correct length and install on the intake tube, securing both ends with a small hose clamp.



7. Secure the small vacuum line with a zip tie as shown. Attach the breather hose to the charcoal canister.



8. Install large edge trim as shown. Check for any clearance issues and for proper operation.

