

INSTALLATION INSTRUCTIONS

CUSTOMER SERVICE

Phone: 818-365-9000 • MON - FRI 8:30 am - 6:00 pm EST


Email: SUPPORT@BAKINDUSTRIES.COM

RAM BOX ACCESSORY RAIL SUPPLEMENTAL INSTALL SHEET


⚠ IMPORTANT: READ FIRST ⚠



- 1** Install the 3/4" bulkhead seal to the top of the bulkhead at the edge of the bed opening.

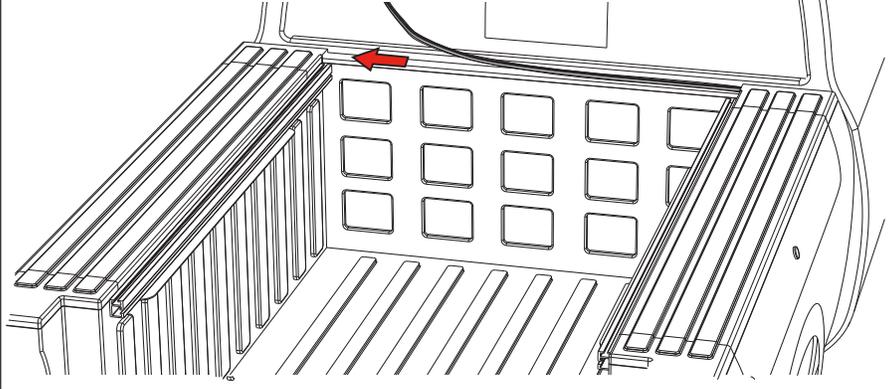


- 2** Remove the factory accessory rail end cap, and any accessory cleats.

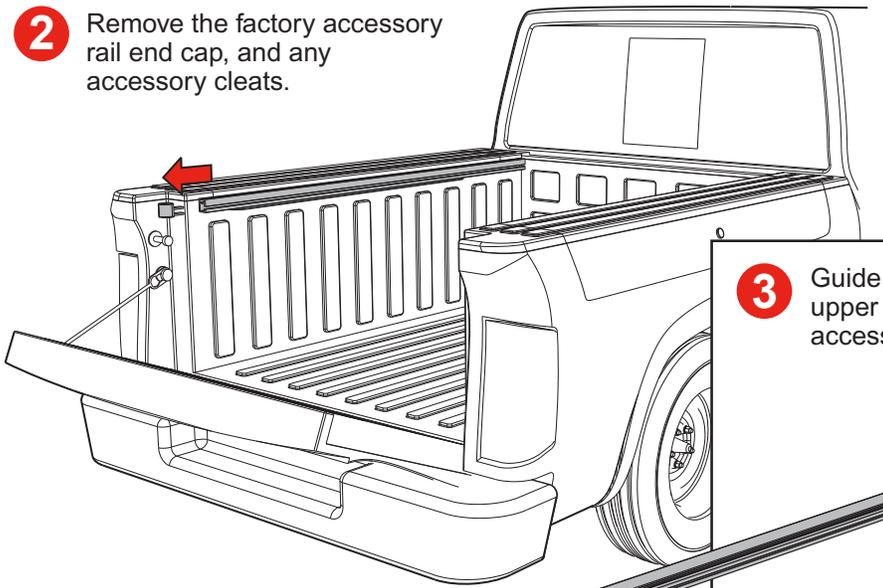


Steps 2 through 6 are required and repeated on both sides.

- 3** Guide the tonneau rail into the upper half of the factory accessory rail

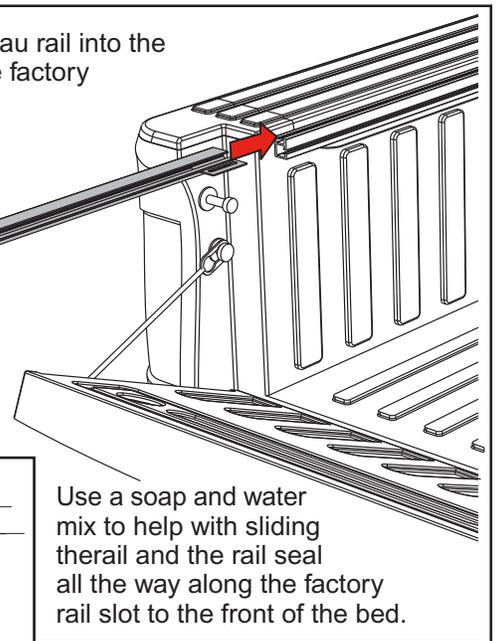


Use a soap and water mix to help with sliding the rail and the rail seal all the way along the factory rail slot to the front of the bed.


The tonneau rail profile is designed to tightly fit the profile of the factory accessory rail.

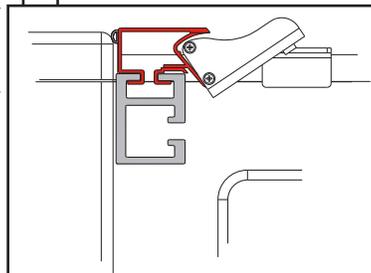


- 4** Make sure the tonneau rail is all the way forward, so that the slotted bracket is touching the bulkhead.

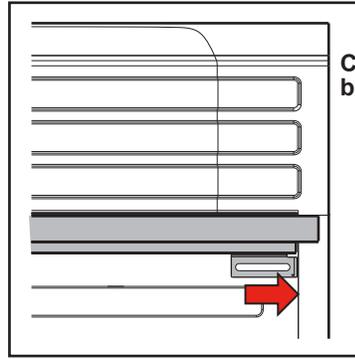



Cab/
bulkhead

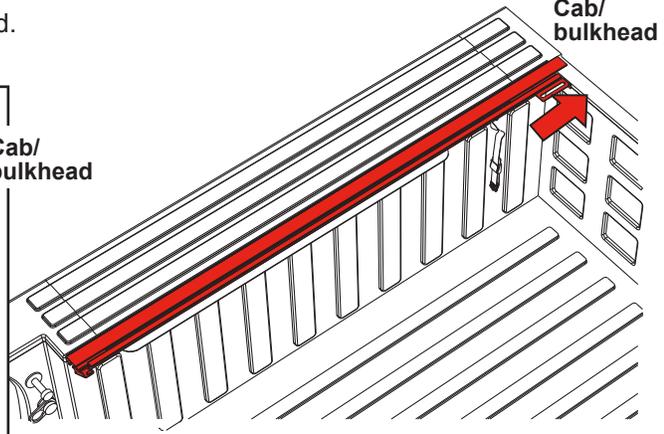


- 5** Slide the strap and buckle into the factory accessory rail.

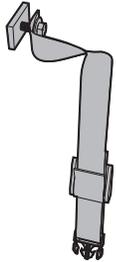


The strap and buckle mounting block slides into the factory accessory rail lower half.

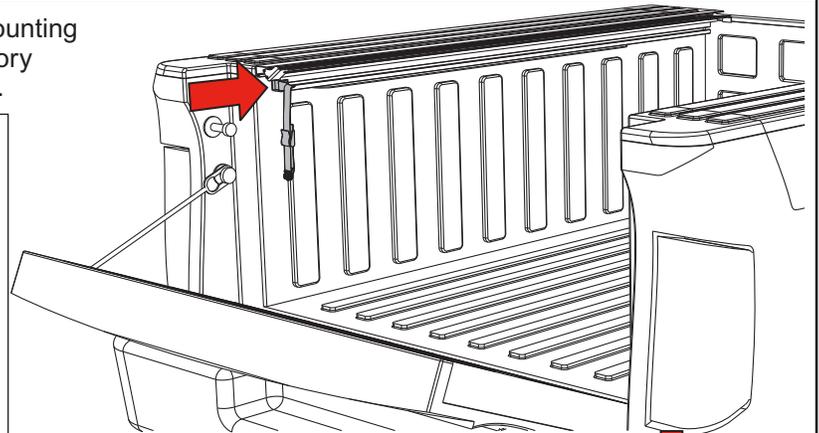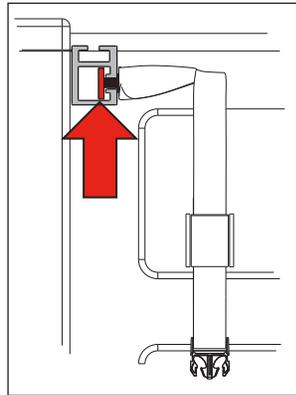

Slide the strap assembly forward towards the cab.

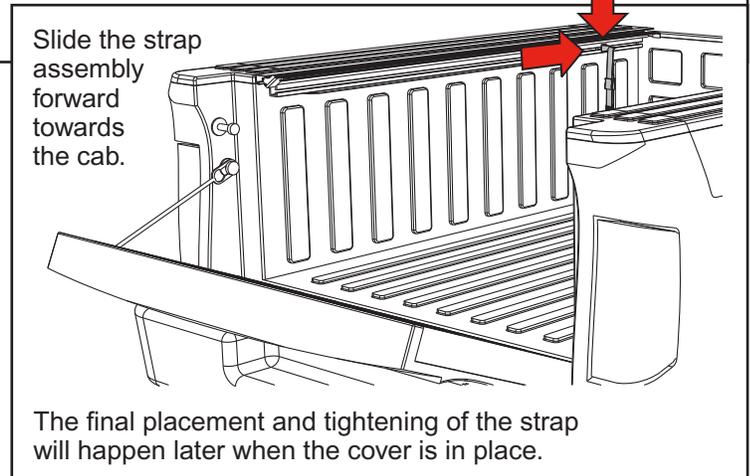

- 6** Replace any removed factory accessory cleats.

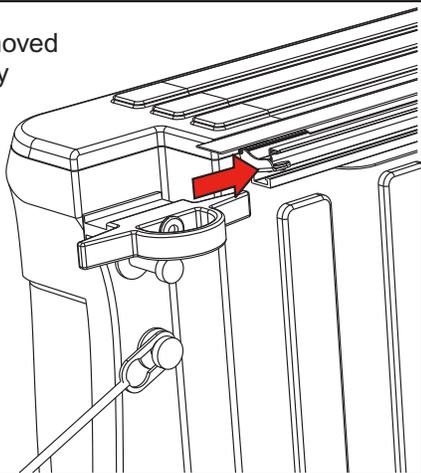

Return to Step 8 of the standard install sheet

