

**CJ-7**  
/ **YJ**

## FRONT KITS: BRCYJ76F

**Jeep Wrangler CJ-7/YJ BedRug  
Interior Installation Instructions**

**BEDRUG**   
PREMIUM LINER FOR JEEP®

*Congratulations on choosing the finest interior flooring kit available for your Jeep. The BedRug material is mold and mildew resistant, easily cleaned with water & household cleaning chemicals and extremely resistant to most chemicals.*

- **Kit Contents:** Driver side front floor, passenger side front floor, rear passenger floor, trans hump piece, side panel right and left, A-pillar right and left, heat shield material, hardware kit, and instruction sheet.
- **Tools needed:** Phillips screwdriver, utility knife, soap, water, and rubbing alcohol.

### PREPARATION

1. Read all instructions before beginning installation.
2. Remove console and old Jeep flooring material (if equipped).
3. Wash and dry the floor pan areas thoroughly.
4. Cut the hook with tape backing, provided in the hardware kit, to the lengths indicated on drawing (page 5). Place the loop onto each location. Do not remove the tape backing at this time.  
(**NOTE:** Cut the longest pieces first.)
5. Pre-install provided heat shields on underside of the three front pieces in areas shown below, using the locator marks. (Fig. 1 thru 3) **NOTE:** See drawing (Page 5) for trans hump shield placement.

**IMPORTANT:** Jeep floor should be at least 68°F (20°C) for maximum adhesion. Clean all areas with rubbing alcohol before applying tape. When removing backing, do not touch adhesive. If both front and rear kits were purchased be sure to install the rear cargo area first. *If the Jeep has any aftermarket accessories or custom parts such as seats brackets or roll bars you may need to trim our product to fit.*



FIGURE 1:

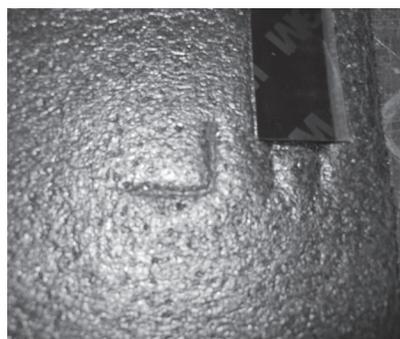


FIGURE 2:



FIGURE 3:



**BEDRUG, INC. ■ 528 Myatt Dr, Madison, TN 37115 ■ 800-462-8435 ■ bedrug.com**

## INSTALLING MIDDLE FLOOR PIECE

- Adjust the front seats to the fully forward and tilted up (passenger entry) position. Next place the rear floor piece into place. (Fig. 4 and Fig. 5)
- Cut slits for seat belts to pass thru underside of floor as shown. If equipped with factory plastic covers, cut holes to accomodate. (Fig. 6 and Fig. 7) **NOTE: Do not bolt seat belt brackets on top of BedRug material, to ensure bolt torque is accurate.**



FIGURE 4:



FIGURE 5:



FIGURE 6:



FIGURE 7:

- Next pull back the floor piece to access the hook fastener. (Fig. 8) Clean surface with alcohol then remove the film backing from both pieces and roll the floor back into place. Firmly press the top surface to ensure adhesive attachment, repeat as necessary until all pieces are attached.



FIGURE 8:



FIGURE 9:

## INSTALLING FRONT FLOOR PIECES

- Adjust the front seats to the rear most position to allow maximum clearance for installation.  
Place front floor pieces into place. (Fig. 10)
- Once properly aligned, pull back part to access the hook fastener (Fig. 11). Clean surface with alcohol then remove the film backing and roll the part back into place. Firmly press the top surface to ensure adhesive attachment. Repeat for other front floor piece.

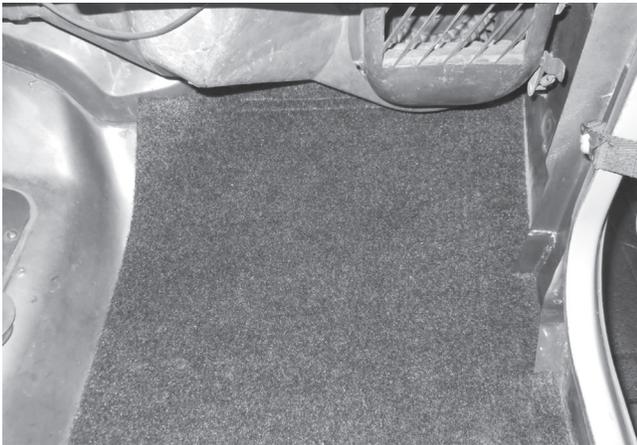


FIGURE 10:



FIGURE 11:

- Next install the trans hump piece. Remove rubber shifter boots and cut slits to fit piece over floor shifters as shown. (Fig. 12) Once surface is clean, start on one side and remove film backing and fit into place ensuring that the trans hump piece fits against the floor piece without a gap. (Fig. 13) Then repeat for other side.



FIGURE 12:



FIGURE 13:

## INSTALLING FRONT FLOOR PIECES

12. Clean the side panel surfaces with alcohol, then remove film backing and install pieces as shown. (Fig. 14 -17) Repeat for opposite side. Rocker panel pieces should be trimmed at proper score lines. See drawing Page 5.



FIGURE 14:



FIGURE 15:



FIGURE 16:

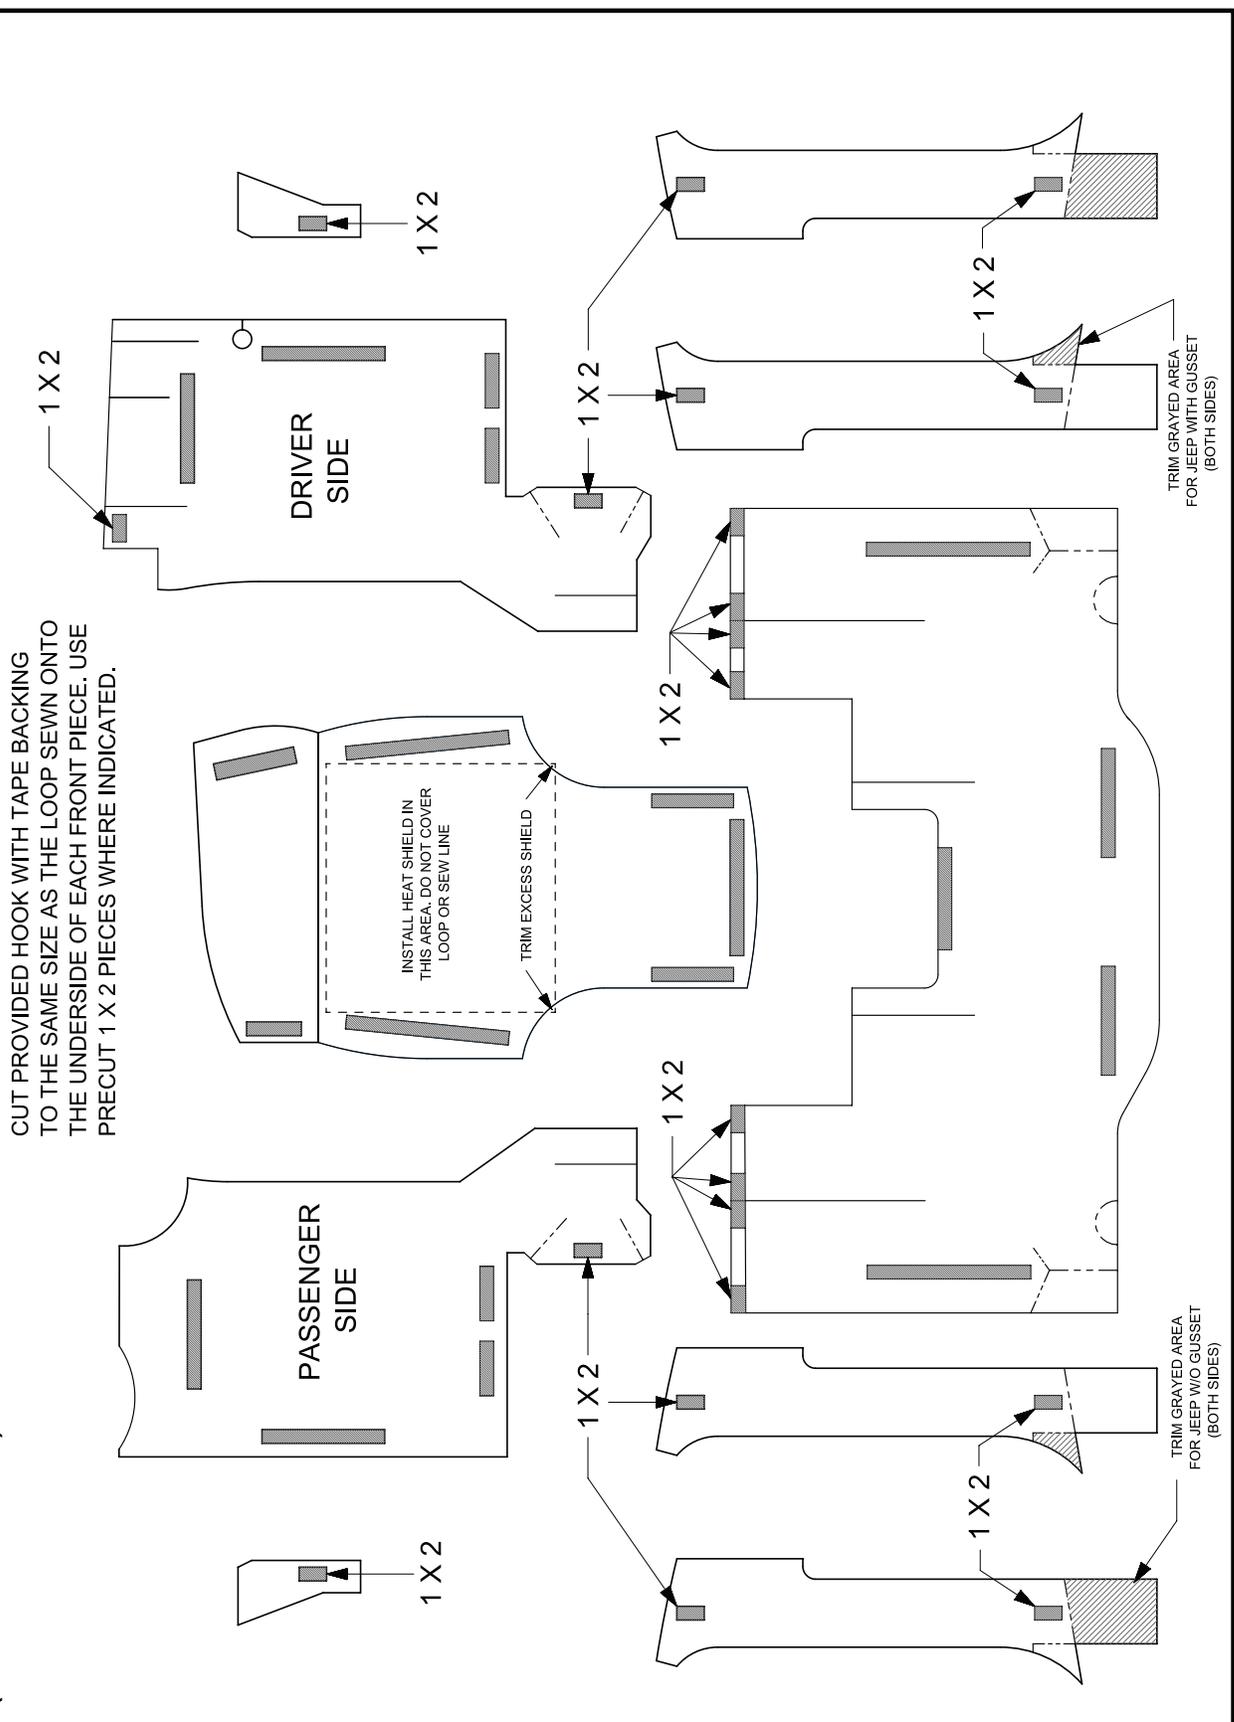


FIGURE 17:



### COMPLETED INSTALLATION

**BOTTOM VIEW (FOAM SIDE)**  
**BRCYJ76F HOOK INSTALLATION**



## **WARNING**

The use of front floor mats is not recommended with BedRug or BedTred floor kits. If floor mats are used, it is imperative to re-use the removable retention hooks from the factory carpet, installed to the manufacturer's specifications. Do not use floor mats or liners with BedTred Kits. Do not use floor mats or liners with BedRug Kits without retention hooks.

**\*\*Please retain these instructions for future reference in your vehicle's glove box\*\***

## **BEDRUG<sup>®</sup> BEDTRED<sup>™</sup> CLEANING INFORMATION**

The mildew resistant BedRug/BedTred foam will not absorb liquids. The engineered composite surface resists stains and deterioration from most acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug/BedTred will remain serviceable for as long as you own your vehicle.

### **Cleaning your BedRug is easy:**

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the product, pressure washing is also an effective way to clean a soiled BedRug/BedTred.
2. Although most acids will not harm the BedRug/BedTred, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the vehicle.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug/BedTred use detergent soap with degreaser and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The polypropylene closed-cell foam will not absorb water and the composite surface dries in minutes.

If you have additional questions, call BedRug Inc. customer service at 800-462-8435.

## **LIMITED WARRANTY**

BedRug Inc. warrants BedRug and BedTred products for Jeep vehicles for three years from the original date of purchase. Warranty is limited to the original purchaser and is not transferable. Product is warranted to be free from defects in materials and workmanship. The warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper service/installation/removal, modifications, acts of God, normal wear and tear, or other causes not arising out of defective materials or workmanship. Consequential and incidental damages are not covered under this warranty. Warranty does not cover labor, the cost of shipping, or cost of returning the product for warranty service or inspection. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Product should be cleaned before return. A return authorization number must be obtained prior to returning any product. For warranty instructions, returns, and packaging contact BedRug Inc. Customer Service at 800-462-8435.

## **PRODUCT REGISTRATION**

Thank you for purchasing your BedRug product! We would appreciate it if you would take a few minutes to register your purchase. Registration allows us to provide, with your permission, important updates, service information, helpful hints or warranty service should you ever require technical support. BedRug offers the option of returning product registration forms electronically, rather than having to fill them out by hand. You can be assured that BedRug does not share or sell the information you provide. Save a copy of your sales receipt. Activate your warranty by registering your product online at <http://www.bedrug.com/customer-service/product-registration.html> or by scanning the QR code. You will need the 6-digit lot and date code found on the underside of the tailgate, see label example below.

